


## ASSEMBLY INSTRUCTIONS

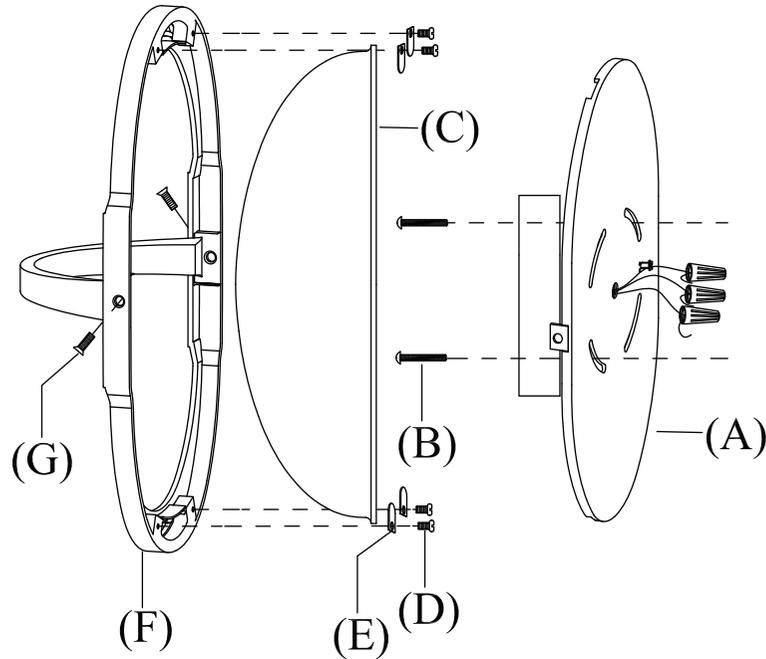

## Westbury Double Sconce

Item # RL 2162

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove shade cover (F) from fixture base (A) by unscrewing base screws (G).
3. Remove metal tabs (E) and bolts (D) from shade cover (F), join shade (C) and shade cover (F) together, aligning the holes and secure with metal tabs (E) and bolts (D).
4. Place fixture base (A) to wall outlet box and secure with mounting screws (B) provided.
5. Attach ground (green) wire to ground wire from wall outlet box (usually green or copper in color), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed.

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

6. Connect neutral (white) fixture wire coming from fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
7. Repeat the procedure with the hot (black) wires. Always make sure that no wire strands are left outside the connectors.  
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
8. Insert light bulbs (not included) into the sockets.
9. Attach shade cover (F) to fixture base (A), aligning the holes and secure base screws (G).

**Care Instructions:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

# RALPH LAUREN

