


ASSEMBLY INSTRUCTIONS

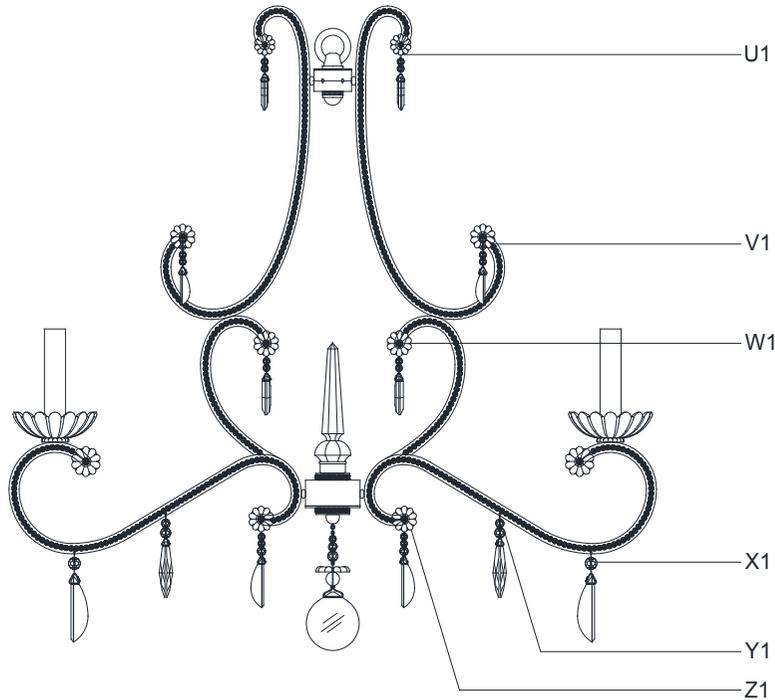

 (U)6PCS	 (V)12PCS	 (W)6PCS
 (X)6PCS	 (Y)6PCS	 (Z)6PCS

Montmartre Medium Chandelier

Item # ARN 5129

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

13. Connect the fixture Neutral wire (ribbed, no markings) with the neutral wire from the outlet box using wire nut (A).
14. Connect the fixture Hot (smooth edge, markings) wire with the hot wire from the outlet box using wire nut (A).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
15. Tuck these wire connections neatly into the outlet box to secure.
16. Put canopy (D) to ceiling loop (C), and secure with lock collar (E).
17. Thread the crystal column (J) to the fixture body (K).
18. Thread the crystal drop (L) to the fixture body (K).
19. Put the crystal disk (I) onto the fixture body (K).
20. Hang the crystal drops (U) to the hook (U1).
21. Hang the crystal drops (V) to the hook (V1).
22. Hang the crystal drops (W) to the hook (W1).
23. Hang the crystal drops (X) to the hook (X1).
24. Hang the crystal drops (Y) to the hook (Y1).
25. Hang the crystal drops (Z) to the hook (Z1).
26. Insert bulbs (not included) into the sockets.
27. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.