

ASSEMBLY INSTRUCTIONS

Pondview Ceiling Light

Item # ARN 5200

NOTICE:


This light fixture should be installed in accordance with all applicable, Local installation codes, and by a person familiar with the construction And operation of it, as well as the hazards involved. Inspect item and Contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Chain Pliers
Slip Joint Pliers	Measuring Tape	Wire Cutters
Wire Strippers		

- Carefully remove all parts from the box. Place on a clean, soft surface.
- Remove canopy (E) from collar loop (D) by removing collar ring (F).
- Install mounting plate (B) to junction box and securing with mounting screws (C).
- Secure collar loop (D) to mounting plate (B) using pliers to tighten locknut.
- Install canopy (E) to collar loop (D) by securing with collar ring (F).
- Determine desired overall length, and amount of chain (Q) needed. shorten chain using chain pliers. (Keep extra chain)
- Attach chain (Q) to collar loop (D) and to fixture loop (H) using quick links (G).
- Thread fixture wire and ground wire through chain (Q).
NOTE: When you reach the collar loop (D), ensure there is no tension on the wires. Cut excess wires, being sure to leave about 12" to reach the junction box.
- Separate two sides of molded wire, and strip insulation on each 5/8".
- Loosen collar ring (F) and let canopy (E) slip down chain (Q) carefully.
- Twist all fixture wires together. Slip through center hole of collar loop (D).


NOTE: Untwist wires and separate to prepare for connection.

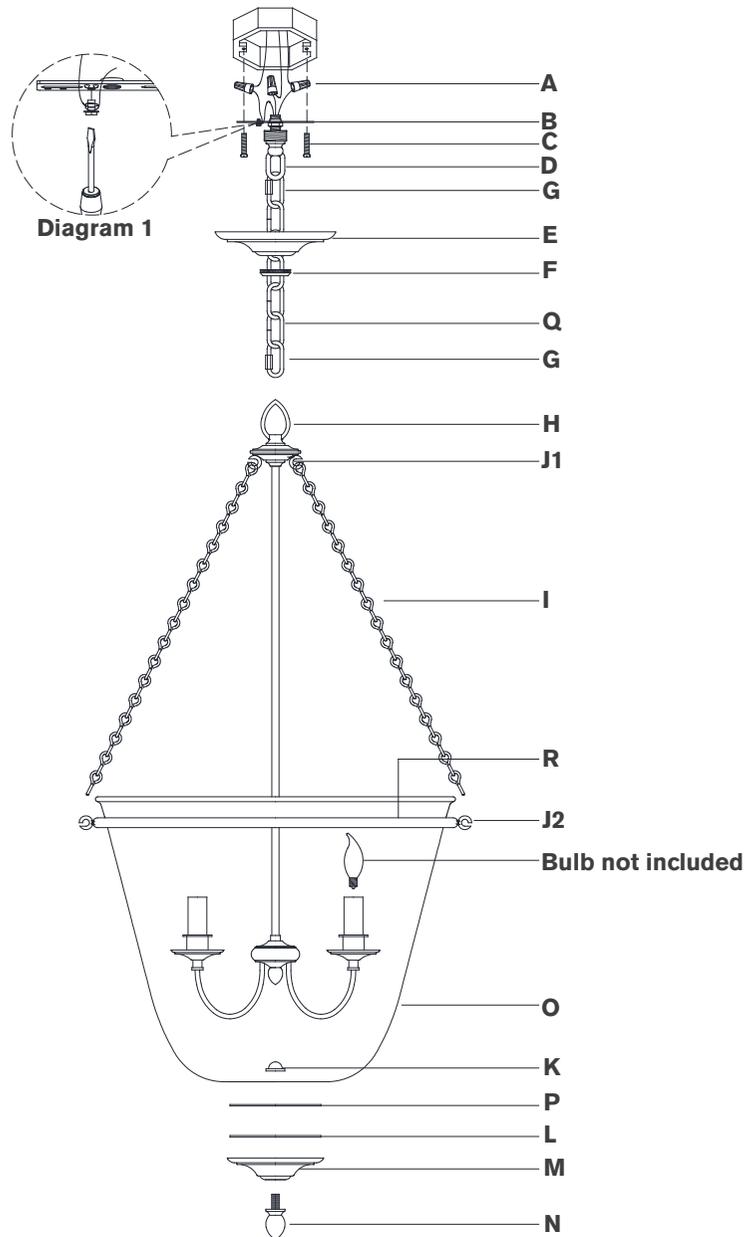

VISUAL COMFORT



ASSEMBLY INSTRUCTIONS

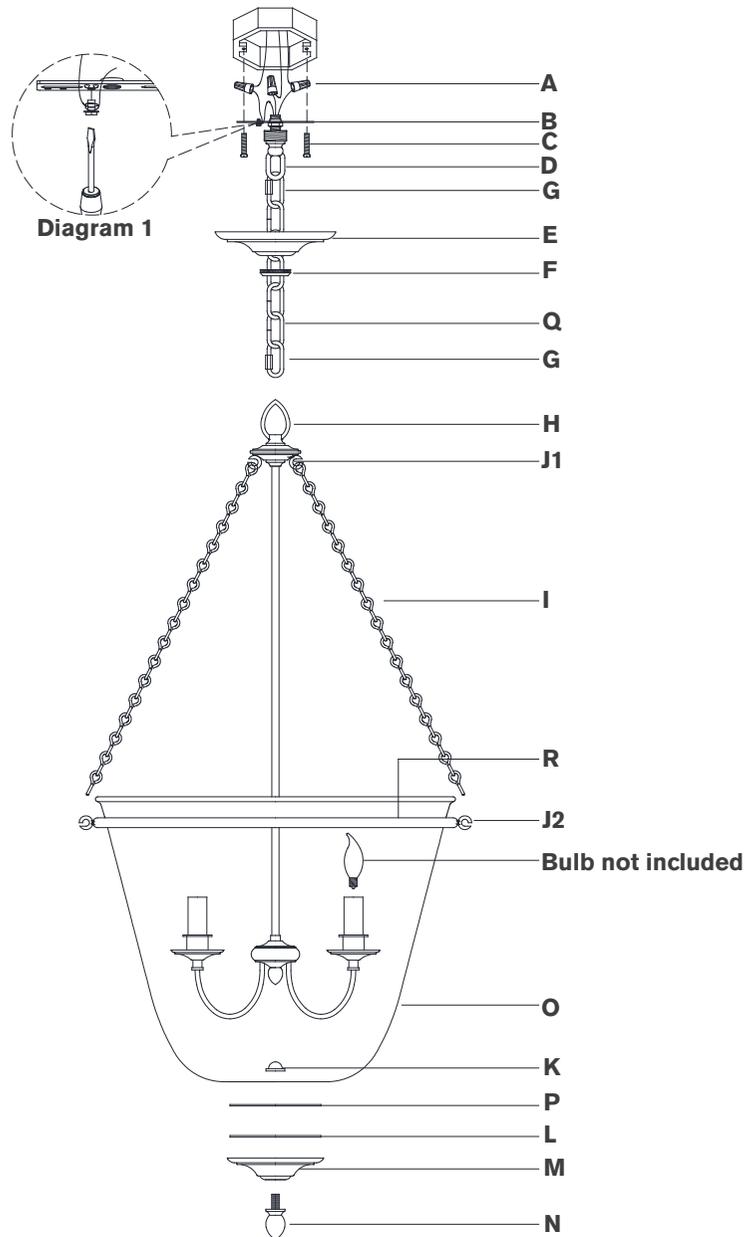

Pondview Ceiling Light

Item # ARN 5200

NOTICE:

This light fixture should be installed in accordance with all applicable, Local installation codes, and by a person familiar with the construction And operation of it, as well as the hazards involved. Inspect item and Contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

12. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.
NOTE: It is imperative that the fixture is grounded.
13. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(A)**.
14. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(A)**.
CAUTION: Do not reverse the hot and neutral connections.
15. Make sure all wire connections are tight, then carefully tuck into the junction box.
16. Install canopy **(E)** to collar loop **(D)** by securing with collar ring **(F)**.
17. Attach plastic washer **(P)**, metal plate **(L)** and metal disk **(M)** to the bottom of glass shade **(O)** and secure with nut **(K)** and finial **(N)**.
18. Let glass shade **(O)** pass through metal ring **(R)**.
NOTE: It is recommended to have a helper assist in supporting the fixture for step 19.
19. Attach chains **(I)** to hooks on metal ring **(R)**. With helper supporting metal ring **(R)**, hang chains **(I)** to hooks on the bottom of fixture loop **(H)**.
20. Install light bulbs into the sockets.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do Not use abrasive or chemical agents.

VISUAL COMFORT

