

ASSEMBLY INSTRUCTIONS

Rousseau Oversized Eight Light Articulating Chandelier

Item #KW 5595

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver

Slotted Screwdriver

Wire Cutters


Slip Joint Pliers

Wire Strippers

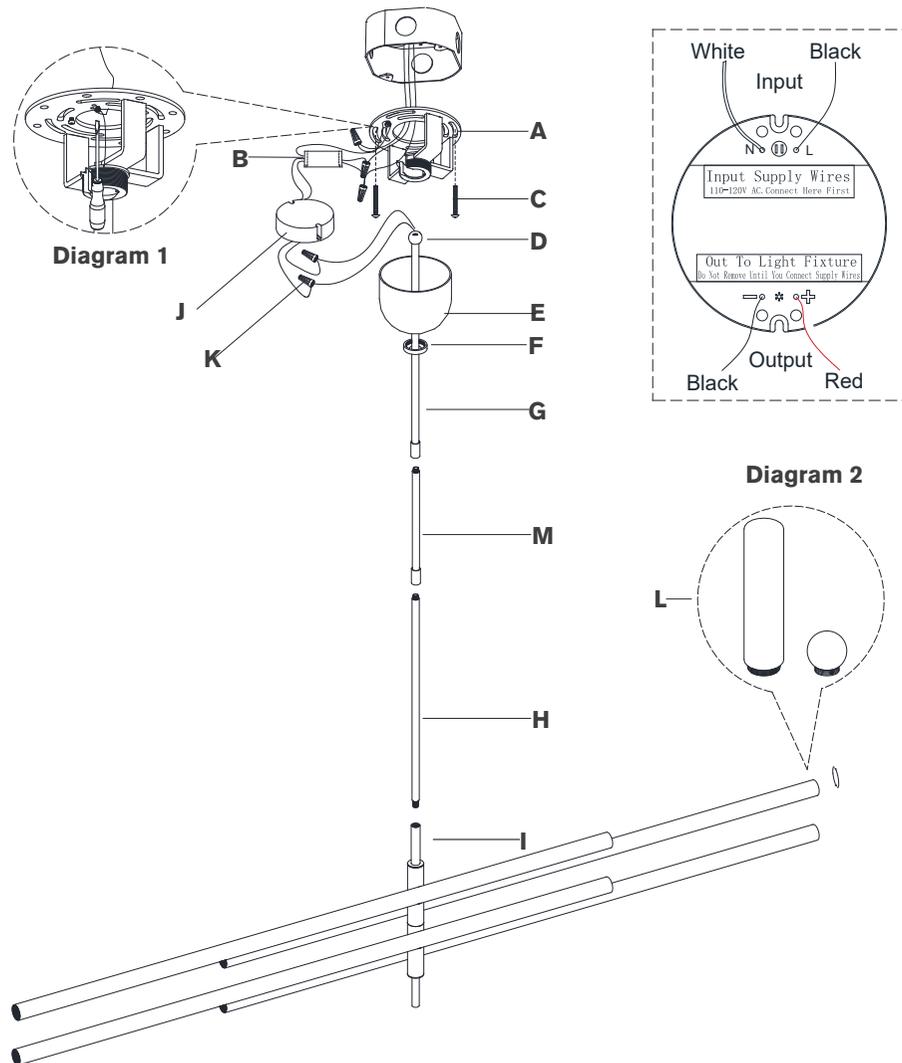

- Carefully remove all parts from the box. Place on a clean, soft surface.
- Remove mounting plate **(A)** from canopy **(E)** by removing collar ring **(F)**.
- Install mounting plate **(A)** to junction box and secure with mounting screws **(C)**.
- Feed electrical wires through bottom rod **(H)** and connect to fixture **(I)**. Repeat for middle rod **(M)**, connecting to bottom rod **(H)**.
- Continue feeding wires through collar ring **(F)**, canopy **(E)** and top rod **(G)**.
- Holding fixture upright, slide collar ring **(F)** and canopy **(E)** down and rest on fixture **(I)**. Then connect top rod **(G)** to middle rod **(M)**.
NOTE: Slide components down slowly to avoid damages.
- Hang fixture swivel ball **(D)** to the center of mounting plate **(A)**.
- Cut excess wires, being sure to leave enough to reach the junction box. Separate wires, and strip insulation on each 5/8".
- Connect fixture neutral wire (black) to the driver output neutral wire (black) using wire nut **(K)**.
- Connect fixture hot wire (red) to the driver output hot wire (red) using wire nut **(K)**.

ASSEMBLY INSTRUCTIONS

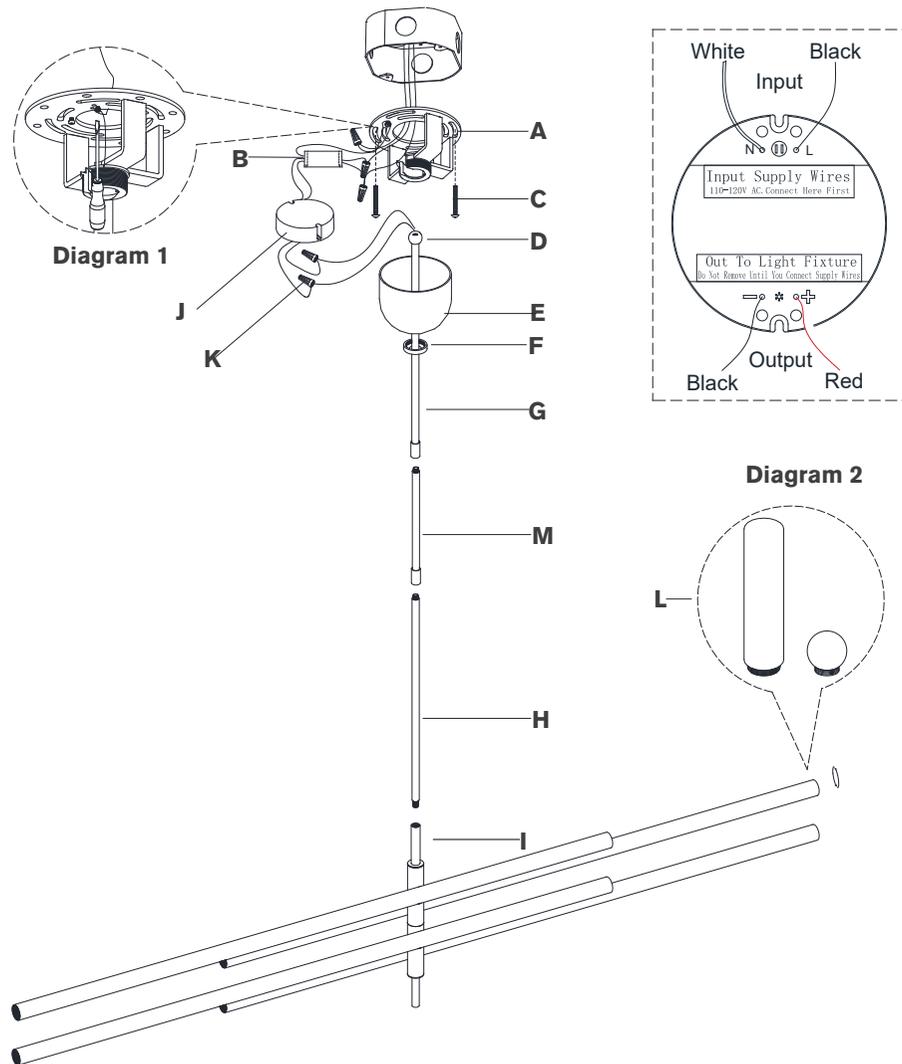

Rousseau Oversized Eight Light Articulating Chandelier

Item #KW 5595

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

11. Wrap filter **(B)** ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue filter **(B)** ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(K)**.

NOTE: It is imperative that the fixture is grounded.

12. Connect filter **(B)** neutral wire (white) to the supply neutral wire (usually white) using wire nut **(K)**.
13. Connect filter **(B)** hot wire (black) to the supply hot wire (usually black) using wire nut **(K)**.
- CAUTION:** Do not reverse the hot and neutral connections.
14. Make sure all wire connections are tight, then carefully tuck into the junction box.
15. Insert driver **(J)** and filter **(B)** into mounting plate bracket.
16. Install canopy **(E)** to mounting plate **(A)** by securing with collar ring **(F)**.
17. Thread shades **(L)** to fixture body **(I)**. See diagram 2.

NOTE: Do not over-tighten otherwise shade could become damaged.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agent.