


ASSEMBLY INSTRUCTIONS

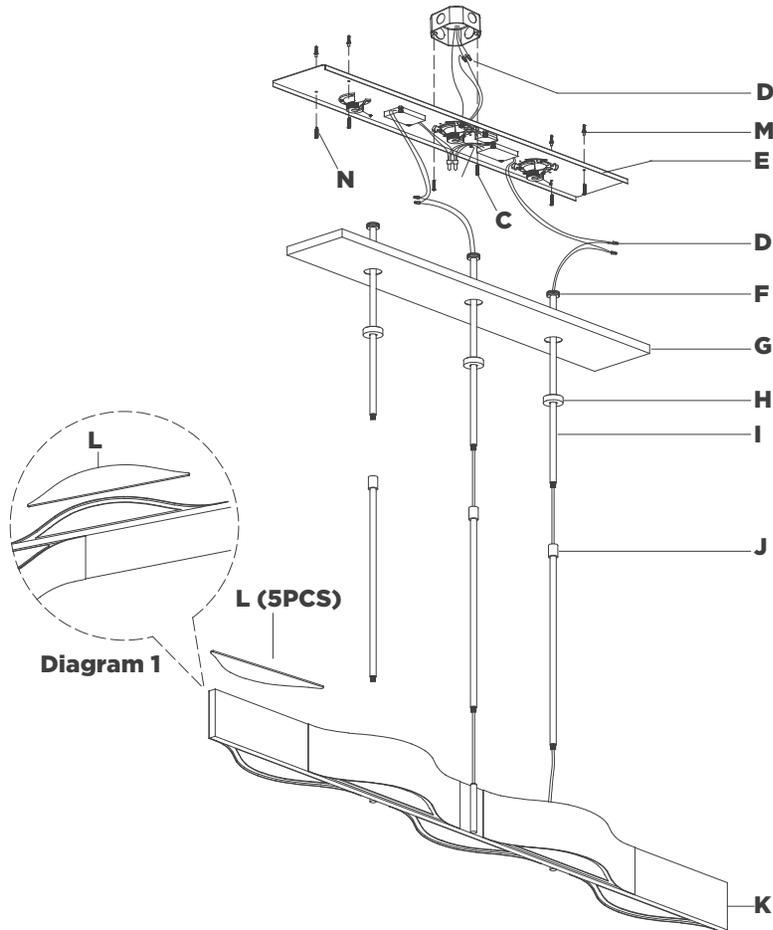

Avant 60" Linear Pendant

Item # KW5524

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Wire Cutters	Hammer	Pencil
Drill		

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(E)** from canopy **(G)** by removing collar rings **(H)**.
3. Using mounting plate **(E)** as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(M)** into the holes using a hammer.
5. Install mounting plate **(E)** to the junction box and secure with mounting screws **(C)**, then secure wood screws **(N)** to anchors **(M)**.
6. Place glass sheets **(L)** to fixture **(K)** (see diagram 1).
7. Feed electrical wires through bottom rods **(J)** and connect to fixture **(K)**.
8. Continue feeding wires through collar rings **(H)**, canopy **(G)** and top rods **(I)**.
9. Holding fixture upright, slide collar rings **(H)** and canopy **(G)** down and rest on fixture **(K)**. Then connect top rods **(I)** to bottom rods **(J)**.

NOTE: Slide components down slowly to avoid damage.


ASSEMBLY INSTRUCTIONS

Avant 60" Linear Pendant

Item # KW5524

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

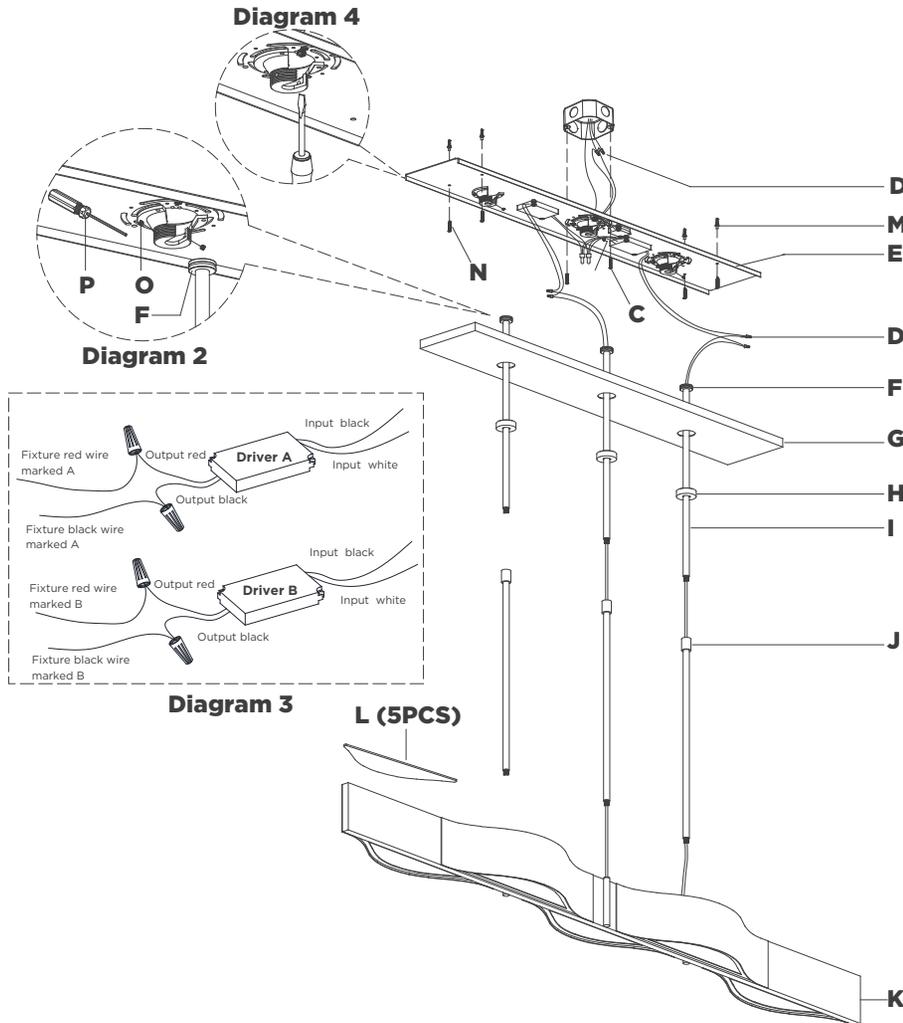

10. Hang fixture fan mounts **(F)** to center of mounting plate **(E)** and secure with set screws **(O)** using provided wrench **(P)** (see diagram 2).
11. Connect fixture neutral wires (black) to the driver output neutral wires (black) using wire nut **(D)**.
12. Connect fixture hot wires (red) to the driver output hot wires (red) using wire nut **(D)**.
NOTE: Power is supplied by two drivers. Make sure to connect fixture wires **(A)** to driver wires **(A)**. Repeat steps for driver **(B)** (see diagram 3).
13. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 4). Tighten.
NOTE: It is imperative that the fixture is grounded.
14. Connect fliter input neutral wires (white) to the supply neutral wire (usually white) using wire nut **(D)**.
15. Connect fliter input hot wires (black) to the supply hot wire (usually black) using wire nut **(D)**.
CAUTION: Do not reverse the hot and neutral connections.
16. Make sure all wire connections are tight, then carefully tuck into the junction box.
17. Install canopy **(G)** to mounting plate **(E)** and secure with collar rings **(H)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.