


## ASSEMBLY INSTRUCTIONS

### Option 1: Curved 2-Canopy Install\_Canopy Mounted Driver

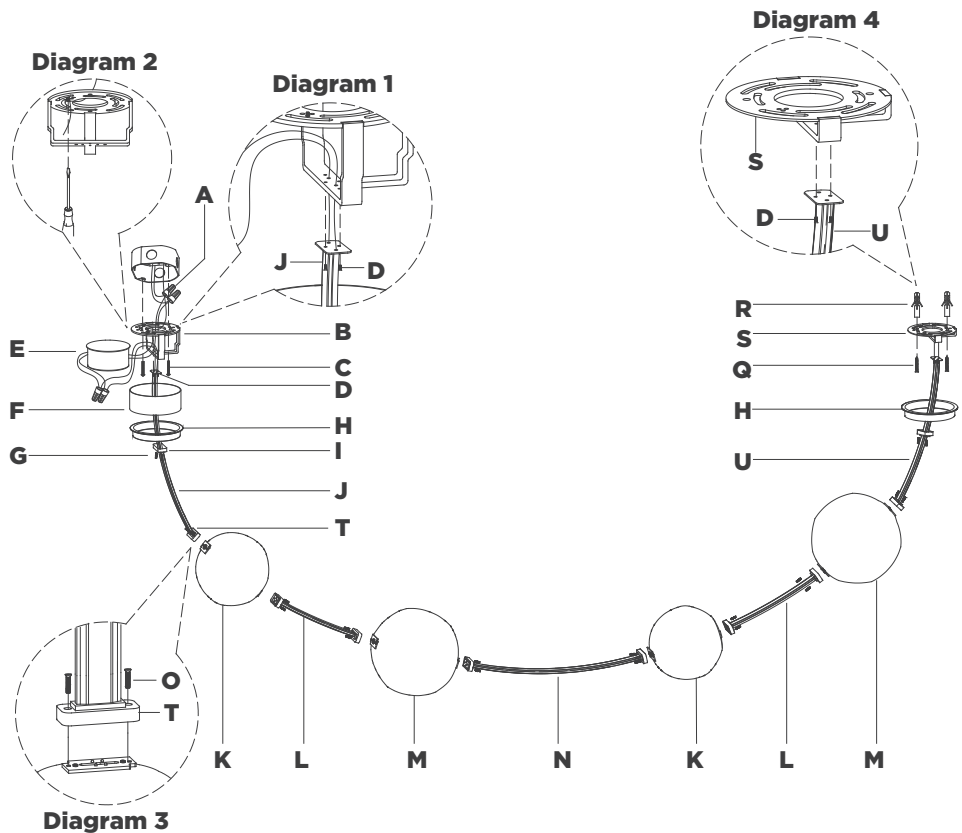

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

### PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove caps **(I)**, canopies **(H)** and driver housing **(F)** from mounting plate **(B & S)** by removing screws **(G)**.  
**NOTE:** Carefully measure distance between mounting points for mounting plates **(B & S)** before moving to the next step.
3. Using mounting plate **(S)** as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(R)** into the holes using a hammer.
5. Install mounting plate **(B)** to the junction box and secure with mounting screws **(C)**.
6. Install mounting plate **(S)** to ceiling by securing wood screws **(Q)** to anchors **(R)**.
7. Feed tape **(J)** through cap **(I)**, canopy **(H)** and driver housing **(F)**.

## ASSEMBLY INSTRUCTIONS

### Option 1: Curved 2-Canopy Install\_Canopy Mounted Driver

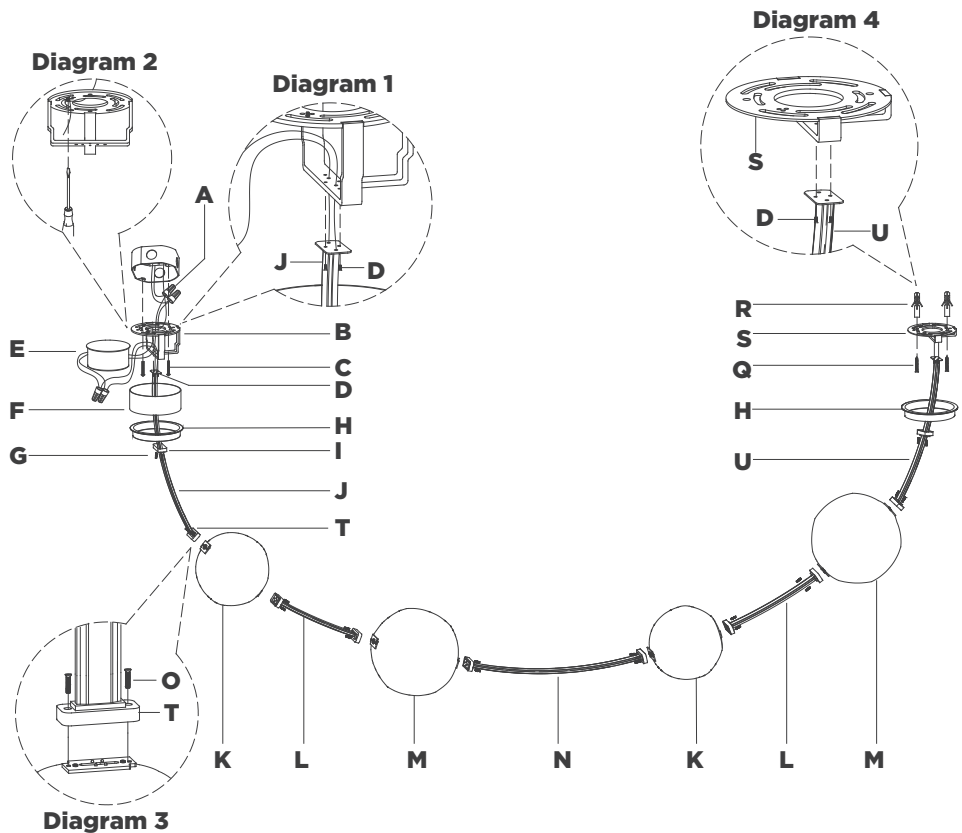

## Dune 58" Belted Light

Item # AMB5050


### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

8. Holding tape **(J)** upright, slide cap **(I)**, canopy **(H)** and driver housing **(F)** down and rest on cap **(T)**.  
**NOTE:** Slide components down slowly to avoid damage.
9. Feed fixture wires through holes on mounting plate **(B)** bracket, then install tape **(J)** to mounting plate **(B)** bracket and secure with screws **(D)** (see diagram 1).
10. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
11. Connect fixture neutral wire (black) to driver **(E)** output wire (black) using wire nut **(A)**.
12. Connect fixture hot wire (red) to driver **(E)** output wire (red) using wire nut **(A)**.
13. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 2). Tighten.  
**NOTE:** It is imperative that the fixture is grounded.
14. Connect driver **(E)** input neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
15. Connect driver **(E)** input hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.  
**CAUTION:** Do not reverse the hot and neutral connections.
16. Make sure all wire connections are tight, then carefully tuck into the junction box.

## ASSEMBLY INSTRUCTIONS

### Option 1: Curved 2-Canopy Install\_Canopy Mounted Driver

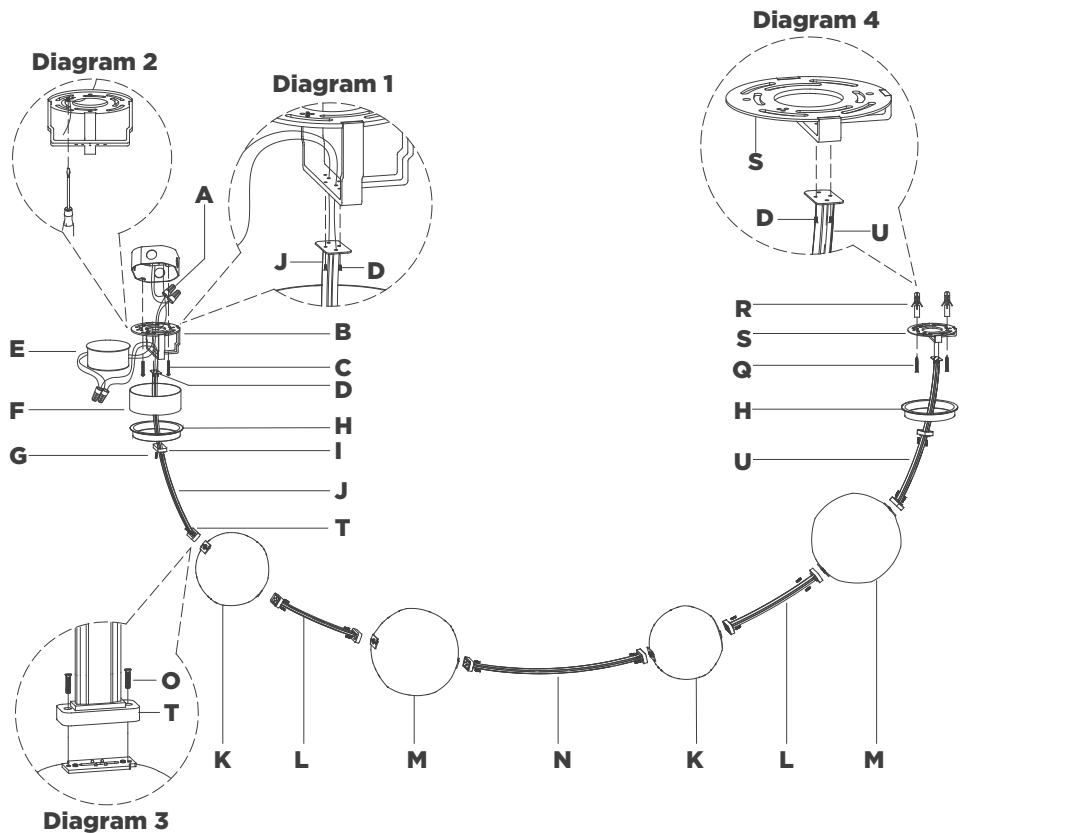

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

17. Insert driver **(E)** into the middle of mounting plate **(B)** bracket.
18. Install driver housing **(F)** and canopy **(H)** to mounting plate **(B)** and secure with cap **(I)** using screws **(G)**.  
**NOTE:** It is recommended to have a helper assist in supporting the fixture for steps 19-22.
19. Install shade **(K)** to cap **(T)** and secure with screws **(O)** (see diagram 3).  
**NOTE:** All light source must be installed before testing or restoring power.
20. Install tape **(L)** to shade **(K)** and secure with screws **(O)**.
21. Repeat above steps, install shade **(M & K & M)** and tape **(N & L & U)** as show on diagram.
22. Feed tape **(U)** through cap **(I)** and canopy **(H)**, then install tape **(U)** to mounting plate **(S)** and secure with screws **(D)** (see diagram 4).
23. Install canopy **(H)** to mounting plate **(S)** and secure with cap **(I)** using screws **(G)**.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

## ASSEMBLY INSTRUCTIONS

### Option 2: Curved 2-Canopy\_Ceiling Mounted Driver

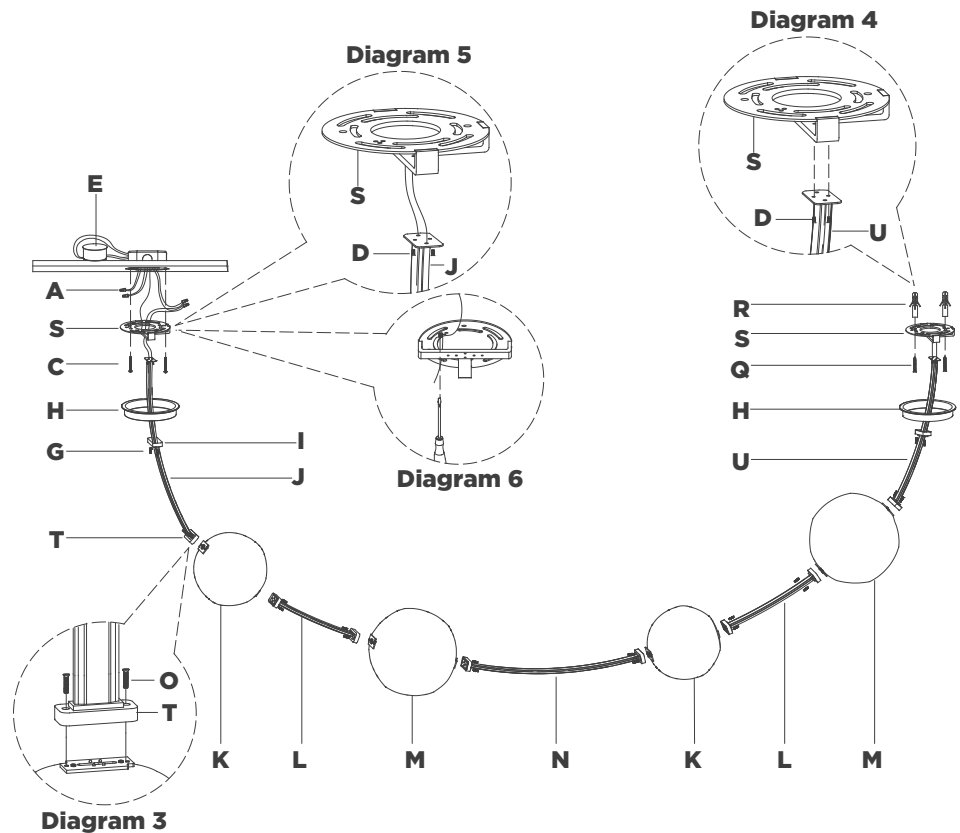

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

### PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Place driver (E) into ceiling and route all wires through one of the knockouts in the junction box.
3. Remove caps (I), canopies (H) and driver housing (F) from mounting plate (B & S) by removing screws (G).  
**NOTE:** Driver housing (F) will not be used for ceiling mounted assembly. Keep part and store for future use.  
**NOTE:** Carefully measure distance between mounting points for mounting plates (S) before moving to the next step.
4. Using mounting plate (S) as a guide, line up with the junction box and mark anchor positions.
5. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (R) into the holes using a hammer.
6. Install mounting plate (S) to the junction box and secure with mounting screws (C).
7. Install other mounting plate (S) to ceiling by securing wood screws (Q) to anchors (R).

## ASSEMBLY INSTRUCTIONS

### Option 2: Curved 2-Canopy\_Ceiling Mounted Driver

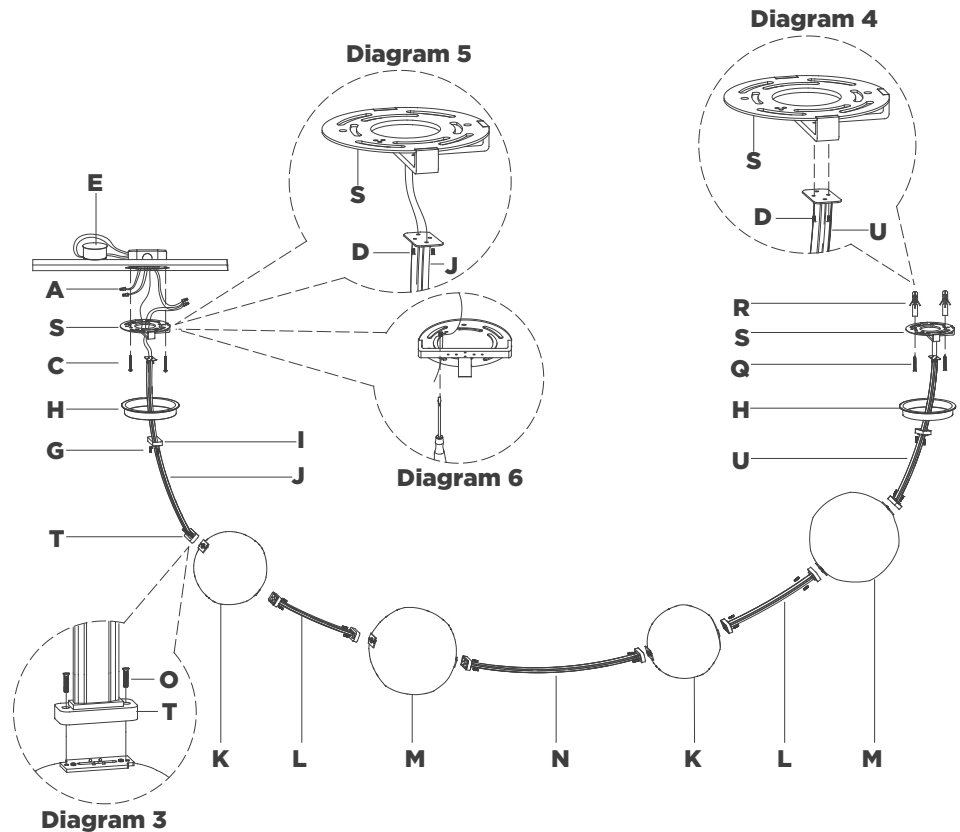

## Dune 58" Belted Light

Item # AMB5050


### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

8. Feed tape (J) through cap (I) and canopy (H), then holding tape (J) upright, slide cap (I) and canopy (H) down and rest on cap (T).
- NOTE:** Slide components down slowly to avoid damage.
9. Feed fixture wires through holes on mounting plate (S) bracket, then install tape (J) to mounting plate (S) bracket and secure with screws (D) (see diagram 5).
10. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
11. Connect fixture neutral wire (black) to driver (E) output wire (black) using wire nut (A).
12. Connect fixture hot wire (red) to driver (E) output wire (red) using wire nut (A).
13. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 6). Tighten.
- NOTE:** It is imperative that the fixture is grounded.
14. Connect driver (E) input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
15. Connect driver (E) input hot wire (black) to the supply hot wire (usually black) using wire nut (A).
- CAUTION:** Do not reverse the hot and neutral connections.
16. Make sure all wire connections are tight, then carefully tuck into the junction box.

## ASSEMBLY INSTRUCTIONS

### Option 2: Curved 2-Canopy\_Ceiling Mounted Driver

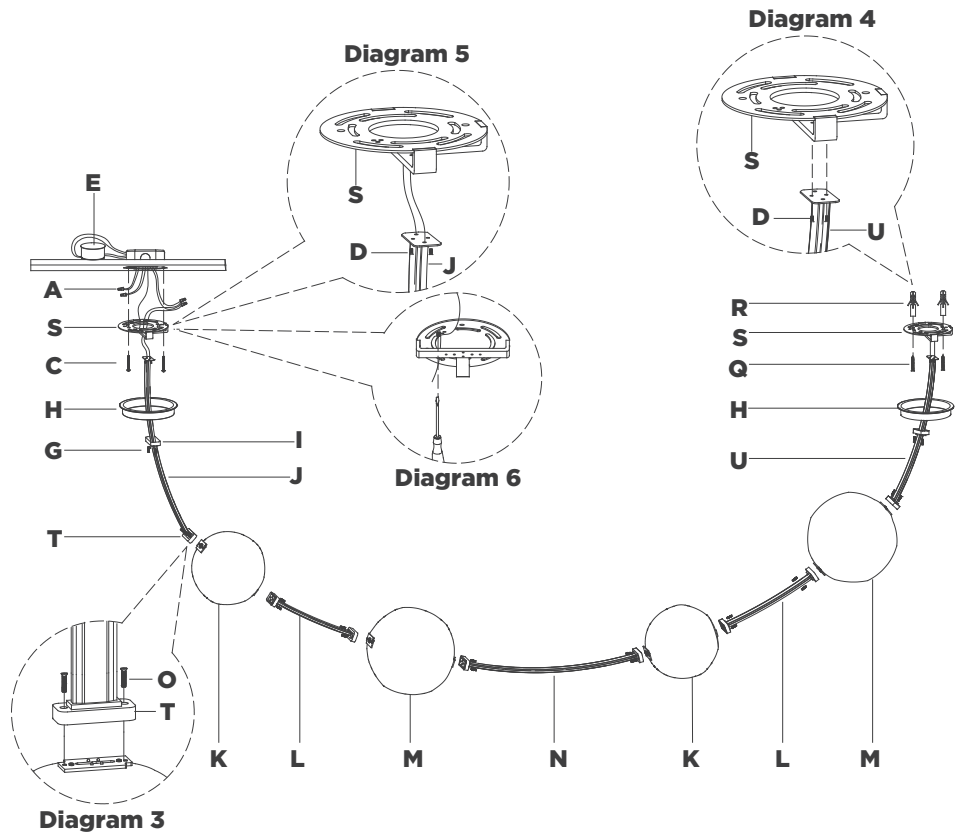

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

17. Install canopy (H) to mounting plate (S) and secure with cap (I) using screws (G).

**NOTE:** It is recommended to have a helper assist in supporting the fixture for steps 18-21.

18. Install shade (K) to cap (T) and secure with screws (O) (see diagram 3).


**NOTE:** All light source must be installed before testing or restoring power.

19. Install tape (L) to shade (K) and secure with screws (O).
20. Repeat above steps, install shade (M & K & M) and tape (N & L & U) as show on diagram.
21. Feed tape (U) through cap (I) and canopy (H), then install tape (U) to mounting plate (S) and secure with screws (D) (see diagram 4).
22. Install canopy (H) to mounting plate (S) and secure with cap (I) using screws (G).

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

## ASSEMBLY INSTRUCTIONS

### Option 3: 1-Canopy Vertical Install\_Canopy Mounted Driver

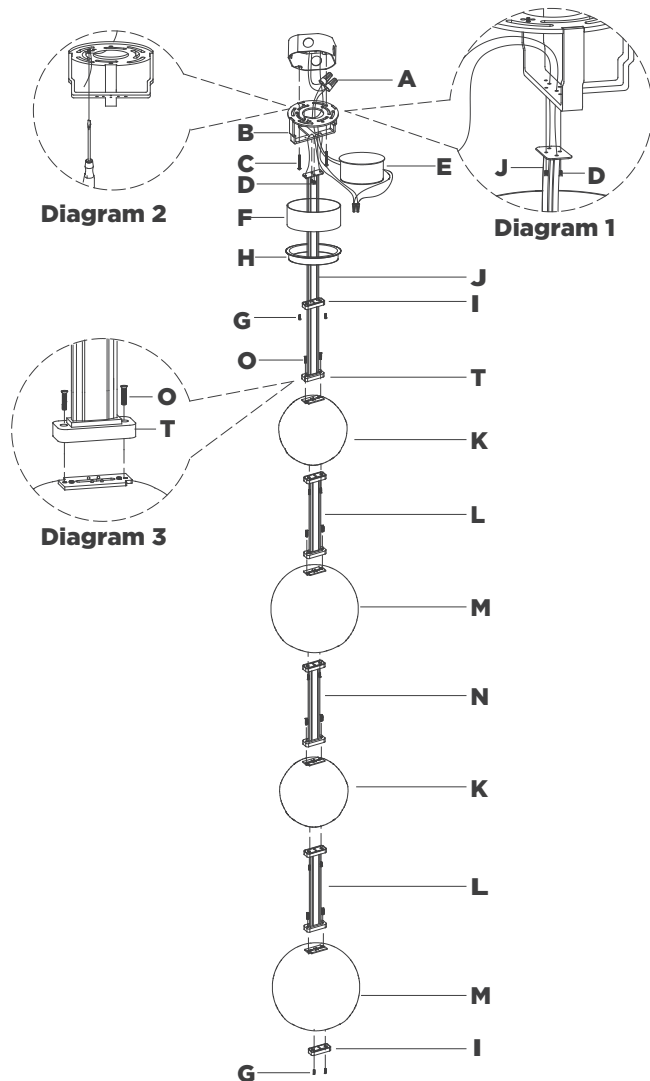

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

### PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove caps (I), canopies (H) and driver housing (F) from mounting plate (B & S) by removing screws (G).  
**NOTE:** mounting plates (S) and another canopy (H) and tape (J) will not be used for 1-canopy vertical install. Keep part and store for future use.
3. Install mounting plate (B) to the junction box and secure with mounting screws (C).
4. Feed tape (J) through cap (I), canopy (H) and driver housing (F).
5. Holding tape (J) upright, slide cap (I), canopy (H) and driver housing (F) down and rest on cap (T).  
**NOTE:** Slide components down slowly to avoid damage.
6. Feed fixture wires through holes on mounting plate (B) bracket, then install tape (J) to mounting plate (B) bracket and secure with screws (D) (see diagram 1).
7. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".

## ASSEMBLY INSTRUCTIONS

### Option 3: 1-Canopy Vertical Install\_Canopy Mounted Driver

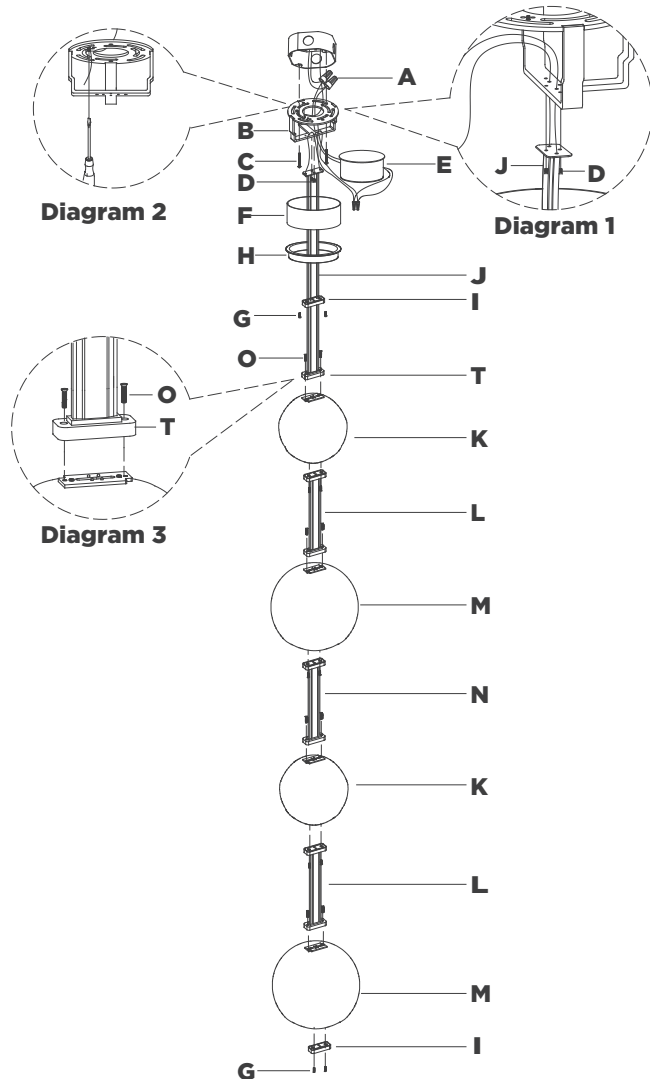

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

8. Connect fixture neutral wire (black) to driver (E) output wire (black) using wire nut (A).
9. Connect fixture hot wire (red) to driver (E) output wire (red) using wire nut (A).
10. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 2). Tighten.

**NOTE:** It is imperative that the fixture is grounded.

11. Connect driver (E) input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
12. Connect driver (E) input hot wire (black) to the supply hot wire (usually black) using wire nut (A).

**CAUTION:** Do not reverse the hot and neutral connections.


13. Make sure all wire connections are tight, then carefully tuck into the junction box.
14. Insert driver (E) into the middle of mounting plate (B) bracket.
15. Install driver housing (F) and canopy (H) to mounting plate (B) and secure with cap (I) using screws (G).
16. Install shade (K) to cap (T) and secure with screws (O) (see diagram 3).

**NOTE:** All light source must be installed before testing or restoring power.



## ASSEMBLY INSTRUCTIONS

### Option 3: 1-Canopy Vertical Install\_Canopy Mounted Driver

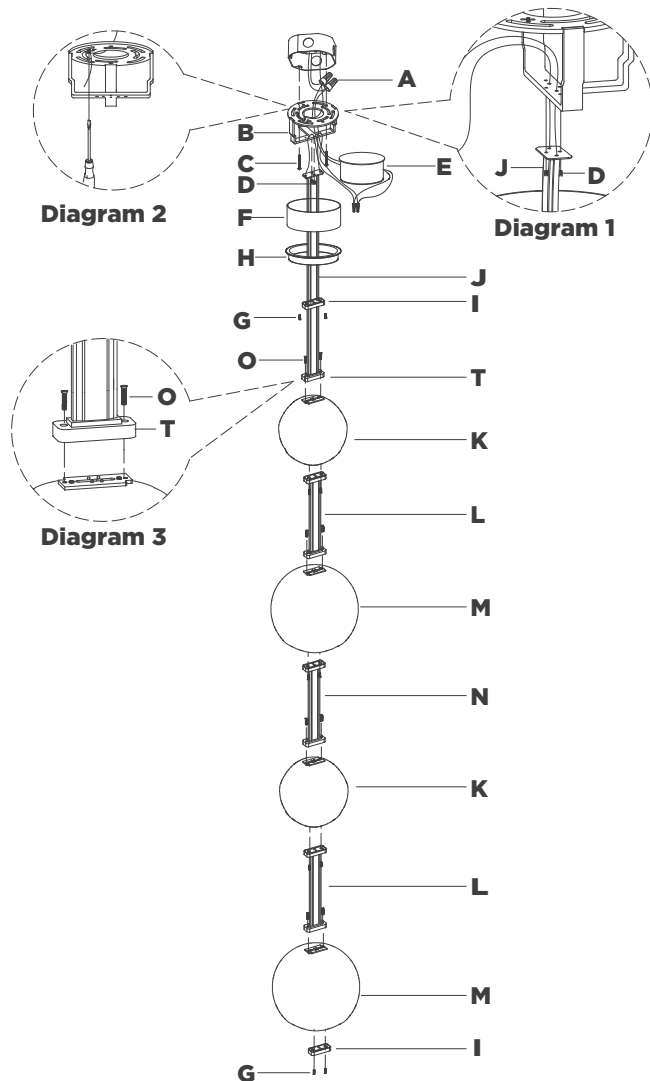

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

17. Install tape **(L)** to shade **(K)** and secure with screws **(O)**.
18. Repeat above steps, install shade **(M & K & M)** and tape **(N & L)** as show on diagram.
19. Install cap **(I)** to bottom of shade **(M)** and secure with screws.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

## ASSEMBLY INSTRUCTIONS

### Option 4: 1-Canopy Vertical Install\_Ceiling Mounted Driver

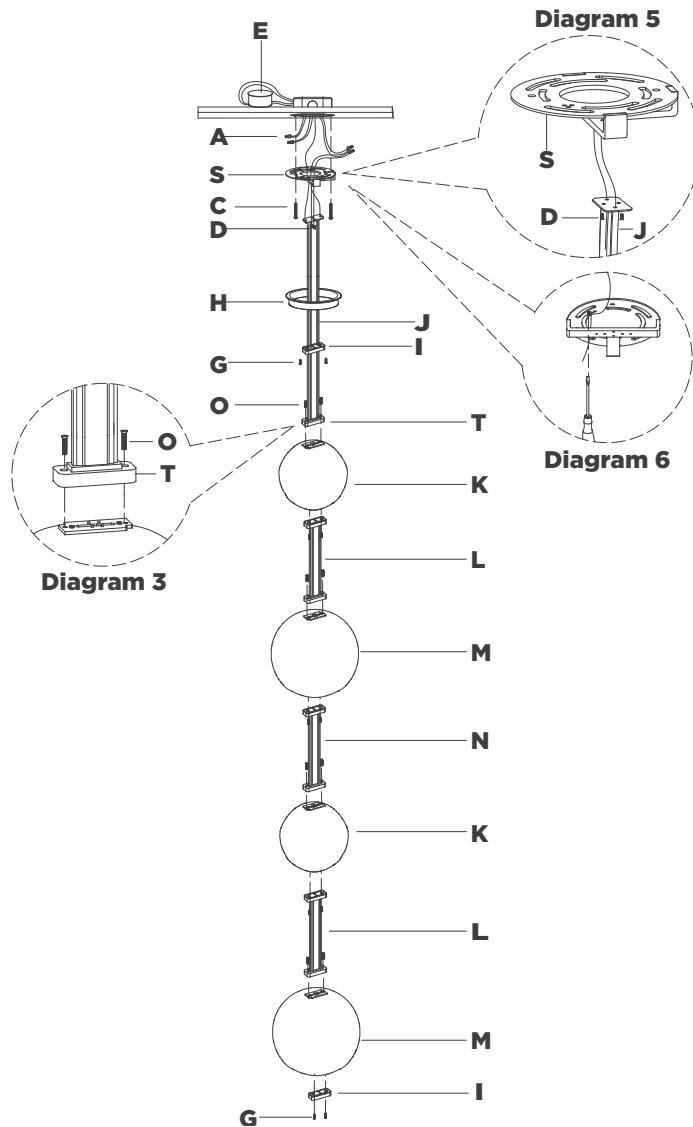

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

### PERSONS REQUIRED: Two

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Place driver (E) into ceiling and route all wires through one of the knockouts in the junction box.
3. Remove caps (I), canopies (H) and driver housing (F) from mounting plate (B & S) by removing screws (G).  
**NOTE:** Driver housing (F), mounting plate (B) and another canopy (H), tape (J) and mounting plate (S) will be not be used for 1-canopy vertical ceiling mounted assembly. Keep part and store for future use.
4. Install mounting plate (S) to the junction box and secure with mounting screws (C).
5. Feed tape (J) through cap (I), canopy (H) and driver housing (F).
6. Holding tape (J) upright, slide cap (I), canopy (H) and driver housing (F) down and rest on cap (T).  
**NOTE:** Slide components down slowly to avoid damage.
7. Feed fixture wires through holes on mounting plate (B) bracket, then install tape (J) to mounting plate (B) bracket and secure with screws (D) (see diagram 1).

## ASSEMBLY INSTRUCTIONS

### Option 4: 1-Canopy Vertical Install\_Ceiling Mounted Driver

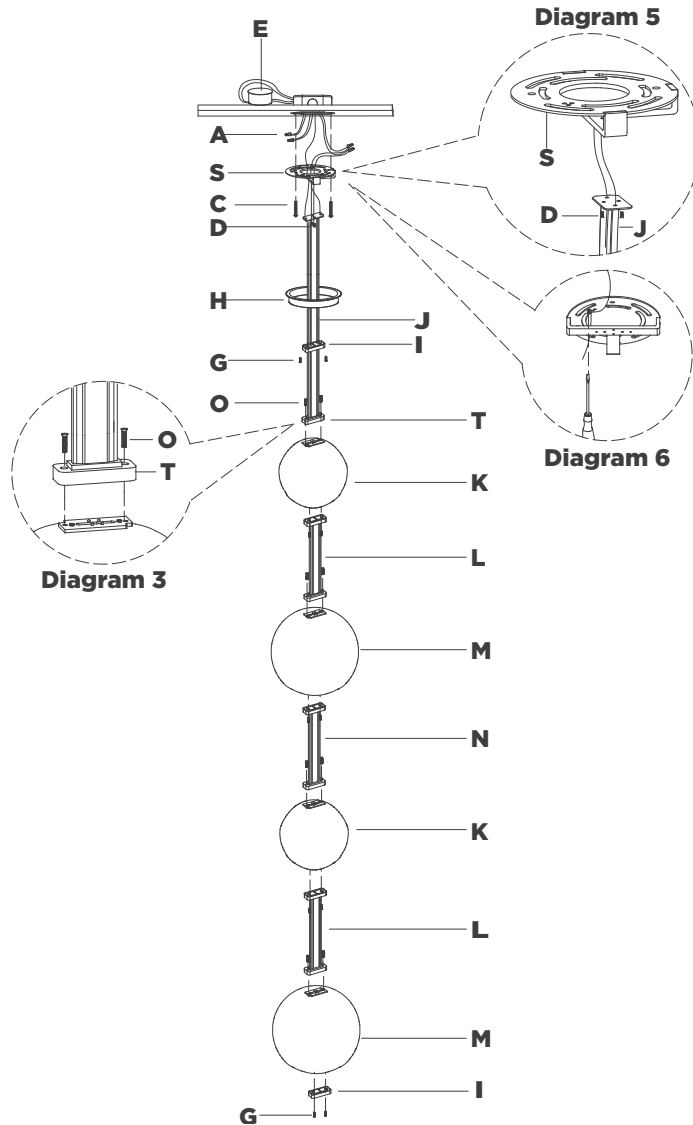

## Dune 58" Belted Light

Item # AMB5050


### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

8. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
  9. Connect fixture neutral wire (black) to driver (E) output wire (black) using wire nut (A).
  10. Connect fixture hot wire (red) to driver (E) output wire (red) using wire nut (A).
  11. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 6). Tighten.
- NOTE:** It is imperative that the fixture is grounded.
12. Connect driver (E) input neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
  13. Connect driver (E) input hot wire (black) to the supply hot wire (usually black) using wire nut (A).
- CAUTION:** Do not reverse the hot and neutral connections.
14. Make sure all wire connections are tight, then carefully tuck into the junction box.
  15. Install canopy (H) to mounting plate (S) and secure with cap (I) using screws (G).
- NOTE:** It is recommended to have a helper assist in supporting the fixture for steps 16-.

## ASSEMBLY INSTRUCTIONS

### Option 4: 1-Canopy Vertical Install\_Ceiling Mounted Driver

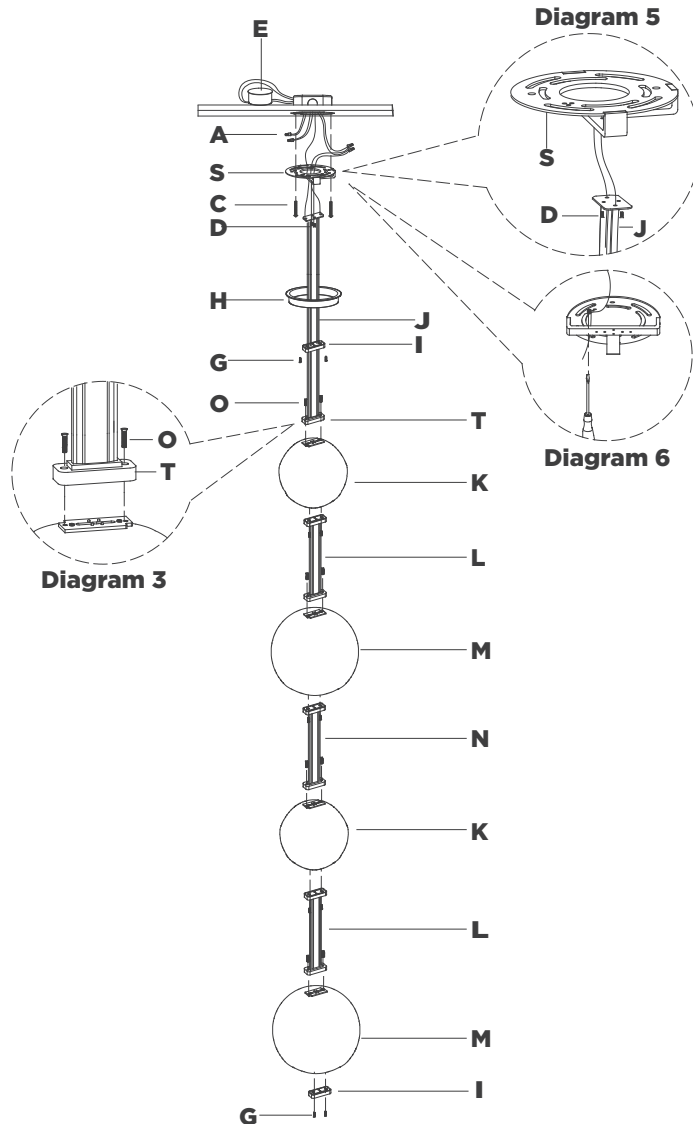

## Dune 58" Belted Light

Item # AMB5050

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

16. Install shade **(K)** to cap **(T)** and secure with screws **(O)** (see diagram 3).

**NOTE:** All light source must be installed before testing or restoring power.

17. Install tape **(L)** to shade **(K)** and secure with screws **(O)**.
18. Repeat above steps, install shade **(M & K & M)** and tape **(N & L)** as show on diagram.
19. Install cap **(I)** to bottom of shade **(M)** and secure with screws.

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.