


ASSEMBLY INSTRUCTIONS

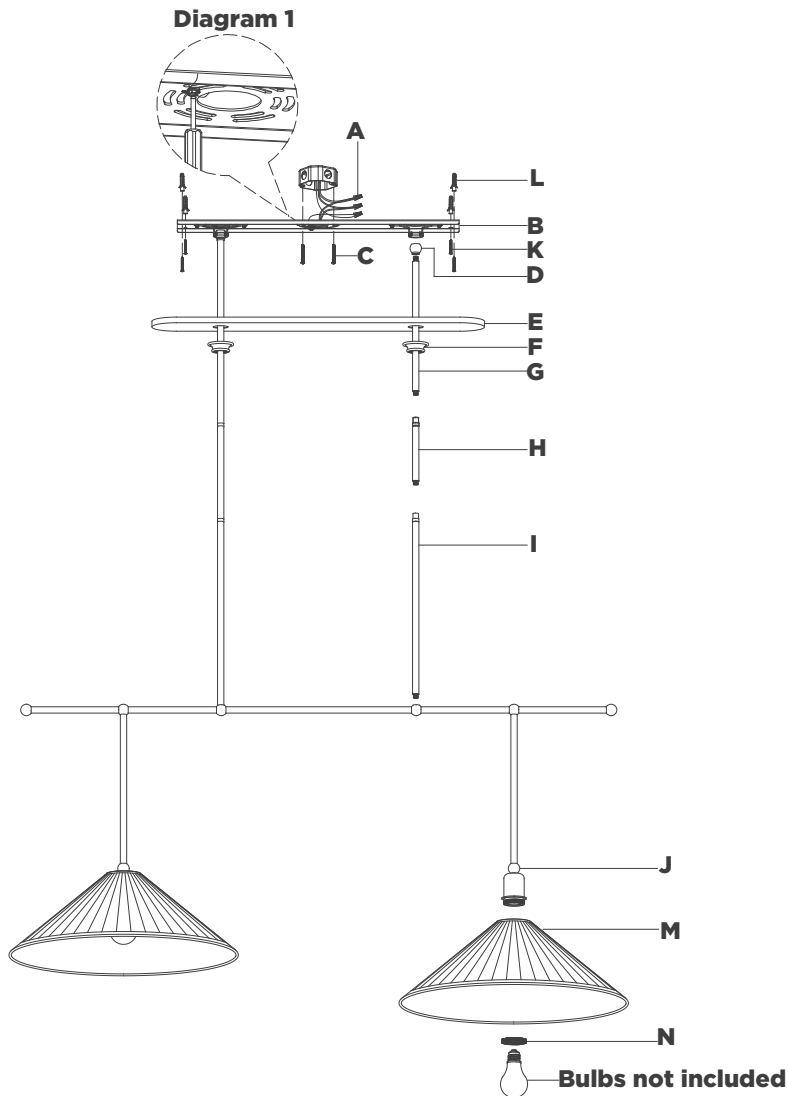

Soren 52" Extended Drop Linear Chandelier

Item # AL5100

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.


TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Wire Cutters	Hammer	Pencil
Drill		

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove canopy **(E)** from mounting plate **(B)** by removing collar rings **(F)**.
3. Using mounting plate **(B)** as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(L)** into the holes using a hammer.
5. Install mounting plate **(B)** to the junction box and secure with mounting screws **(C)**, then secure wood screws **(K)** to anchors **(L)**.
6. Feed electrical wires through bottom rods **(I)** and connect to fixture **(J)**. Repeat for middle rods **(H)**, connecting to bottom rods **(I)**.
7. Continue feeding wires through collar rings **(F)**, canopy **(E)**, and top rods **(G)**.
8. Holding fixture upright, slide collar rings **(F)** and canopy **(E)** down and rest on fixture **(J)**. Then connect top rods **(G)** to middle rods **(H)**.

NOTE: Slide components down slowly to avoid damage.

ASSEMBLY INSTRUCTIONS

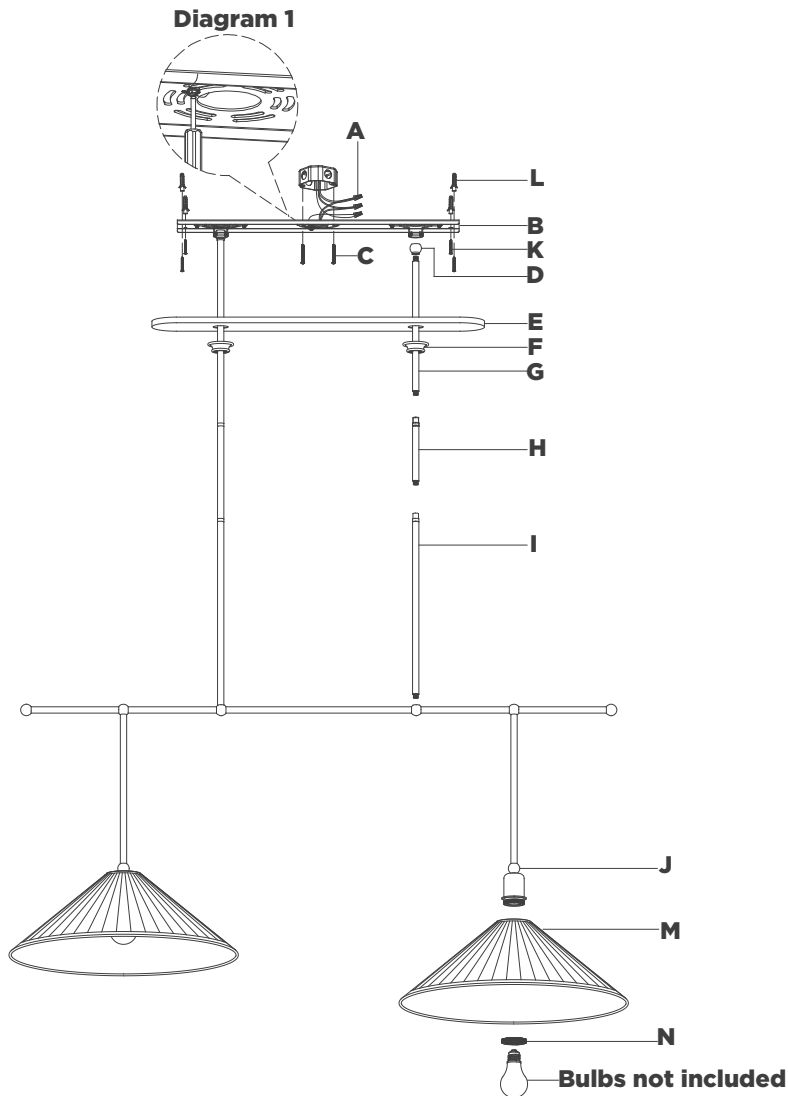

Soren 52" Extended Drop Linear Chandelier

Item # AL5100

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Hang fixture swivel balls **(D)** to the center of mounting plate **(B)**.
10. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires and strip insulation on each 5/8".
11. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.
NOTE: It is imperative that the fixture is grounded.
12. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
13. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.
CAUTION: Do not reverse the hot and neutral connections.
14. Make sure all wire connections are tight, then carefully tuck into the junction box.
15. Install canopy **(E)** to mounting plate **(B)** and secure with collar rings **(F)**.
16. Remove socket rings **(N)** from socket cup, then install shade **(M)** to socket cup and secure with socket rings **(N)**.
NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.
17. Install light bulbs into the sockets.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.