


ASSEMBLY INSTRUCTION

# Parallel

120 x 60

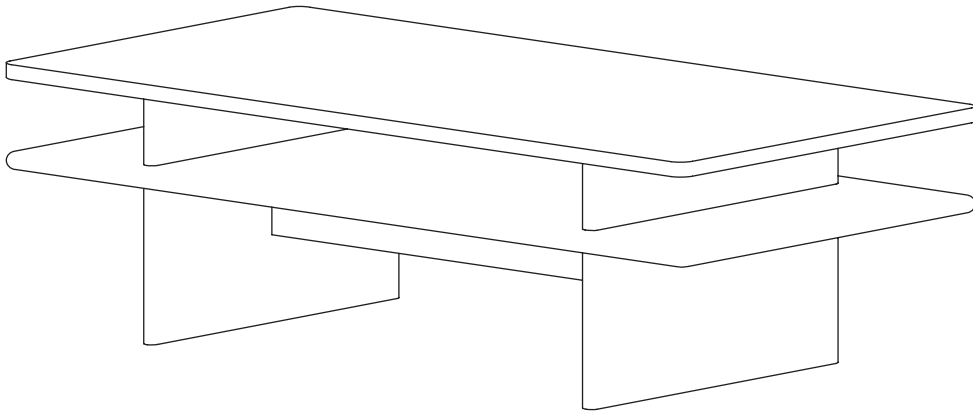

**WOUD**

**When designing the Parallel coffee table,  
I drew inspiration from the display showcases  
found in museums and the idea of how these  
could be adapted for a domestic environment.  
By leveraging glass, the space between the  
horizontal planes serves as an exhibition  
area for everyday objects. It is like having  
your own personal museum display case at  
home.**

A handwritten signature in black ink, featuring a large, loopy initial 'M' followed by a series of smaller, connected loops and a long horizontal stroke extending to the right.

**MAGNUS PETTERSEN**

**THIS MANUAL IS VALID FOR:**

**PARALLEL COFFEE TABLE 120 x 60**

# **ASSEMBLY INSTRUCTION**

**PLEASE GO THROUGH THE FOLLOWING  
STEPS CAREFULLY. RETAIN THIS MANUAL  
FOR FUTURE REFERENCE TO ENSURE THAT  
YOUR NEW ITEM IS CORRECTLY ASSEMBLED  
IN CASE IT SHOULD BE DISASSEMBLED OR  
MOVED. WE ARE NOT RESPONSIBLE FOR  
ANY FAULTS OR DAMAGES CAUSED BY  
NOT FOLLOWING THESE INSTRUCTIONS  
CORRECTLY.**



**A X 14**

**B X 6**

**C X 9**

**D X 9**

**E X 9**




**F X 4**


**G X 4**

**H X 1**


**J**

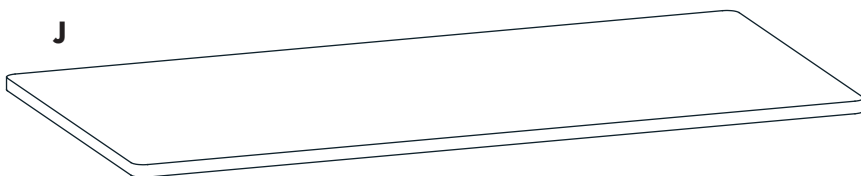


**K**

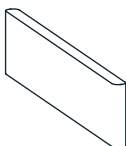


**K**

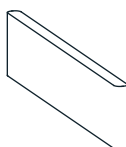


**L**

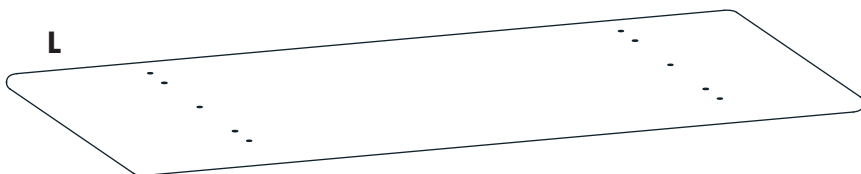


**M**

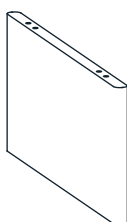

**N**




**M**

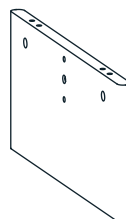

# STEP 1


PLACE THE WOODEN DOWELS TO THE LEG PANELS, VERTICAL SUPPORTS AND CROSS RAILS BY USING A SOFT Mallet.

PLEASE ASSEMBLE THE PRODUCT ON A SOFT CARPET OR RUG.

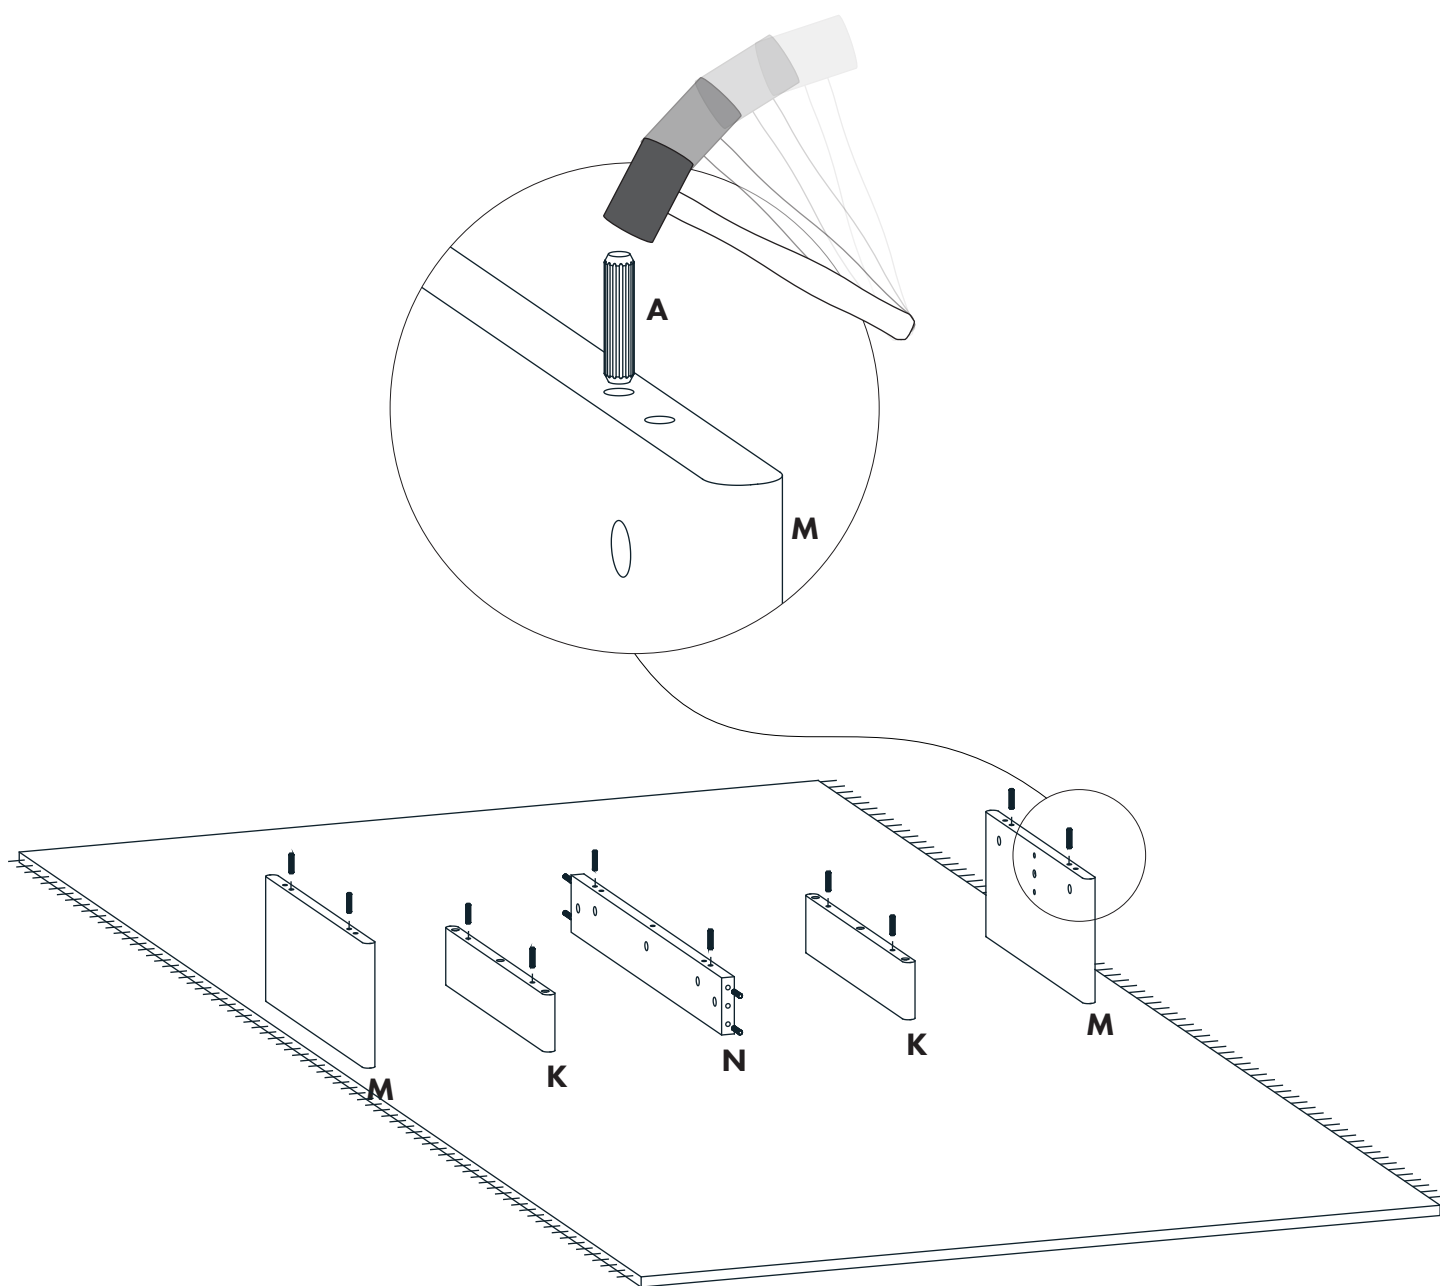


## STEP 2

**FIX THE CAM RODS ONTO THE VERTICAL SUPPORTS AND  
MIDDLE PANEL BY USING A SCREWDRIVER.**

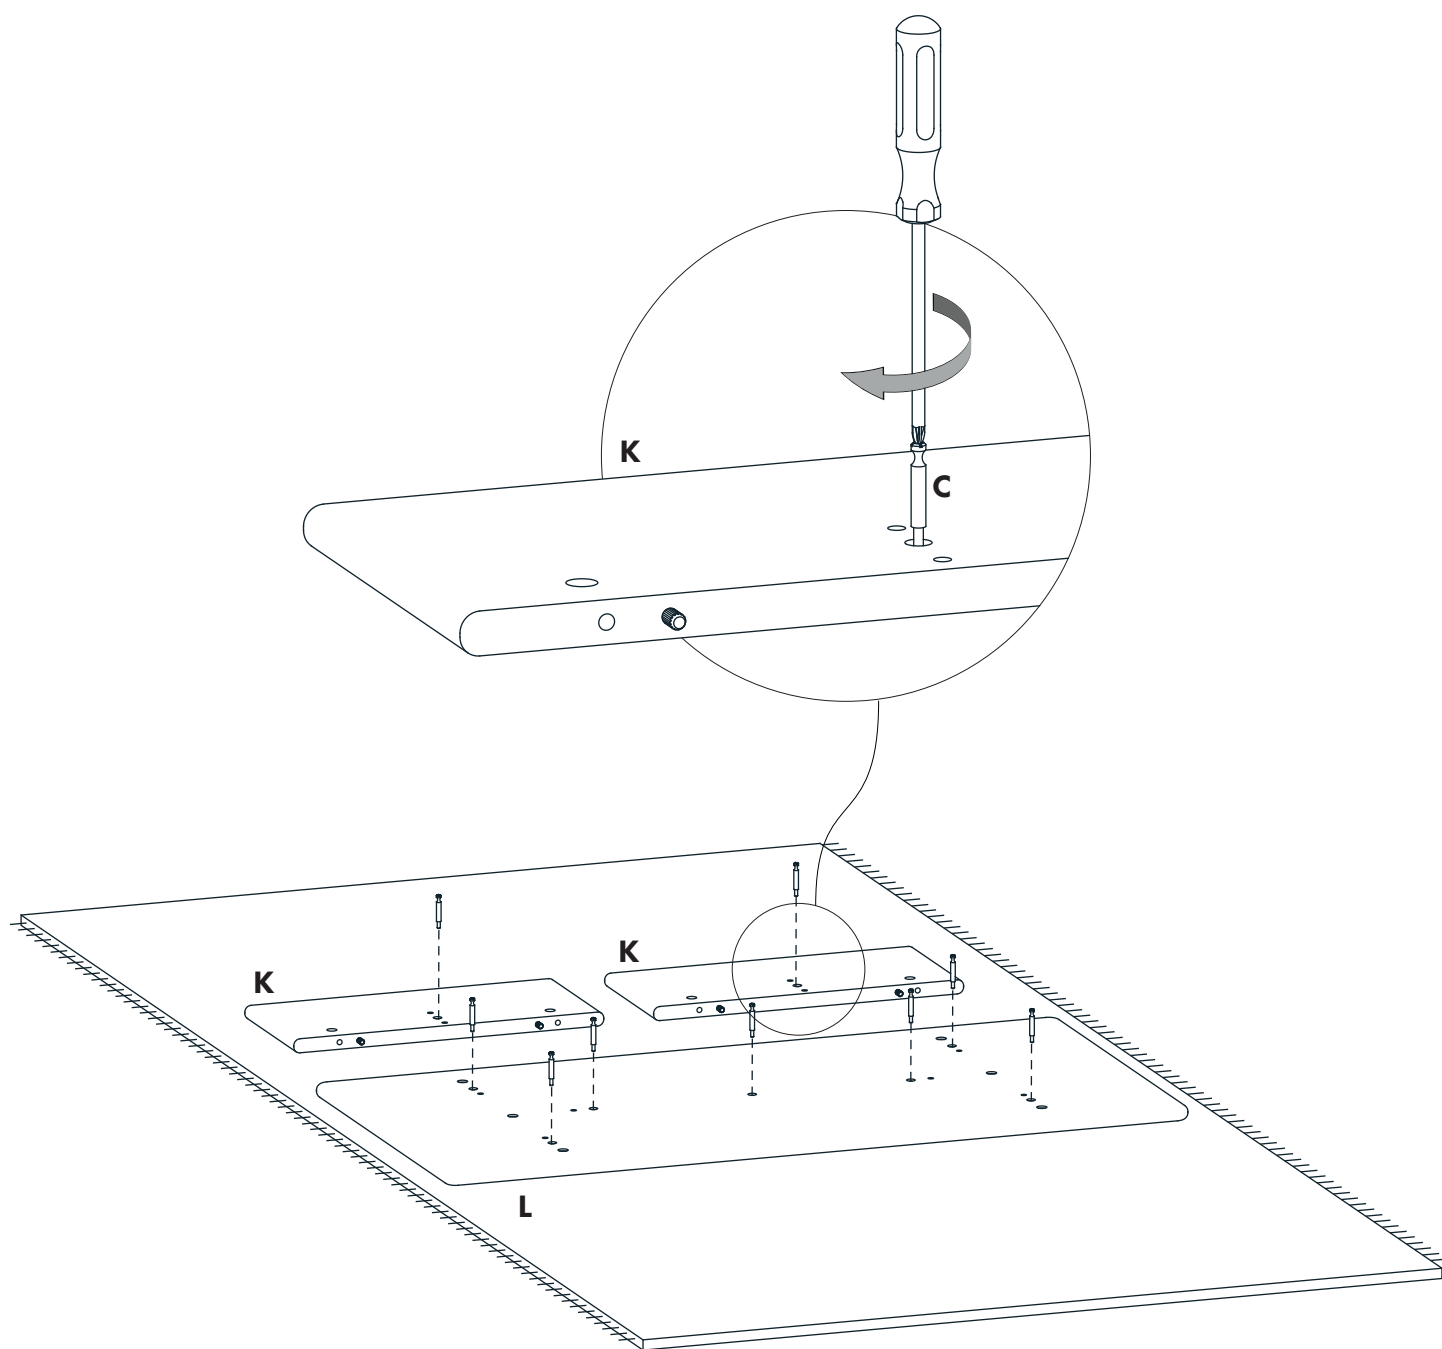

## STEP 3


PLACE THE CAM HEADS INTO THE VERTICAL SUPPORTS AND CROSS RAIL.

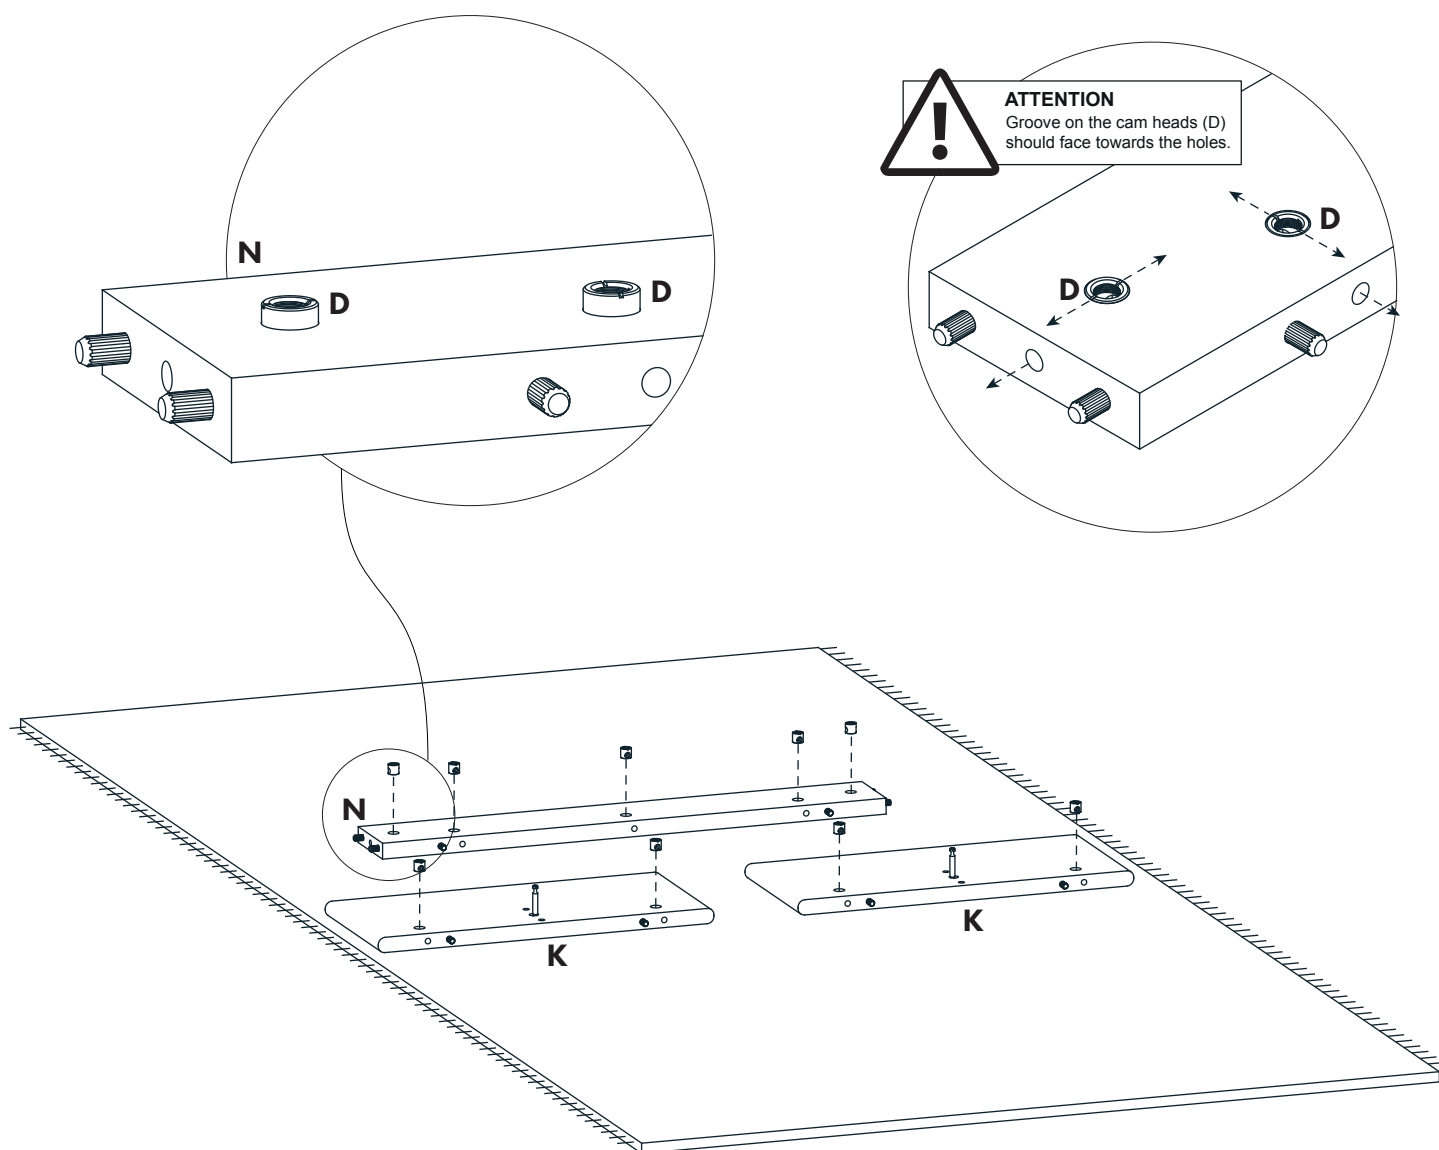




# STEP 4

FIX THE GRUB SCREWS INTO THE CAM HEADS SLIGHTLY  
BY USING A SCREWDRIVER.

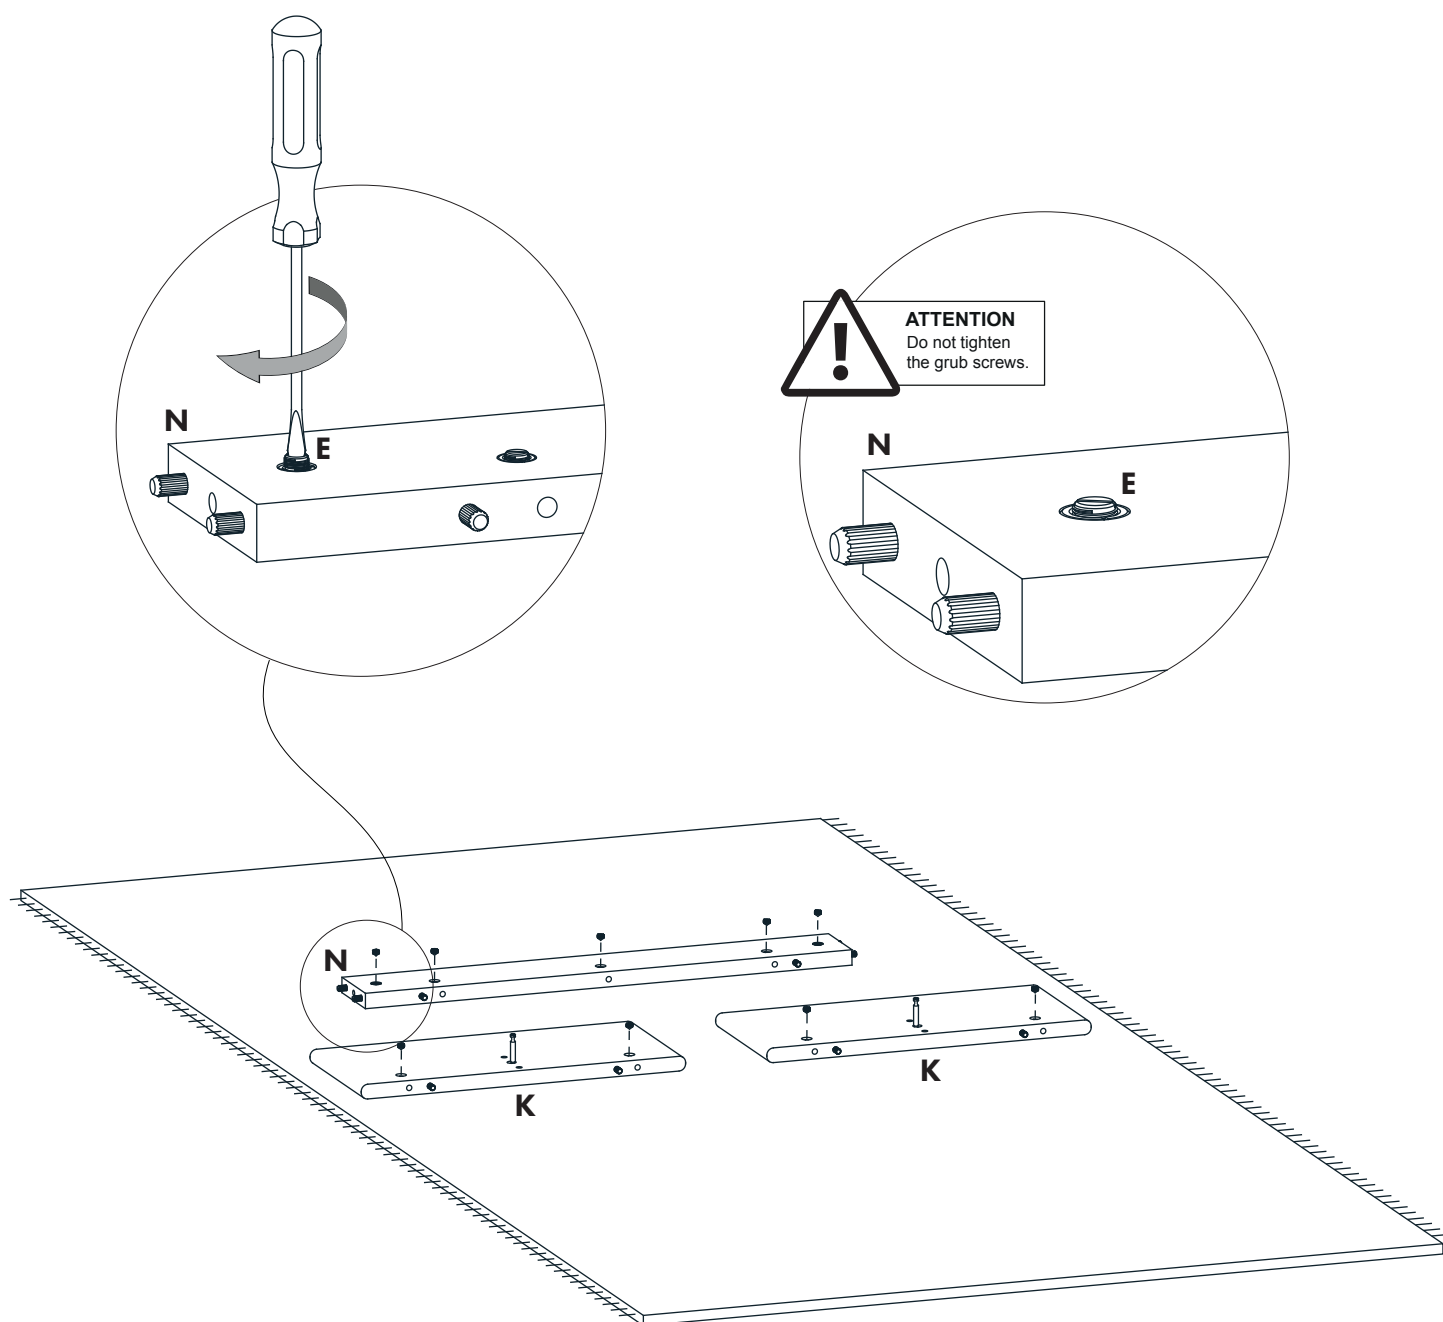


## STEP 5

ATTACH THE LEG PANELS TO CROSS RAIL AND  
TIGHTEN THE GRUB SCREWS BY USING A SCREWDRIVER.

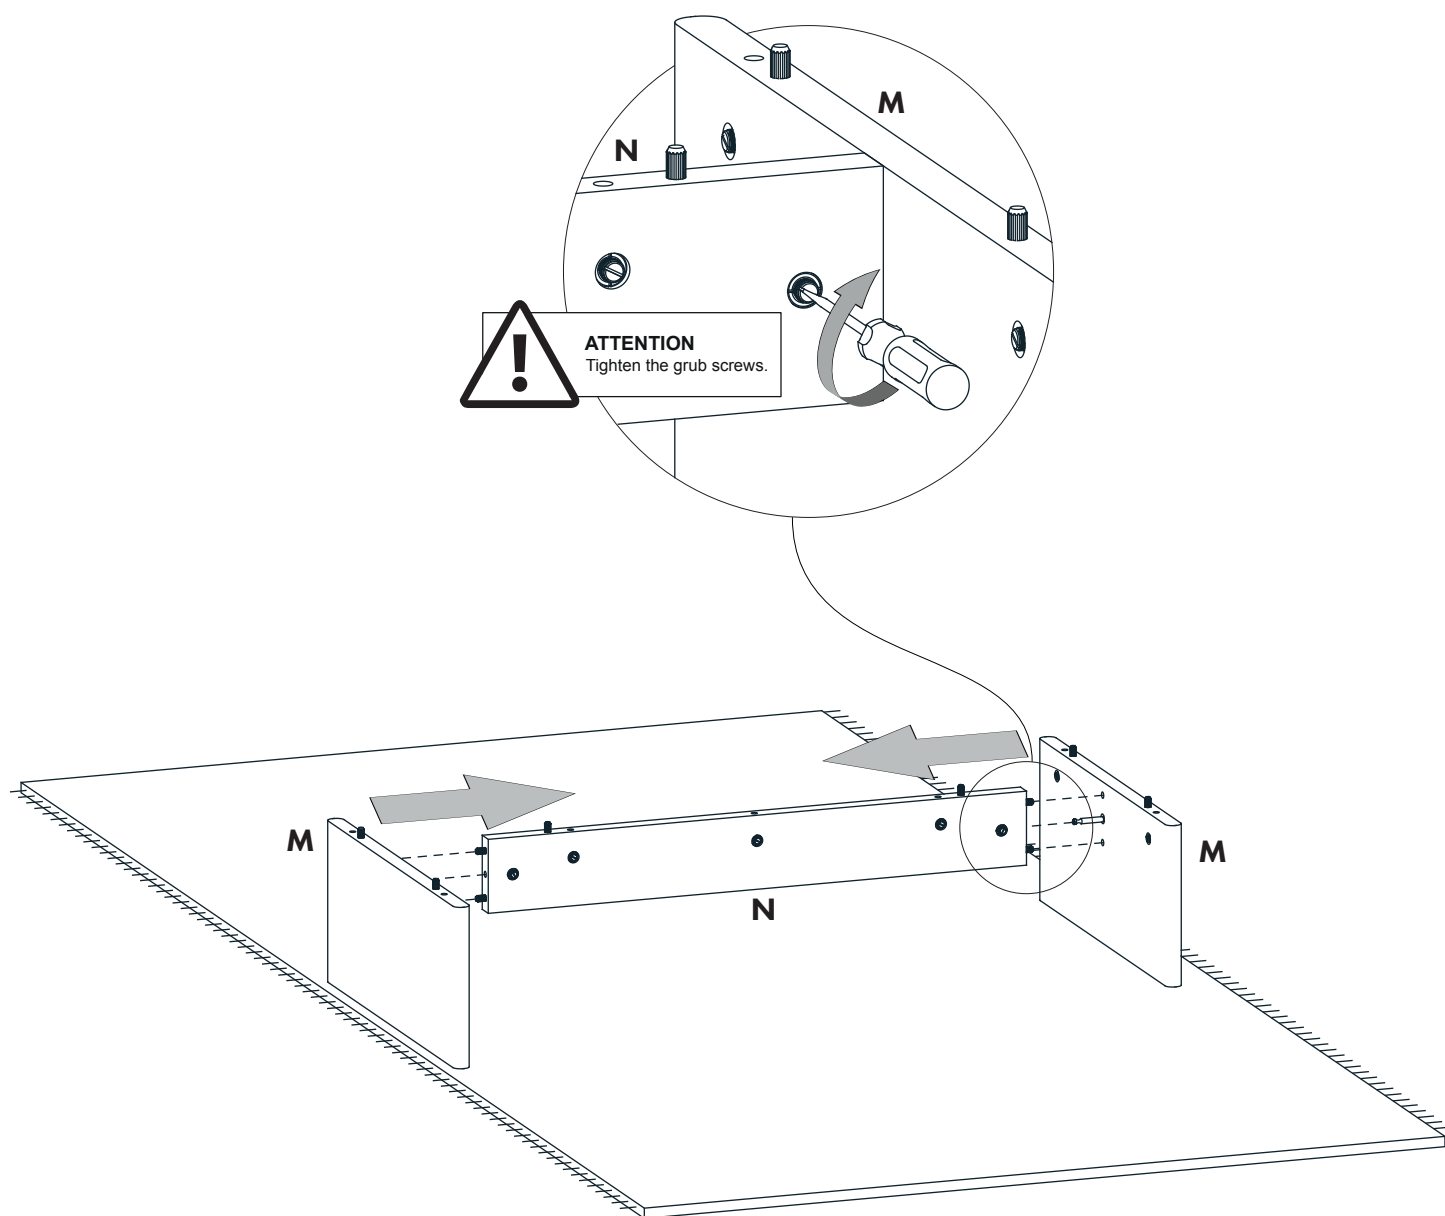


# STEP 6

**FIX THE VERTICAL SUPPORTS TO MIDDLE PANEL AND  
TIGHTEN THE BOLTS BY USING THE ALLEN KEY.**

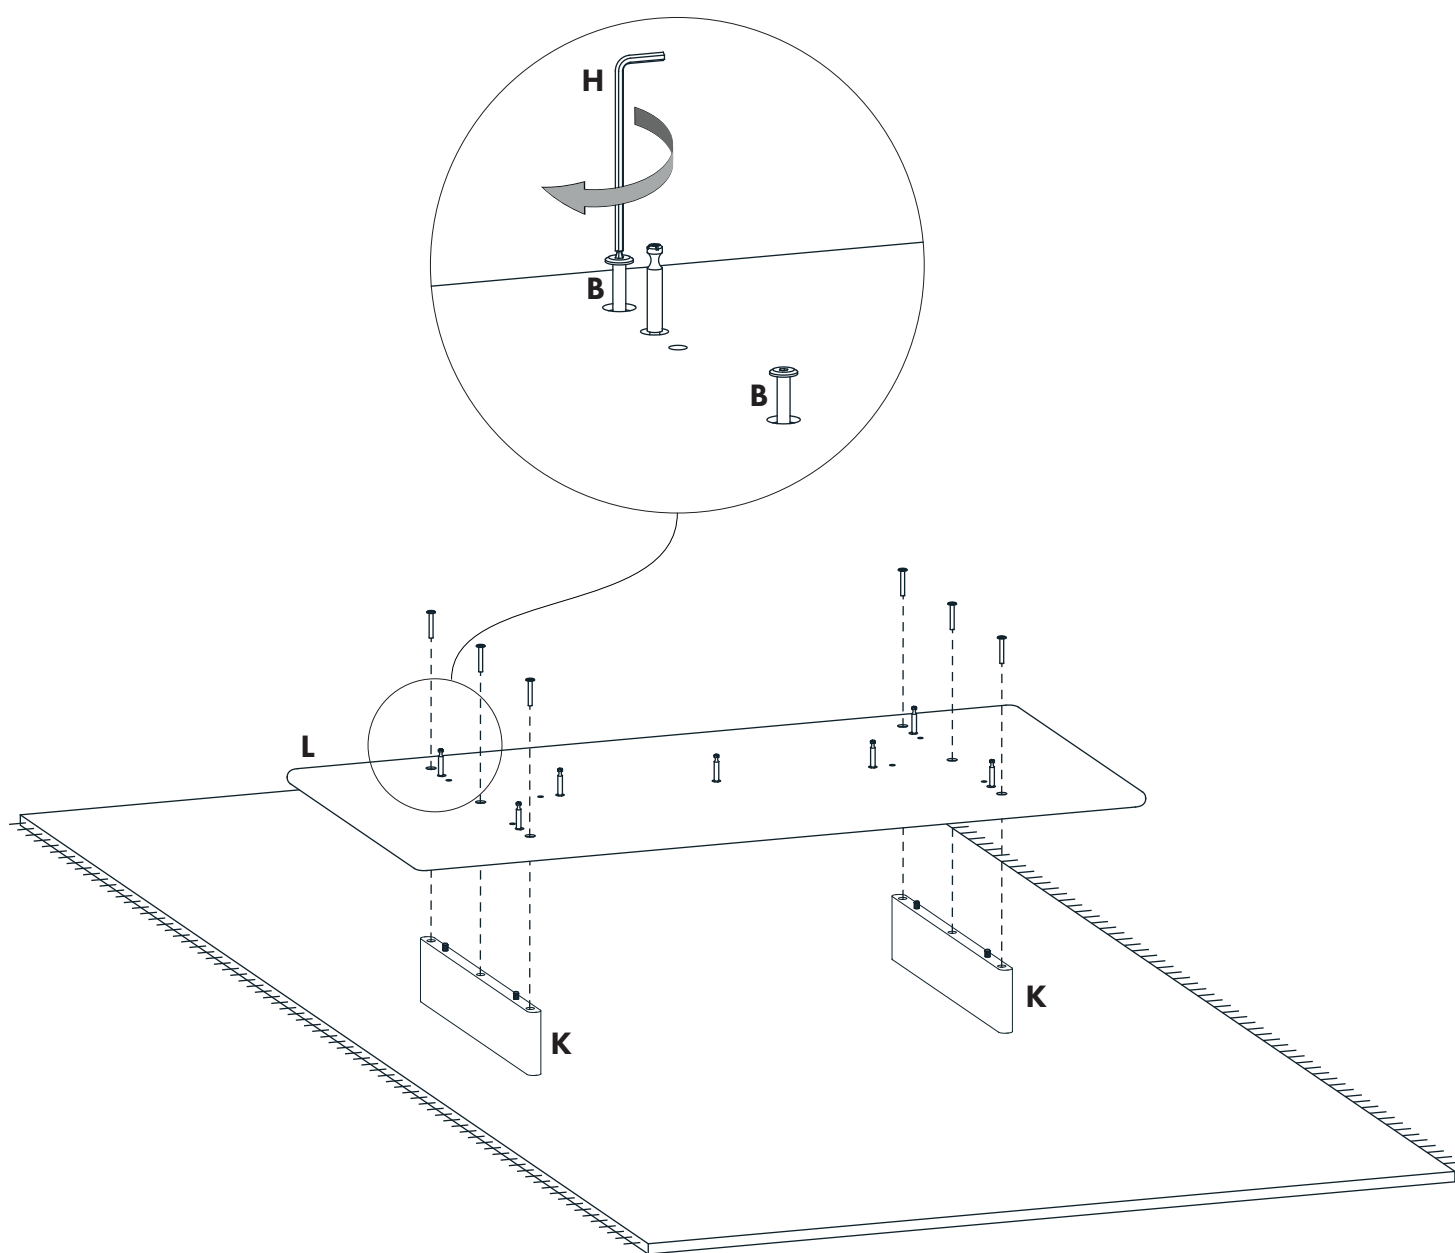


# STEP 7

**FIX THE UPPER FRAME TO LOWER FRAME AND  
TIGHTEN THE GRUB SCREWS BY USING A SCREWDRIVER.**

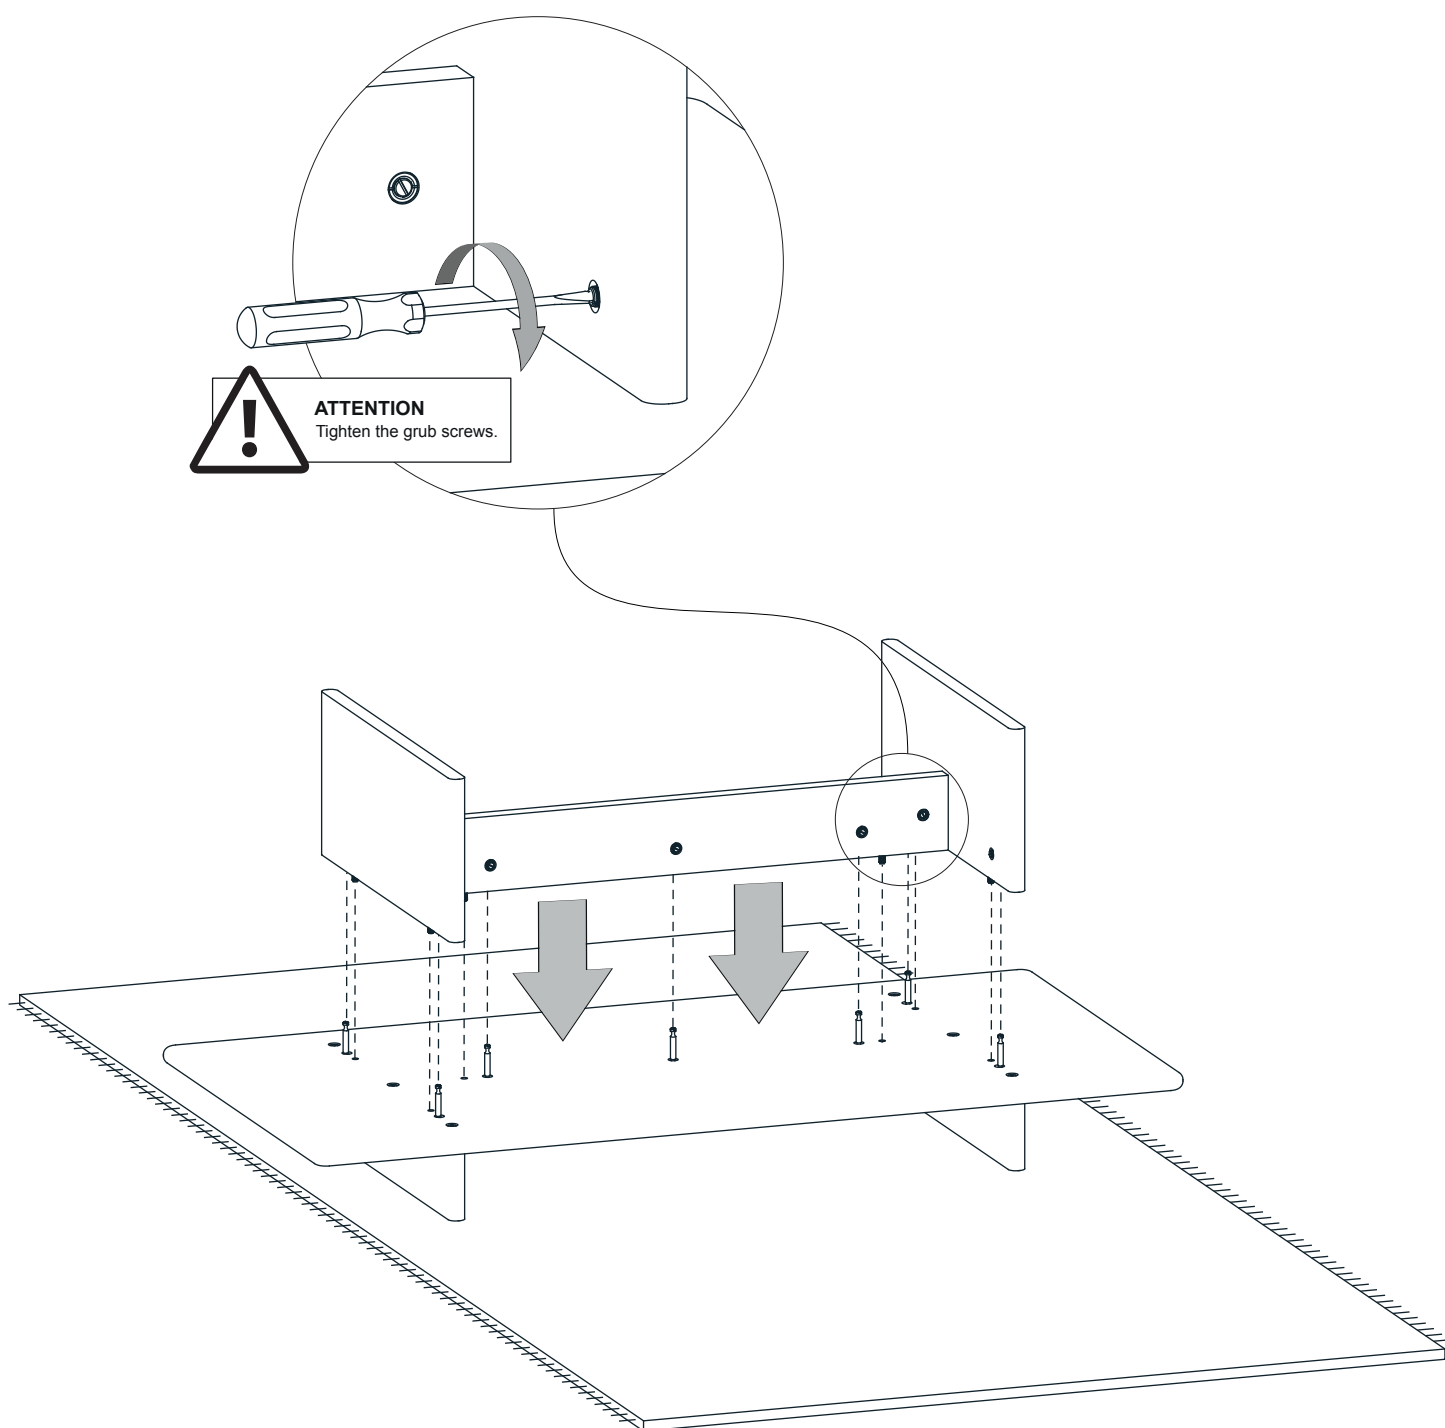


## STEP 8

REMOVE THE PROTECTIVE PAPER FROM THE FELT PADS AND  
ATTACH THEM TO THE BOTTOM OF THE LEG PANELS.

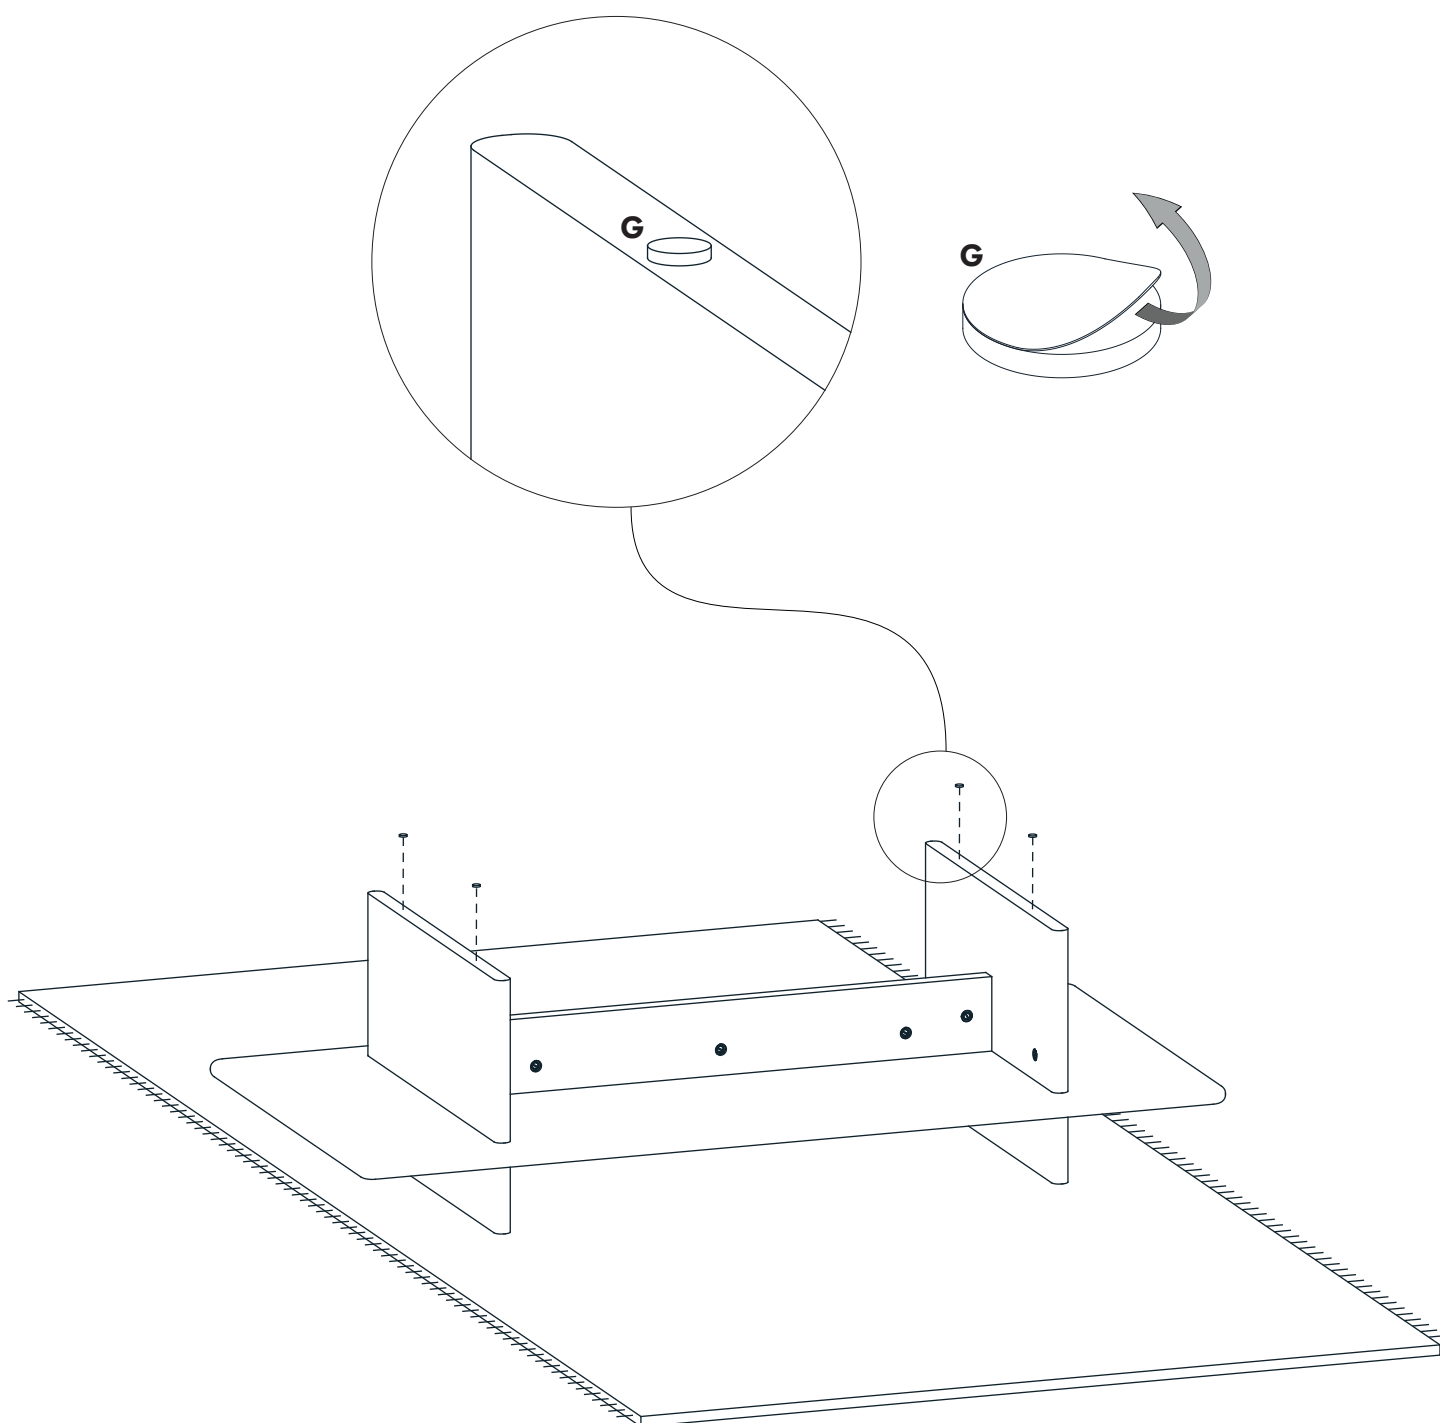


## STEP 9

TURN THE UNIT TO STANDING POSITION CAREFULLY.

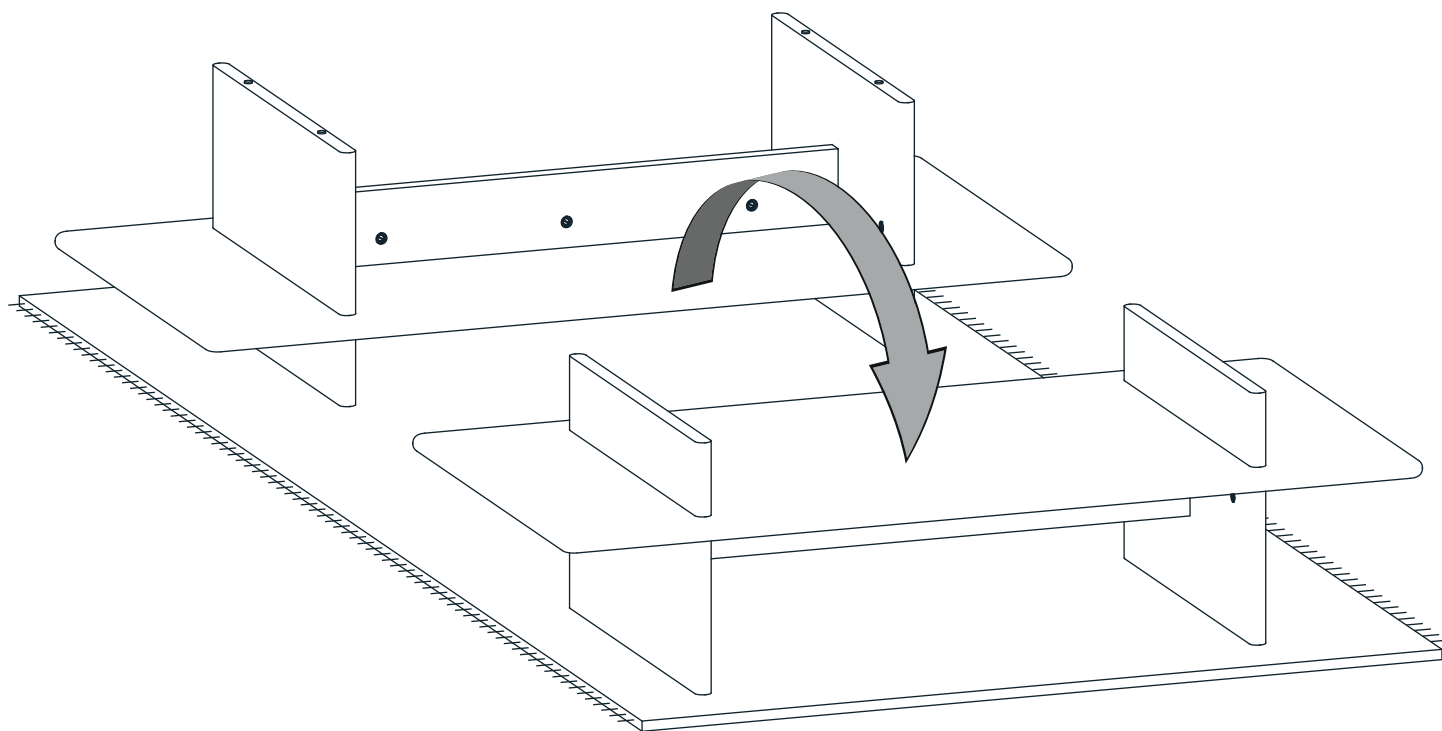


# STEP 10

REMOVE THE PROTECTIVE PAPER FROM THE SILICON BUMPER AND  
ATTACH THEM TO THE TOP OF VERTICAL SUPPORTS.

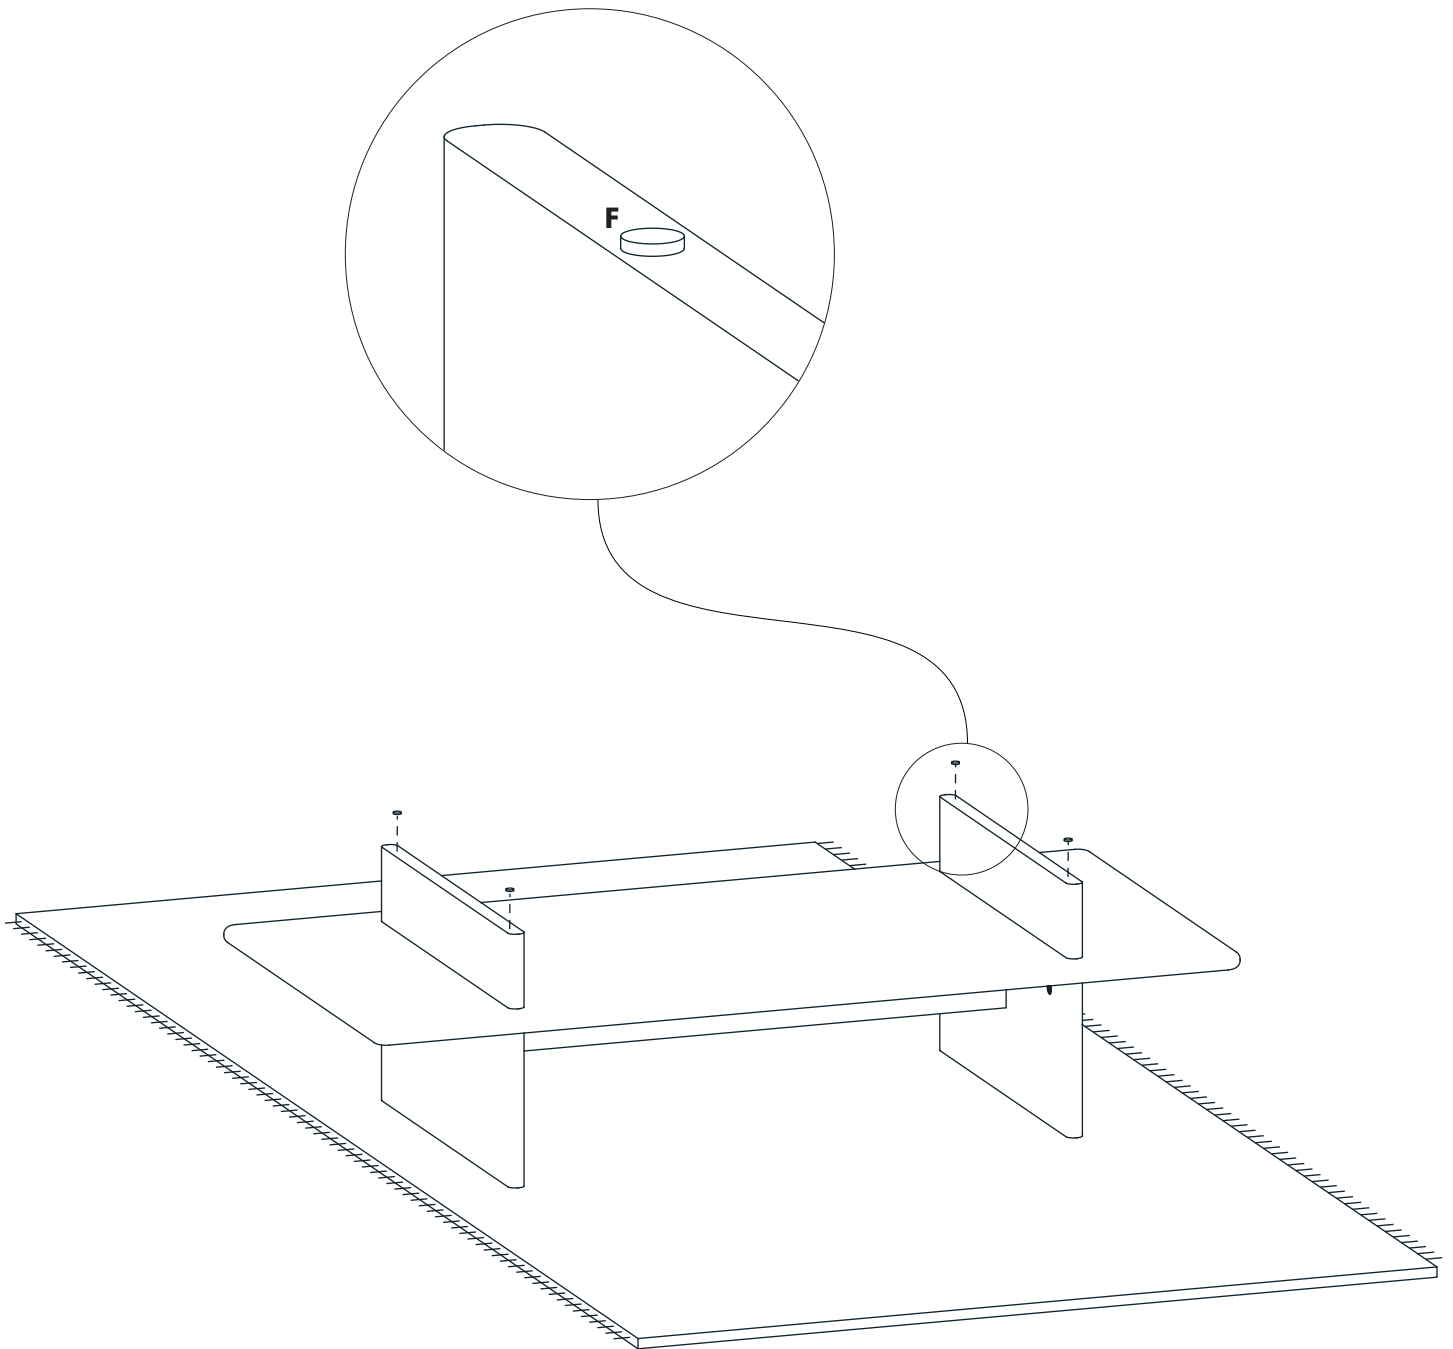

# STEP 11


PLACE THE GLASS TOP CAREFULLY.

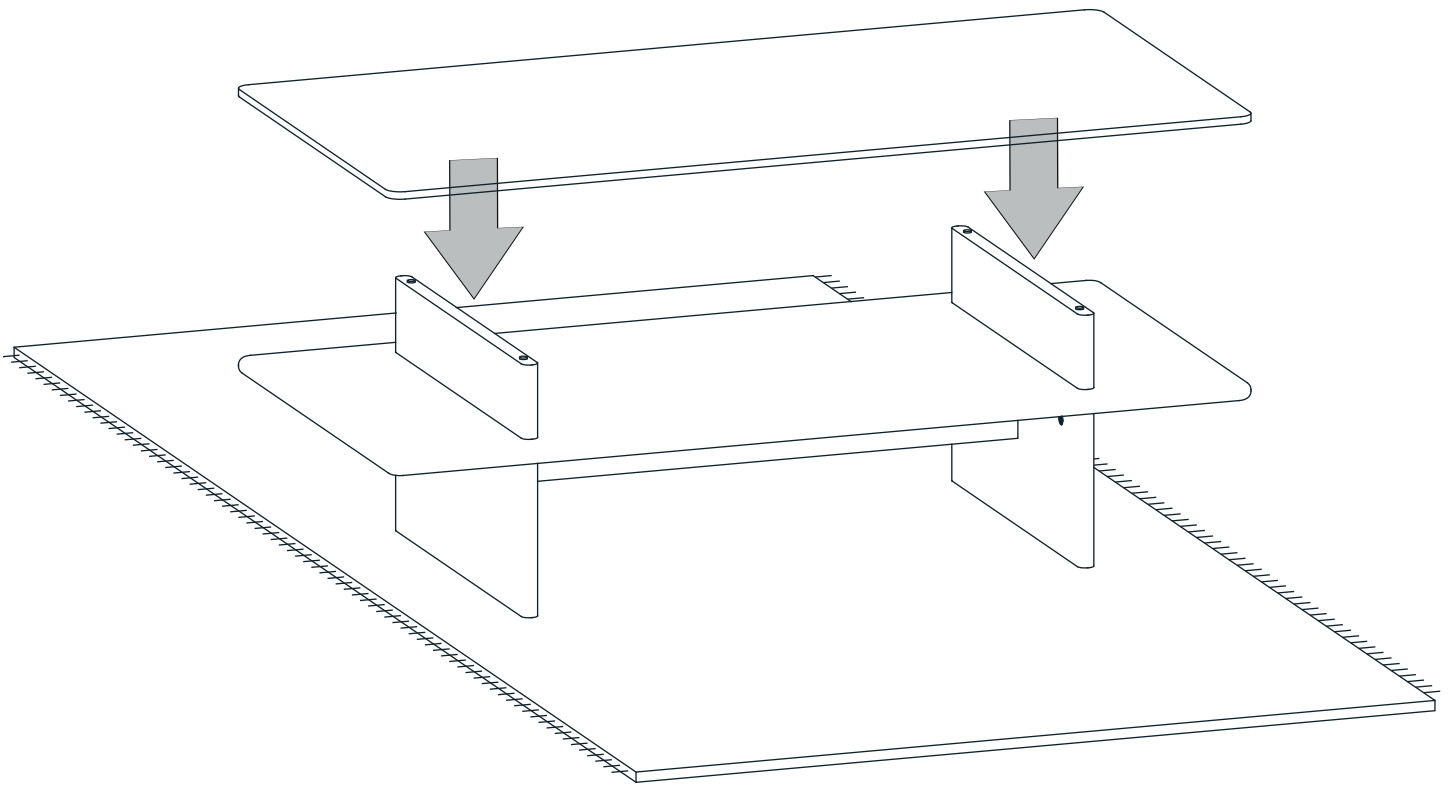



# STEP 12

NOW YOUR PARALLEL TABLE IS READY TO PUT INTO USE.

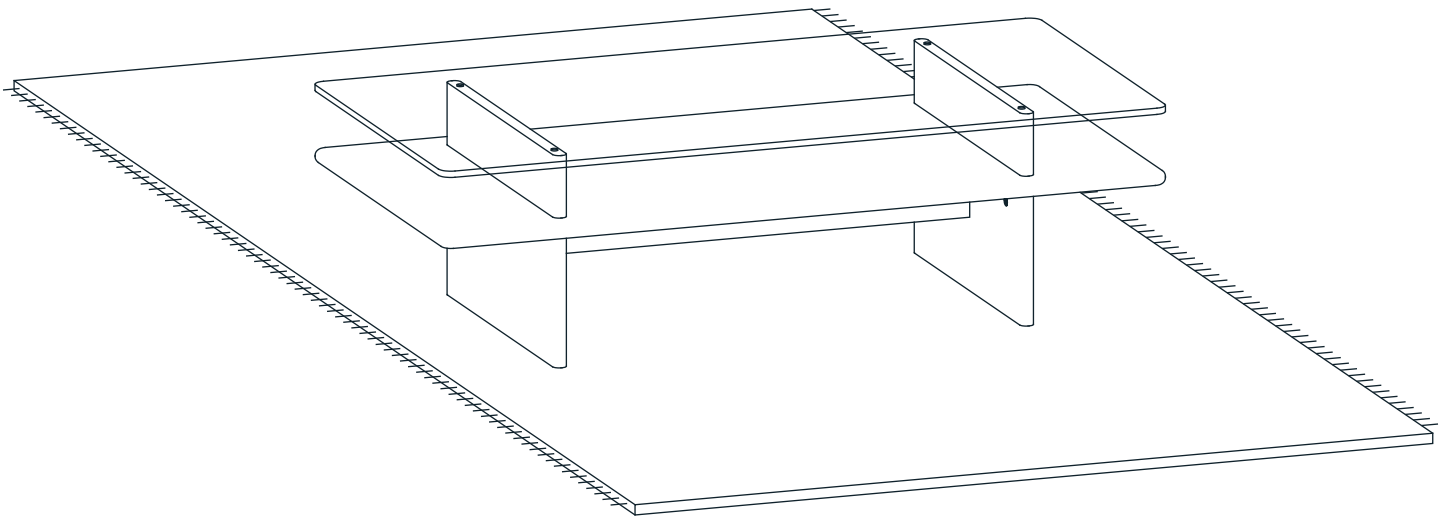

DESIGNED BY  
**MAGNUS PETTERSEN**