

ASSEMBLY AND INSTALLATION INSTRUCTIONS


WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirement.

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on clear area. Take care not to loose any small parts necessary for installation.
2. Let the two fixture mounting screws pass through the holes specially provided on the universal crossbar and lock them by hex nuts.
3. Attach the universal crossbar to outlet box by using two outlet box screws. Guide the supply wires and ground wire from outlet box through the center hole on the universal crossbar.
4. Make wire connections:
 - attach ground wire to house ground wire using a wire nut or attach them to the back plate with a green ground screw.
 - attach white wire from light to white wire from power source with a wire nut.
 - attach black wire from light to black wire from power source with a wire nut.Observing: ground wire with ground wire, neutral wire with neutral wire, hot wire with hot wire.
***Make sure all wire connectors are secured and do not easily pull off with the slight tug.
5. Once all wires are connected, tuck them carefully into outlet box.
6. Raise the crystal to the pedestal, aim the small holes, then fasten it with the pin.
7. Aim the lamp body to the two fixture mounting screws, then fasten it with two finials. Raise the bottom of shade's mounting shim onto the lamp body's screw, then fasten it with hex nut. Raise the cover onto the bottom of shade, fasten it with the ball nut.
8. Install bulbs.(not included) (Please do not exceed the maximum capacity which is recommended on the fixture.)
9. Turn on the power at fuse or circuit box.

NOTE: To clean, wipe fixture with a damp soft cloth. Then dry immediately with a dry soft cloth. Clean glass with a mild soap. **DO NOT** use chemical cleaners or abrasive materials such as scouring pads or powders, steel wool or abrasive paper.

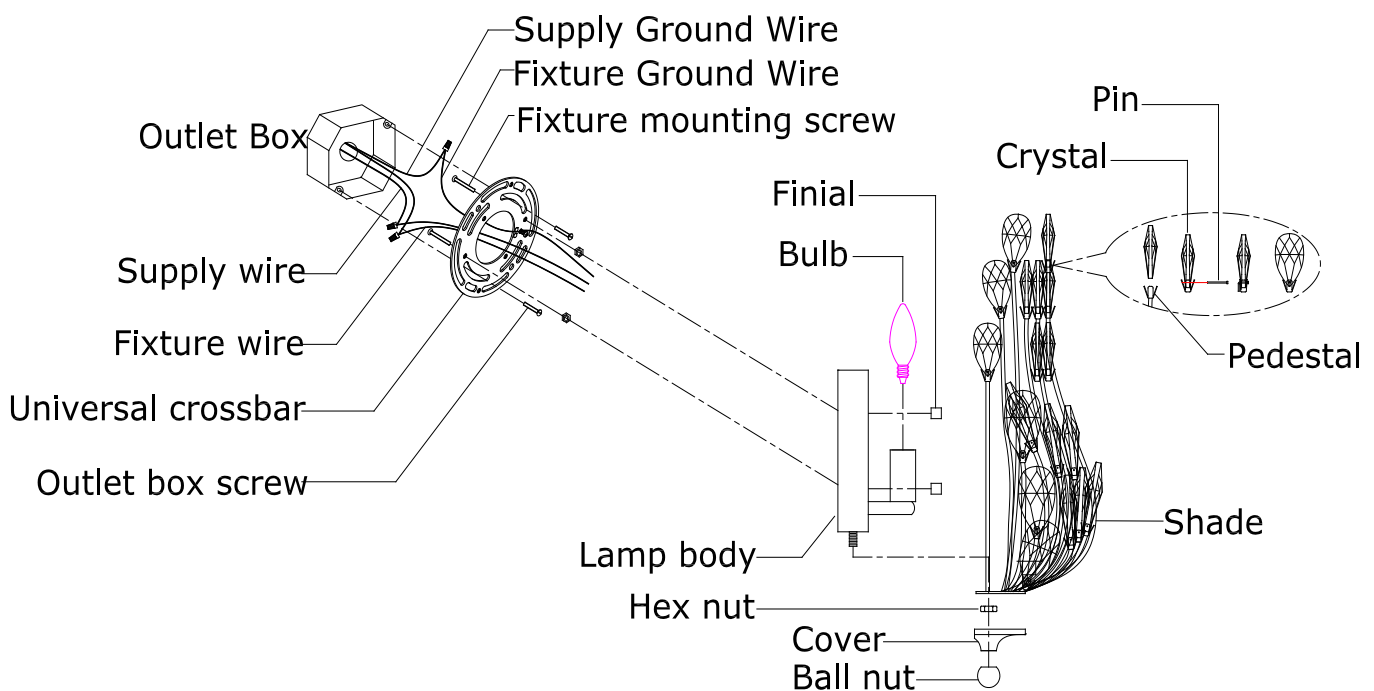

1957-2S

Z-Lite
Est. 1987