Direct End Power Feed Canopies

700MOP_CD_ | 1.7

TECH LIGHTING®

SPECIAL INSTALLATION
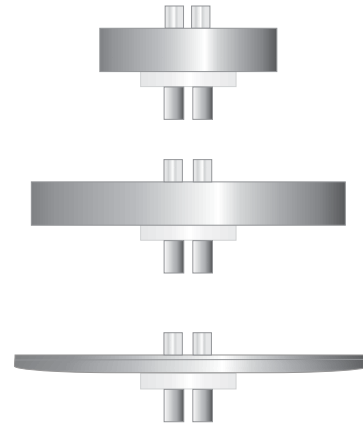
GENERAL PRODUCT INFORMATION:

This fixture is intended to be installed utilizing NEC compliant junction boxes with a minimum depth of 2".
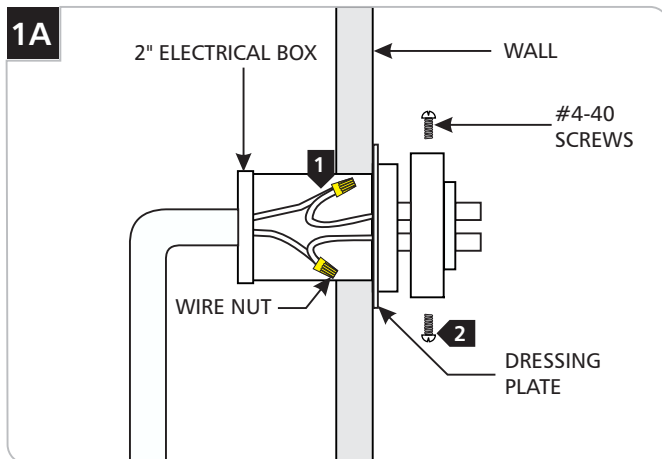
Minimum volume of the junction box must be 6 cubic inches (98 cubic centimeter).

This product is suitable for indoor dry locations only.

ETL LISTED c US
Intertek

> **NOTE:** The remote transformer should be installed prior to these steps. Refer to the instructions provided with the remote transformer.
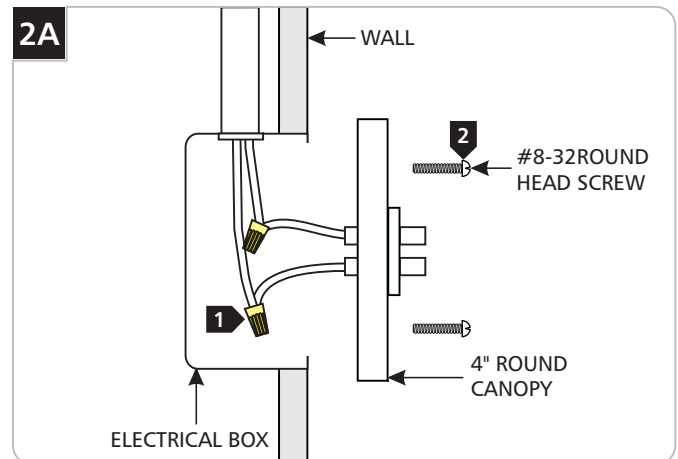
Install the 2" Square Power Feed Canopy

2" ELECTRICAL BOX
WALL
#4-40 SCREWS
WIRE NUT
DRESSING PLATE

> **NOTE:** 2" Electrical box should be installed prior to these steps. Refer to the instructions provided with the 2" electrical box.

1 ▷ Connect the power feed canopy wires to the low voltage wires coming from the remote transformer in the 2" electrical box with wire nuts.

2 ▷ Mount the 2" square canopy to the 2" electrical box with the two #4-40 screws.
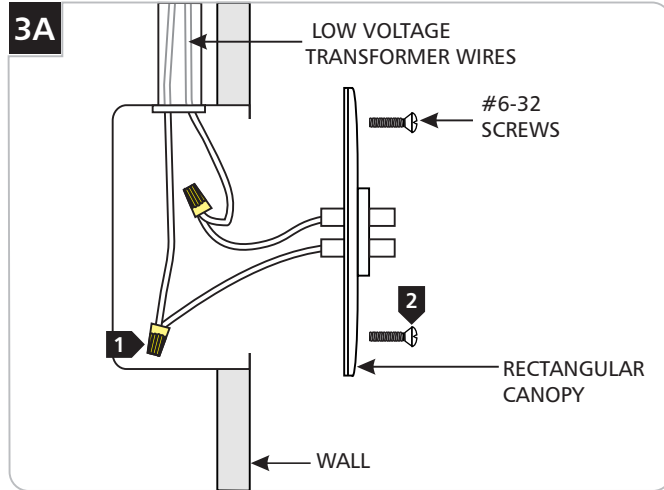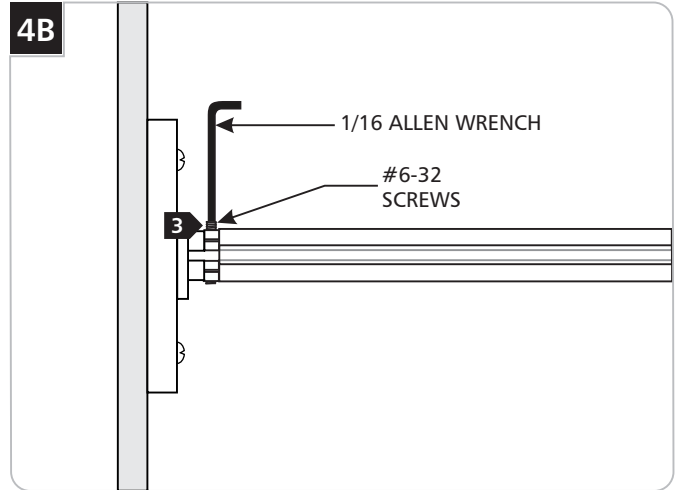
Install the 4" Round Power Feed Canopy

WALL
#8-32 ROUND HEAD SCREW
4" ROUND CANOPY
ELECTRICAL BOX

1 ▷ Connect the power feed canopy wires to the low voltage wires coming from the remote transformer in the electrical box with wire nuts.

2 ▷ Mount the 4" round power feed canopy to the electrical box with the two #8-32 screws.

> **NOTE:** Use the provided universal round crossbar when the canopy holes do not line up with the electrical box holes.
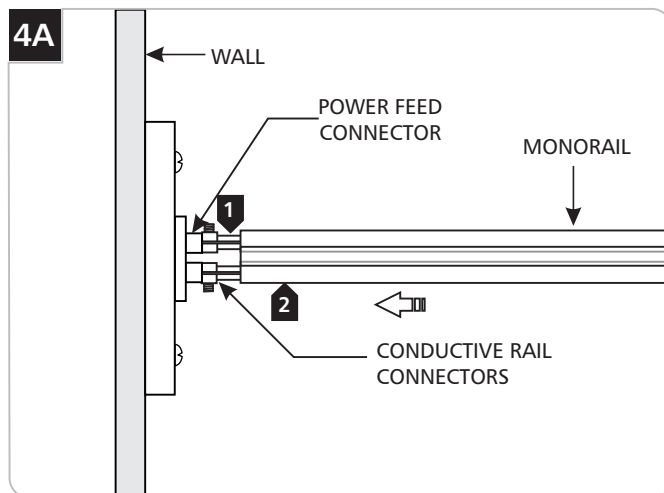
Install the Rectangular Power Feed Canopy

3A

LOW VOLTAGE TRANSFORMER WIRES

#6-32 SCREWS

1

2

RECTANGULAR CANOPY

WALL

1 ▶ Connect the power feed canopy wires to the low voltage wires coming from the remote transformer in the electrical box with wire nuts.

2 ▶ Mount the rectangular power feed canopy to the electrical box with the two #6-32 screws.

Connecting the MonoRail to the Power Feed Canopy

4A

WALL

POWER FEED CONNECTOR

MONORAIL

1

2

CONDUCTIVE RAIL CONNECTORS

1 ▶ Insert the conductive rail joiners into the power feed connectors.

2 ▶ Push the MonoRail completely onto the conductive connectors.

4B

1/16 ALLEN WRENCH

#6-32 SCREWS

3

3 ▶ Tighten the #6-32 set screws on the conductive connectors with the provided 1/16 Allen wrench.

SAVE THESE INSTRUCTIONS!

TECH LIGHTING®

7400 Linder Ave, Skokie, IL 60077
847.410.4400
www.techlighting.com

A Generation Brands Company