


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO. : DLC54	NAME: GLACIELLE CHANDELIER
MATERIAL TYPE:IRON, GLASS	FINISH:ANTIQUE BRASS, CLEAR
SOCKET TYPE: LED	SOCKET QTY: 24
BULB WATTAGE: LED 70W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT:56.8LBS

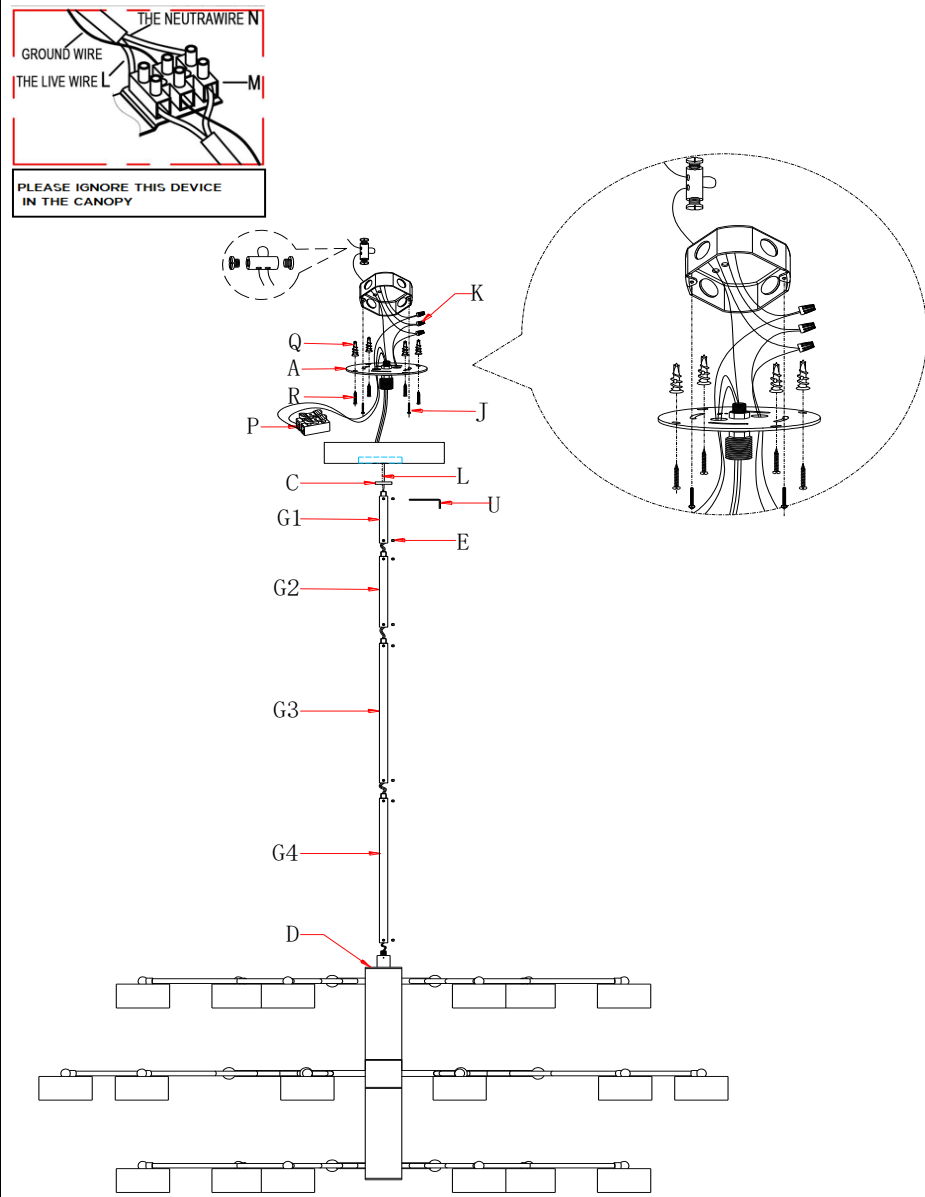

PARTS INCLUDED:

Mounting Plate (A)	Qty:1PC
Canopy (B)	Qty:1PC
Collar (C)	Qty:1PC
Lamp Body (D)	Qty:1PC
Hex Screw (E)	Qty:8PCS
Rod (G1, G2, G3, G4)	Qty:4PCS
Power Wire (L)	Qty:1PC
Fast Connector (P)	Qty:1PC

HARDWARE INCLUDED:

Mounting Screw (J)	Qty:2PCS	Allen Wrench (U)	Qty:1PC
Plastic Wire Connector (K)	Qty:3PCS	Metal Anchors (Q)	Qty:4PCS
Green Ground Screw	Qty:1PC	Strengthened Screw (R)	Qty:4PCS

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



WARNING:

The ceiling must have at least the capacity of 5 times the weight of the fixture (56.8lbs.). For this fixture, a minimum ceiling capacity of 284lbs. is required. The manufacturer and distributor accept no liability for incorrect installation.

This fixture must be mounted to the ceiling independent of an outlet box. Your ceiling may require modification to allow the mounting plate to be secured to a structural member. This fixture MAY NOT be secured using any type of hollow ceiling anchor, such as a toggle bolt.

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
 2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
 3. Gently pull wiring down from ceiling junction box and allow to hang.
 4. Pass the power wire (L) through the rod (G4),(G3),(G2)&(G1),screw the rod (G4) to lamp body (D) till tight, repeat the same operation on the rod (G3),(G2)and rod (G1). When you connect the rods, loosen the small hex screws (E) in the side hole first then tighten with Allen wrench (U) after all rods are connected. Be sure all the hexangular screws are tight enough.
 5. Remove mounting plate from the canopy by unscrewing the collar.
 6. Place mounting plate (A) on the ceiling outlet and mark center points for four mounting holes of Mounting Plate (A) on the ceiling. Remove mounting plate (A).
 7. Drill small holes on the marked location; the holes should be big enough to accommodate with Metal anchors (Q). Push metal anchors (Q) into the holes.
 8. Put the collar (C) and canopy (B) into the rod (G1) in turn, then pass the power wire (L) through the mounting plate (A).Screw the rod (G1) to the nipple of mounting plate (A) till tight.
 9. PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE WIRE TO THE TERMINAL BLOCK (M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.
 10. Carefully inspect the pendant's fixture wires.
Neutral fixture wire: White
Hot fixture wire: Black
Ground wire: Bare wire
 11. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
 12. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
 13. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
14. Gently tuck the wire connections (K) neatly into the ceiling junction box.
 15. Place the mounting plate (A) over the center of the ceiling junction box.
 16. Affix mounting plate (A) to ceiling outlet box. Insert Mounting Screws (J) into ceiling outlet and Strengthened Screw (R) to metal anchors (M) to secure Mounting Plate (A) to the ceiling.
 17. Push canopy up over the mounting plate until it is flush with the ceiling.
 18. Push collar through hole in canopy and thread onto nipple on the mounting plate. Secure by turning collar clockwise until canopy is flush with the ceiling.
 19. Restore power to junction box and test fixture.

Precaution: This product is suitable for TRIAC dimmer switch, switch model recommended:

LUTRON #DVL-153P
LUTRON #DVELV-300P

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS

WARNING:

INSTALL BEFORE RESTORING POWER AT THE BREAKER

LOW VOLTAGE LED DRIVER INSIDE.

**DO NOT APPLY POWER AT THE BREAKER
OR SWITCH UNTIL FIXTURE IS FULLY INSTALLED.
FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT
IN MALFUNCTION AND WILL VOID WARRANTY.**