

PALECEK®

601 PARR BOULEVARD | RICHMOND | CA 94801

PENDANT INSTALLATION INSTRUCTIONS

Monterey Large Chandelier

218379

PROFESSIONAL INSTALLATION REQUIRED

CAUTION: BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.

Important Safety Instructions:

- These instructions are provided for your safety. It is important that they are read carefully before use to ensure safe operation of the product.
- Installation by a licensed professional electrician required.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that minimum two people install the lighting fixture.
- This fixture has been rated for up to eight (8) **40-watt maximum E12 candelabra-base bulbs** (not included) or eight (8) **4.5-watt maximum** LED light bulbs (not included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- When used with a single length of hanging rods, the fixture weighs less than 50 lbs and can be supported by a regular ceiling junction box.
- When fully assembled with the optional extension rods this light fixture will weigh more than 50 lbs and therefore cannot be mounted directly to a standard ceiling junction box and may require additional support from a ceiling brace as needed.
- The lighting fixture is meant for indoor use, DRY LOCATIONS ONLY.
- Save these instructions.

WARNING:

- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- Check the cable properly for any loose or damaged connections.
- When the unit is no longer functioning, do not attempt to fix it by yourself. Only a qualified technician is allowed to disassemble and repair.
- If the external flexible cable cord of this luminaire is damaged it shall be exclusively replaced by a qualified electrician in order to avoid hazard.


Pre-Assembly:

- Remove all parts and hardware from the box along with any plastic protective packaging. Do not discard contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.

TOOLS REQUIRED (not included): Ladder, Drill, Phillips Head & Flat Blade Screwdrivers, Plier, Wire Cutter/Stripper, Pencil & Electrical Tape.


Parts List:

- A) Wire Connectors (3x)
- B) Mounting Plate
- C) Outlet Box Screws (2x)
- D) Mounting Screws (4x)
- E) Safety Cable
- F) Cable Lock Nut (3x)
- G) Canopy Screws (4x)
- H) Canopy
- I) Canopy Loop
- J) Connecting Rods (4x)
- K) Ground Wire
- L) Ground Screw
- M) Pendant Top Loop
- N) E12 Sockets (8x)
- O) Decorative Shade

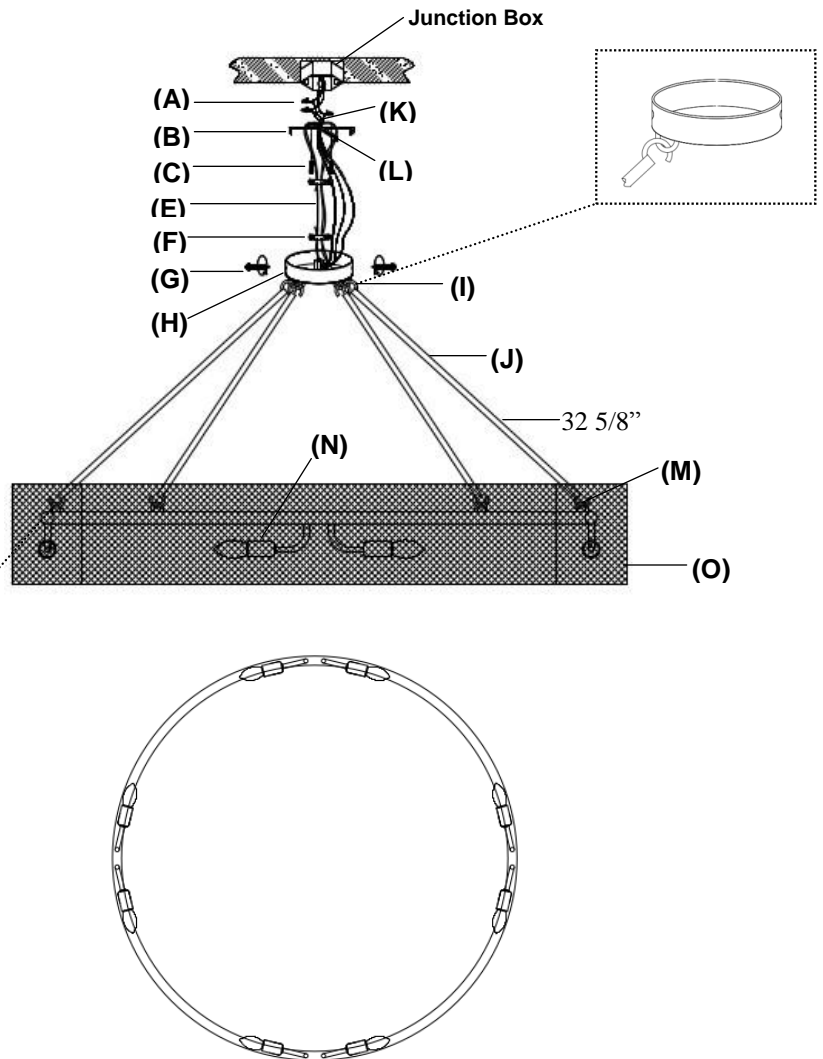

When used with a single length of hanging rods as shown here, the fixture weighs less than 50 lbs and can be supported by a regular ceiling junction box.

Extension Configuration

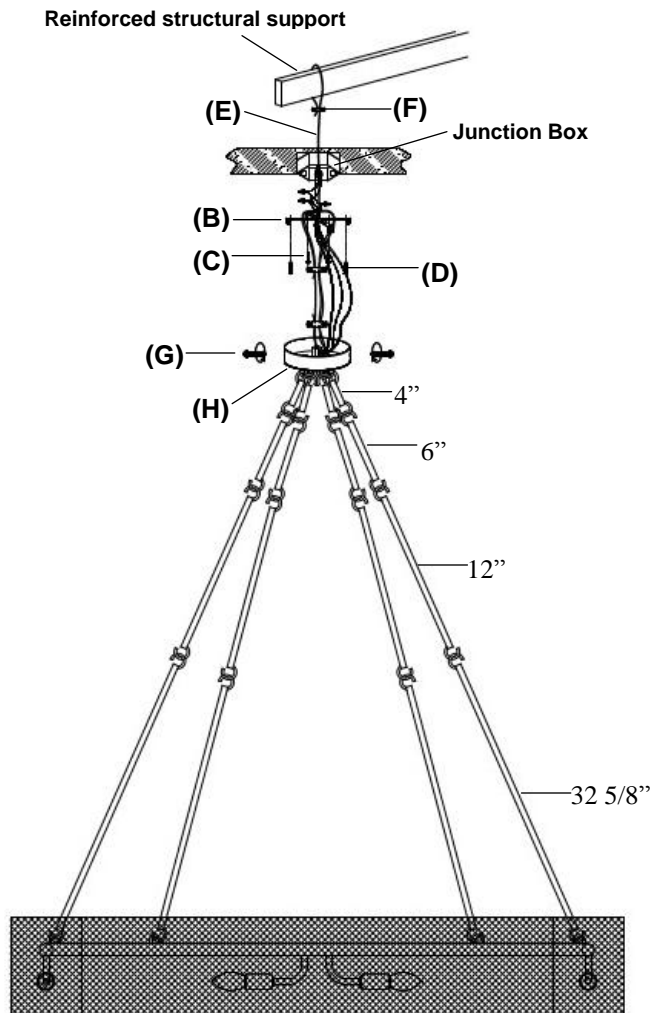

Note: When used in this configuration with extension rods, the weight of the fixture is in excess of 50 pounds.
THE LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF THE JUNCTION BOX.

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.

Gently pull existing wires down from the ceiling junction box and allow them to hang.

Using the Mounting Plate (B) hole as a template, mark and drill fixing holes in the ceiling. Attach the Mounting Plate (B) into a structural ceiling member using Mounting Screws (D). If you are unsure about what type of screws to use please consult your local hardware store to get the appropriate fittings.

Guide Safety Cable (E) exiting Canopy (H) through the opening in Mounting Plate (B) and into ceiling junction box. From above the ceiling junction box, loop Safety Cable (E) around an appropriate load bearing structure. Use Cable Lock Nut (F) to secure position of cable. Insert screws into both holes on Cable Lock Nut (F) and tighten it using screwdriver.

Establish electrical connections. Refer to step 4 below of the "Installation Instructions".

Installation Instructions:

1. **SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.**
2. Gently pull existing wires down from the ceiling junction box and allow them to hang.
3. Secure the Mounting Plate (B) to the Junction Box with the Outlet Box Screws (C). Tighten until snug.
NOTE: The Safety Cable (E) will secure the fixture for the inspection of branch circuit connections after installation. To adjust the Safety Cable (E), loosen the screws of the Cable Lock Nut (F) and adjust it according to your desired length. Insert screws into both holes on Cable Lock Nut (F) and tighten it using screwdriver. The length of the lamp's fixture wires should be longer than the length of the safety cable
4. **Establish electrical connections:**
 - a) Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white or ribbed insulation). Fasten each together with a Wire Connector (A) and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
 - b) Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black or smooth insulation). Fasten each together with a Wire Connector (A) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
 - c) Firstly, wrap the fixture's bare ground wire around the Green Ground Screw (L) marked as "GND" on the Mounting Plate (B), and tighten screw to secure the wire. Then connect this fixture's bare ground wire to the GROUND J-BOX WIRE (usually green insulation or bare wire) with a Wire Connector (A) and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
5. After all connections are made, attach the Canopy (H) to the Mounting Plate (B). Align the holes of the side portions of the Mounting Plate (B) with the holes located in the side of the Canopy (H). Using a screwdriver, insert the Canopy Screws (G) through each hole of the canopy and into threaded engagement with the mounting plate. Do not over-tighten the screws.
6. Insert eight (8) **40-watt maximum E12 candelabra-base bulbs** (not included) or eight (8) **4.5-watt maximum LED** light bulbs (not included) into the Sockets (N). **DO NOT EXCEED THE RECOMMENDED WATTAGE.**
7. Restore power to ceiling outlet junction box and test fixture.
8. Installation is complete.

Care Instructions:

- Do not use abrasive cleaning solution as it may cause damage to the fixture's finish.
- Wipe clean with a soft, dry cloth or static duster.

