

CERNE LARGE/EXTRA-LARGE FLUSH

KWFM19427/KWFM19527

General Product Information



Tools Required



Safety Information


SAVE THESE INSTRUCTIONS!


CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

USE MINIMUM 90°C SUPPLY CONDUCTORS.

DANGER! ⚡ SHOCK HAZARD DANGER!	Turn off electrical current at the source before working with any lighting fixture or portable lamp.
	Install and use this product in adherence with local electrical codes and regulations.

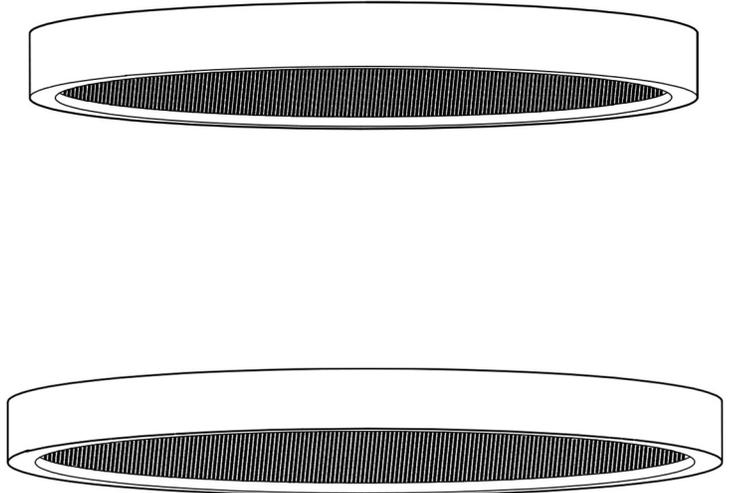

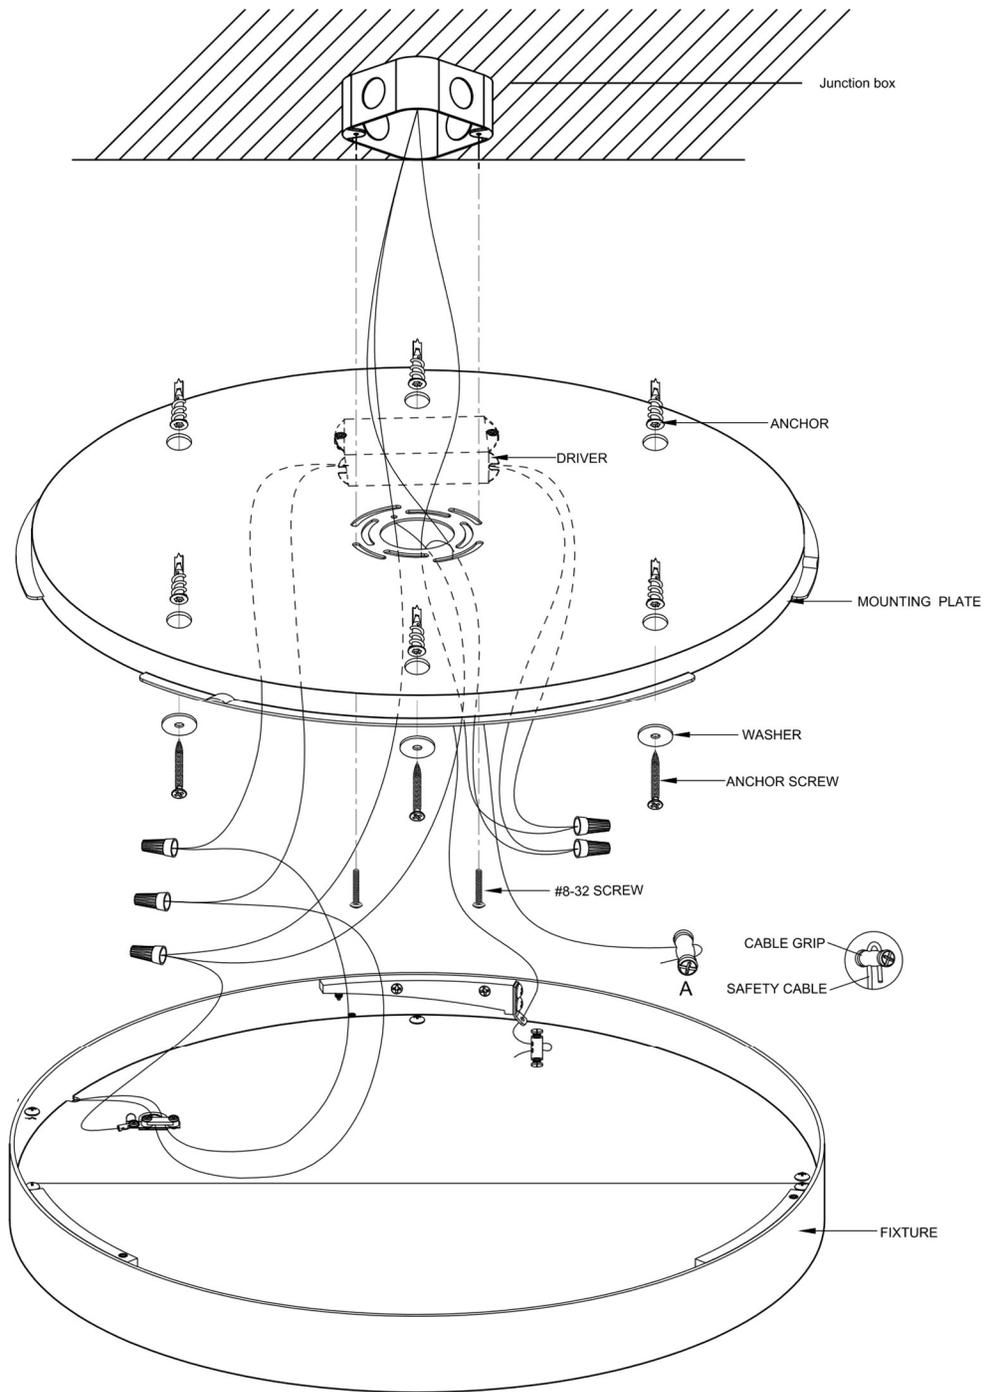

INSTRUCTIONS

I. Preparation

1. Remove the mounting plate from the fixture by turning it counterclockwise.
2. Install the mounting plate to the junction box with the two #8-32 screws (included), ensuring that the supply wires and the ground wire are accessible.
3. Line up an anchor tip with the center of an anchor hole, then push the anchor into the ceiling up to the threads.
4. Screw the anchor in the rest of the way with a Phillips-head screwdriver.
5. Repeat steps 3-4 for the remaining anchors.

6. Slide an anchor screw through a washer and screw it into an anchor to secure the mounting plate to the ceiling.
7. Repeat step #6 for the remaining anchor screws.
8. Remove the cable grips, pull the cable up and down through the mounting plate, feed the cables through the cable grips, and secure them to the mounting plate – as shown in area **A**.
9. Tighten the screws to secure the cables.

II. Wiring the Fixture

1. Connect the fixture to a suitable ground in accordance with local electrical codes.
2. Connect the following wires using a wire nut:
 - a) Input driver wire (white) to the neutral power line wire
 - b) Input driver wire (black) to the hot power line wire
 - c) Negative (-) fixture wire to the negative (-) output driver wire
 - d) Positive (+) fixture wire to the positive (+) output driver wire

III. Installing the Fixture

1. Neatly place the wires and wire nut connections inside the fixture.
2. Apply label **931CERNEF** to the ceiling and align radially with label **931CERNED (Location A)** on the mounting plate.
3. Apply label **931CERNEA** to the outside of the housing and align the arrow (on the left) with label **931CERNEB (Location B)** inside the housing.
4. When installing the housing, line up the arrow (on the left) with label **931CERNEE (START POINT)** on the mounting plate.
5. Rotate the housing until the right arrow passes the locked arrow on the label applied to the ceiling.
6. Remove the labels from the outside of the housing and ceiling.