



LEANO 13 & 20 PENDANT

SLPD637; SLPD641


General Product Information




SAVE THESE INSTRUCTIONS!




INDOOR




NEC COMPLIANT JUNCTION BOX




DAMP LOCATION SAFE




BULB(S) (NOT INCLUDED)




CONVERTS TO LED




ADAPTABLE TO SLOPED CEILINGS



PLEASE SEE visualcomfort.com FOR PRODUCT SPECS



CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!



BEST PRACTICE: HANDLE FIXTURE WITH GLOVES



Tools Required/Suggested



ELECTRIC DRILL



PHILLIPS-HEAD SCREWDRIVER



WIRE CUTTER




PENCIL/MARKER

Safety Information

CAUTION-RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

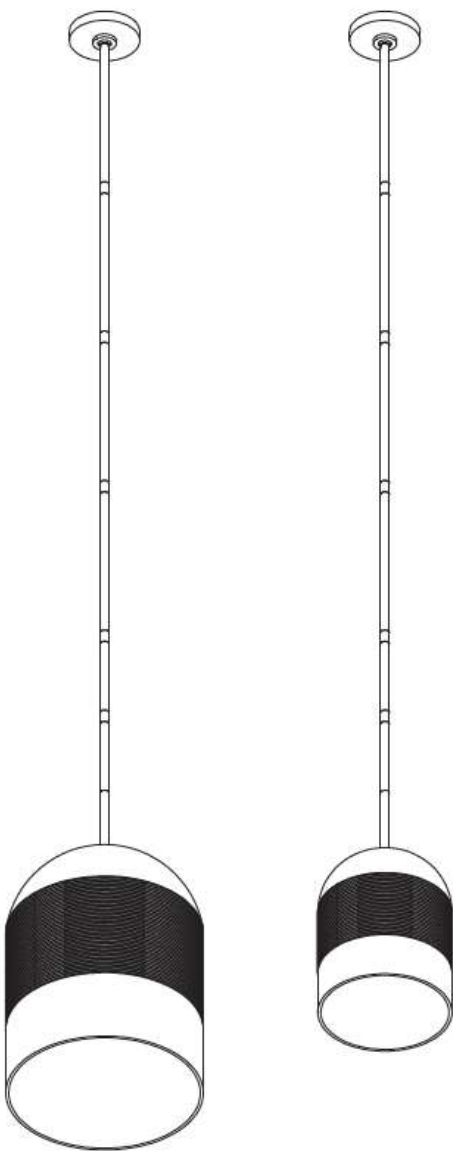

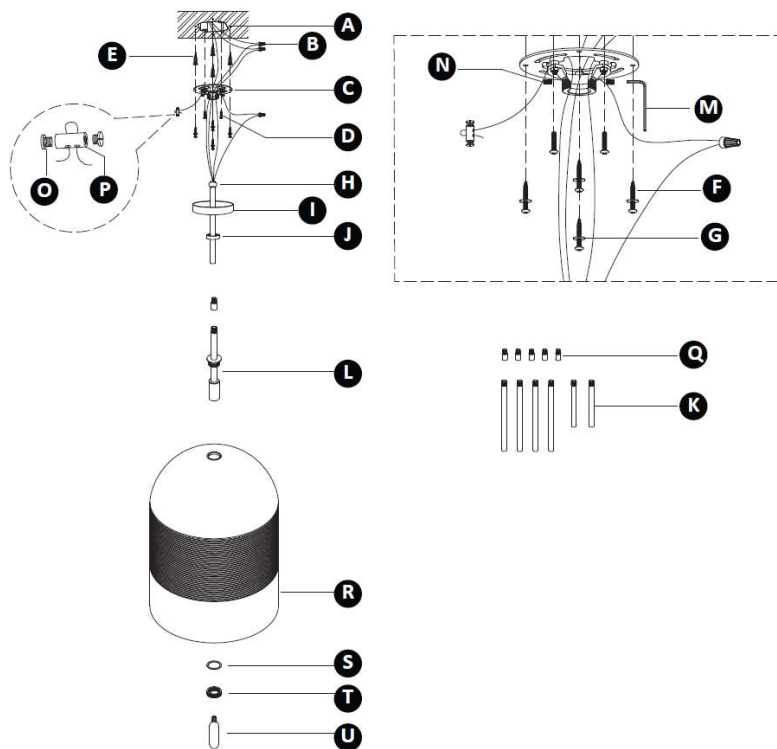

FIXTURE PARTS

- A. Junction Box
- B. Wire Nut Connections
- C. Mounting Plate
- D. Mounting Screws
- E. Anchor
- F. Anchor Screws
- G. Washers
- H. Swivel Ball
- I. Canopy
- J. Collar Nut
- K. Stem Assembly
- L. Fixture
- M. Allen Wrench
- N. Set Screws
- O. Cable Lock Screws
- P. Cable Lock
- Q. Connector (Optional)
- R. Shade
- S. Rubber Washer
- T. Shade Ring
- U. Light Bulb (Not Included)

INSTRUCTIONS

I. Preparing the Fixture

1. Unbox and inspect all items included in the fixture's packaging. Place all parts gently on a clean, soft surface.
2. Unscrew the collar nut to detach the mounting plate from the canopy.
3. Align the mounting plate with the junction box and mark the anchor positions. Drill holes at the marked locations using a drill bit slightly smaller than the anchors, then insert and screw the anchors into place with a screwdriver.
4. Attach the mounting plate to the junction box using the mounting screws. Slide the washers onto the anchor screws, then drive them into the anchors to securely fasten the mounting plate to the ceiling.
5. Determine the desired fixture height and select the appropriate combination of stems and optional connectors.
6. Feed the fixture wires and safety cable through the stems and connectors. Securely screw the stems and connectors together to complete the assembly.
7. Continue feeding the fixture wires and safety cable through the collar nut, canopy, and swivel ball.
8. Holding the fixture upright, slide the collar nut and canopy down the stem and rest them on top of the fixture. Then screw the stem assembly onto the top of the fixture and attach the swivel ball onto the top of the stem assembly.
9. Trim any excess fixture wires, leaving enough length to reach the junction box. Separate the wires and strip 5/8" of insulation from each conductor.

II. Wiring & Installing the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. Slide the swivel ball assembly onto the screw collar portion of the mounting plate. Use the Allen wrench to tighten the set screws and secure the swivel ball in place.
3. Feed the safety cable through the hole in the mounting plate. Attach the cable lock to one end of the cable, then insert the free end back through the lock. Tighten both cable lock screws with a screwdriver to secure the safety cable.
4. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to a suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around, or a house wire (green or bare copper wire without insulation).
5. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a. Hot fixture wire (black) and hot power line (usually black) from the junction box (hot to hot)
 - b. Neutral fixture wire (white) and neutral power line wire (usually white) from the junction box (neutral to neutral)
6. Carefully tuck all the wires behind the mounting plate into the junction box.
7. Attach the canopy to the mounting plate and secure it in place by tightening the collar nut.
8. Remove the rubber washers and shade rings from the sockets. Place the shades onto the sockets, then secure them using the rubber washers and shade rings.
9. Install the bulbs (not included) into the sockets. Refer to the socket label for the maximum wattage rating.

III. Adjust Fixture Level (Optional)

1. Loosen the collar nut and carefully slide the canopy down the stem assembly, resting it on top of the fixture body. Be sure to slide the components slowly to avoid damage.
2. Use the Allen wrench to loosen the set screws. Adjust the fixture until it is level, then retighten the set screws to secure it in place.
3. Slide the canopy back up and secure it to the mounting plate by tightening the collar nut to complete installation.