


## **MILE 01, 02, 03**



- To be installed by an electrician to an electrical box
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet on our web site
- Should be used exclusively as a lamp and not as a shelving, display or hanging unit

**lamp weights 4-9 lbs.**

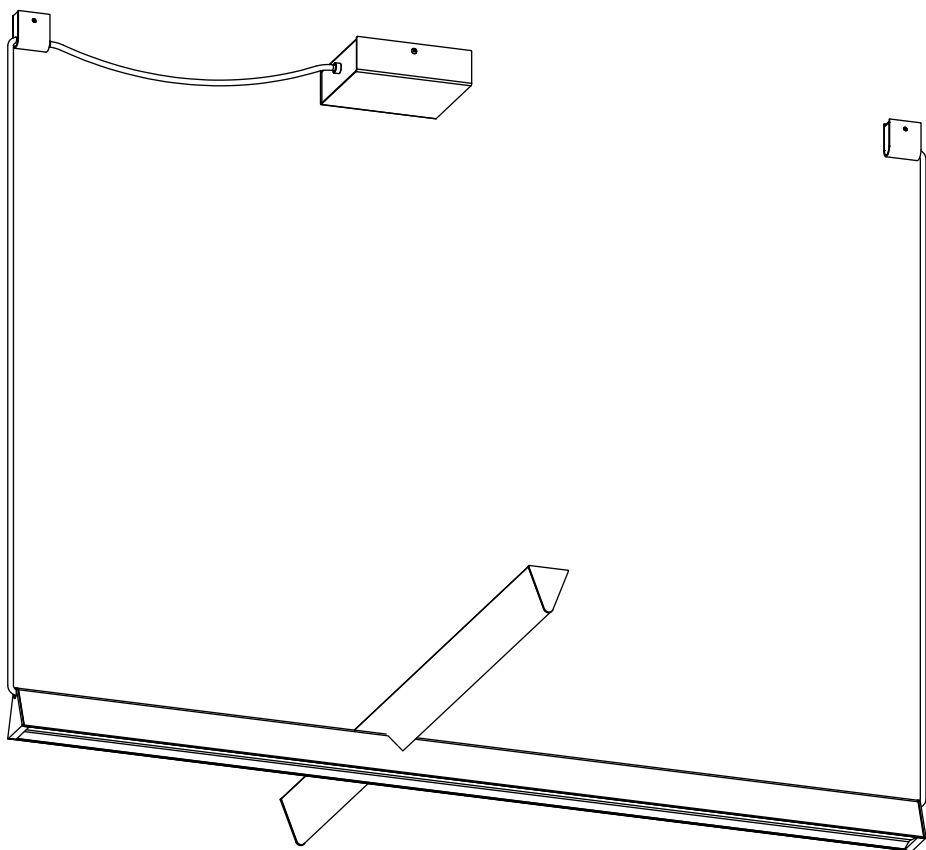

**NEVER TURN ON POWER SUPPLY  
UNTIL CONNECTIONS AND  
INSTALLATION ARE COMPLETED.  
DOING OTHERWISE COULD BE  
HARMFUL TO YOUR LUMINAIRE.**



### **PLEASE NOTE**

**THIS IS AN EXAMPLE OF THE MILE 01.  
HOWEVER, THE MILE 02 AND 03 FOLLOW  
THE SAME INSTALLATION PROCESS.**



1

Remove endcap on short side of uplight.


It is held in place with a magnet.

Pull tape up to remove lens

then **remove tape**.

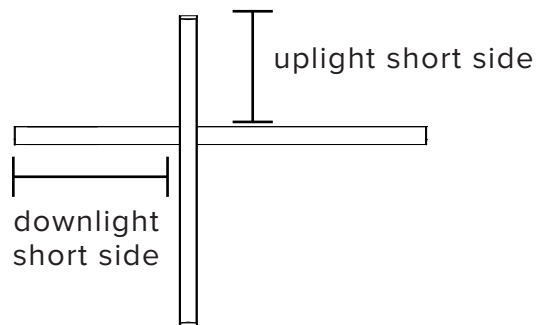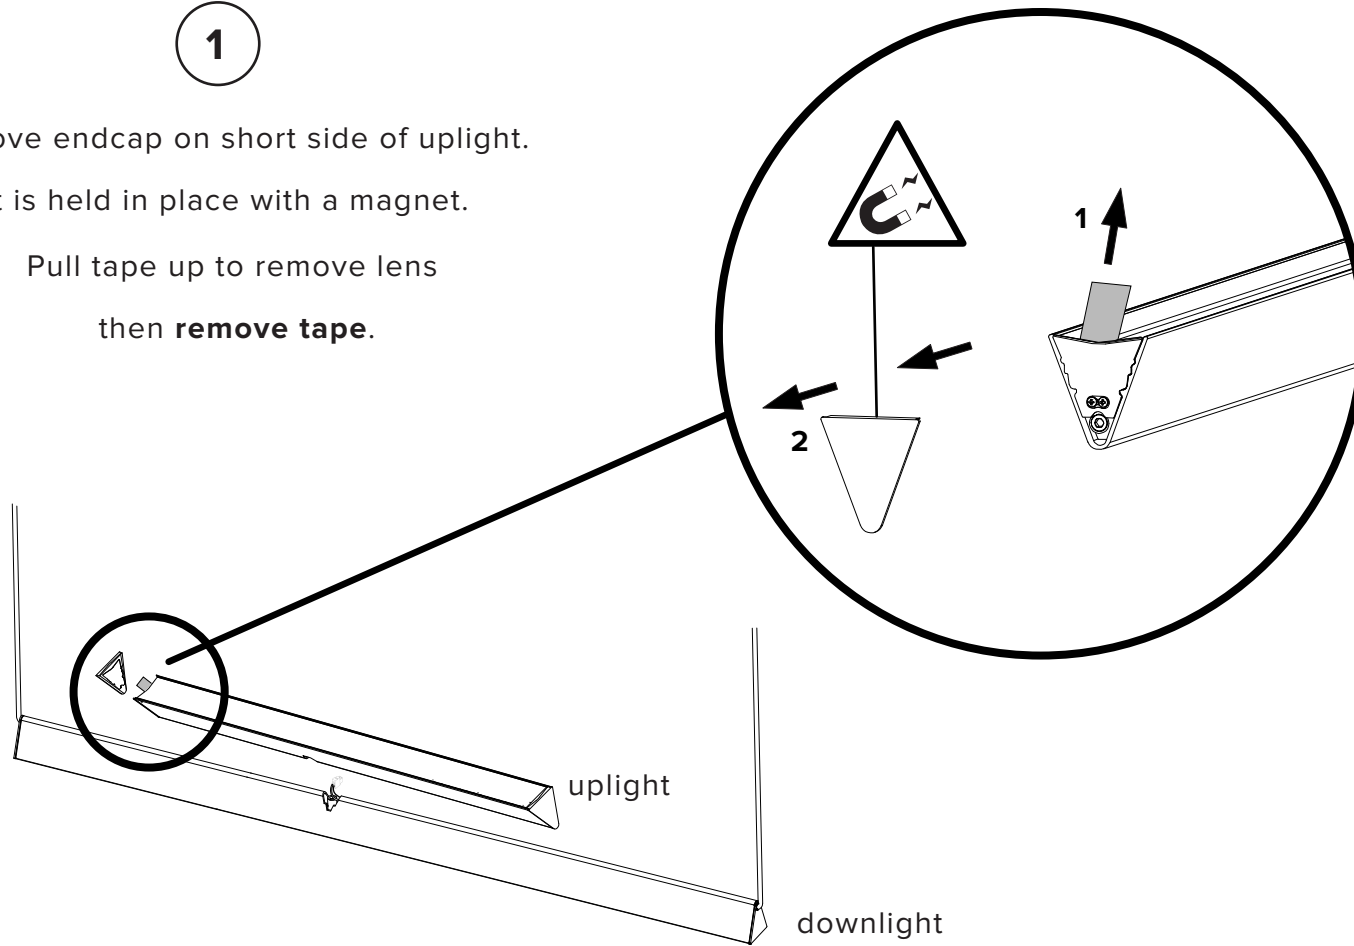


**Becaretul that the endcap doesn't  
stick to other surfaces which could  
result in scratches in the paint.**

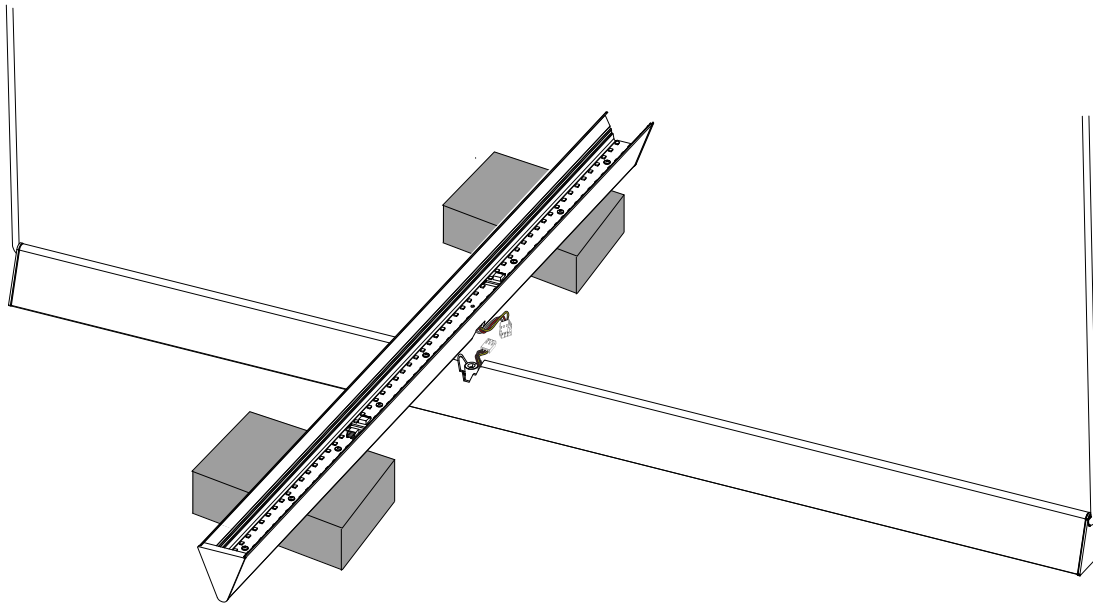


2

Before connecting the two sections of your luminaire, rest the uplight on the foam in which it was shipped.

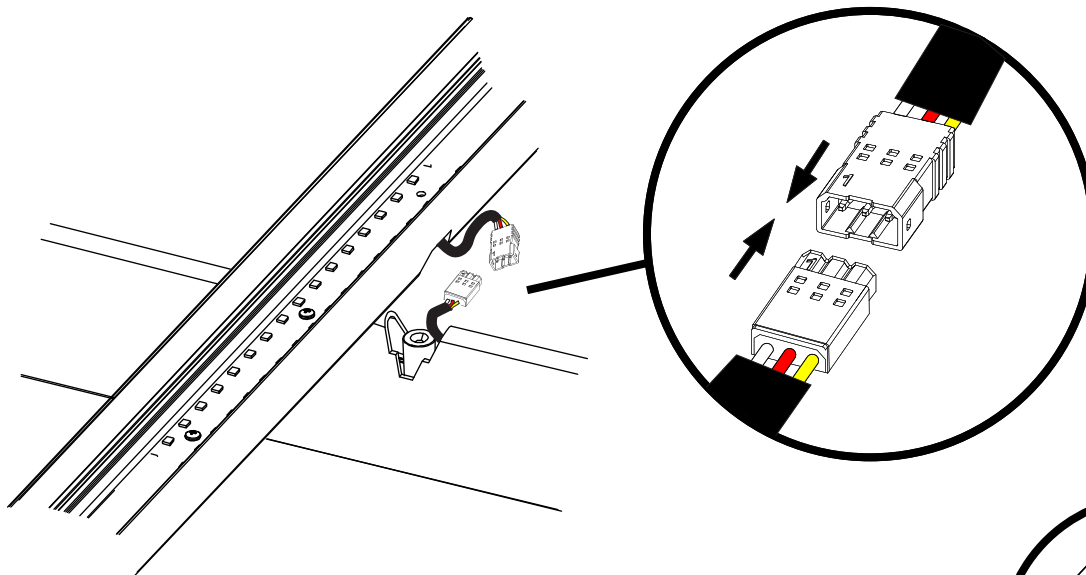

3


Make the connection between the two sections. Then carefully push them back into the uplight long side.

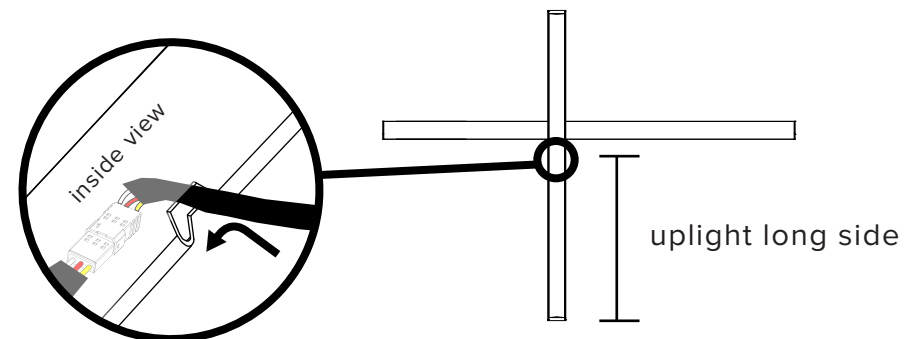


**4**

Reorientate uplight into the  
slot of the downlight.


Screw it into place with  
provided allen key.

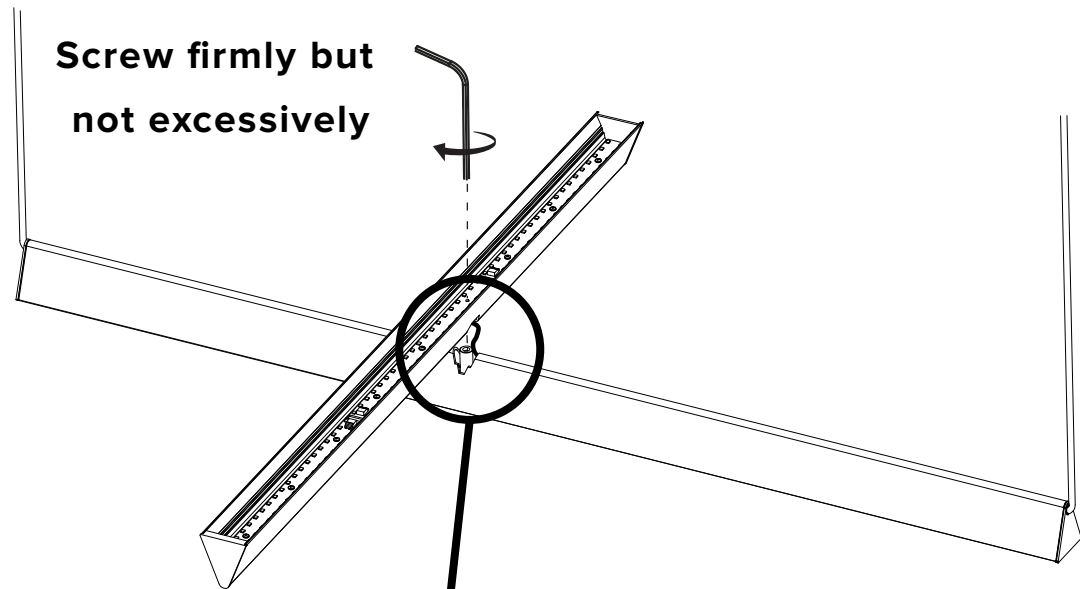

While you bring the two extrusions  
together ensure to place the downlight  
wires next to the anchor. Make  
sure the wire does not sit on top of  
the anchor and that it does  
not get pinched or scuffed.

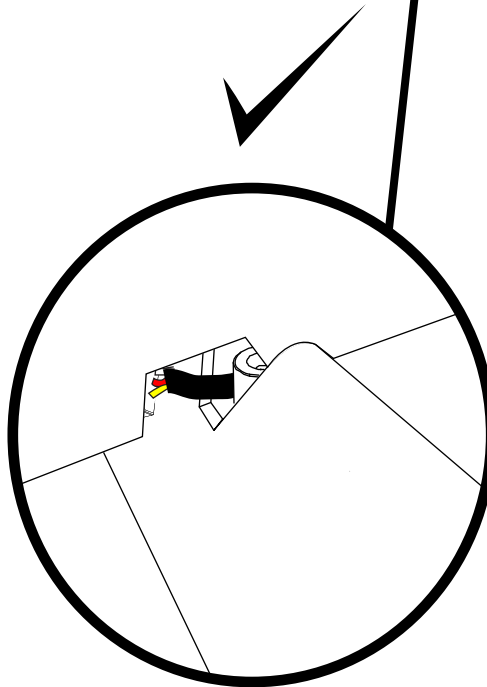


**X**

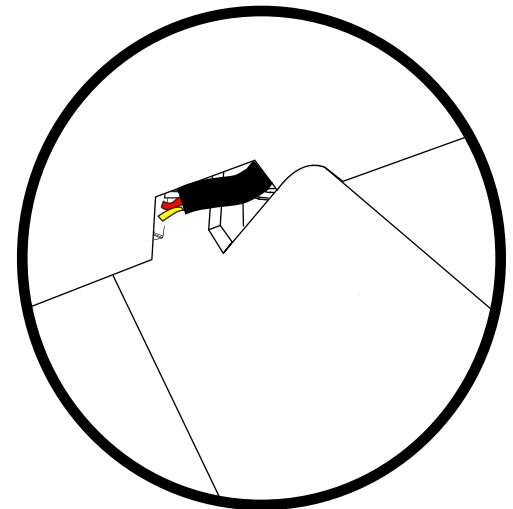

**5**


Slide lens into opposite endcap (1)  
then snap lens back into slots (2).  
Replace endcap (3).

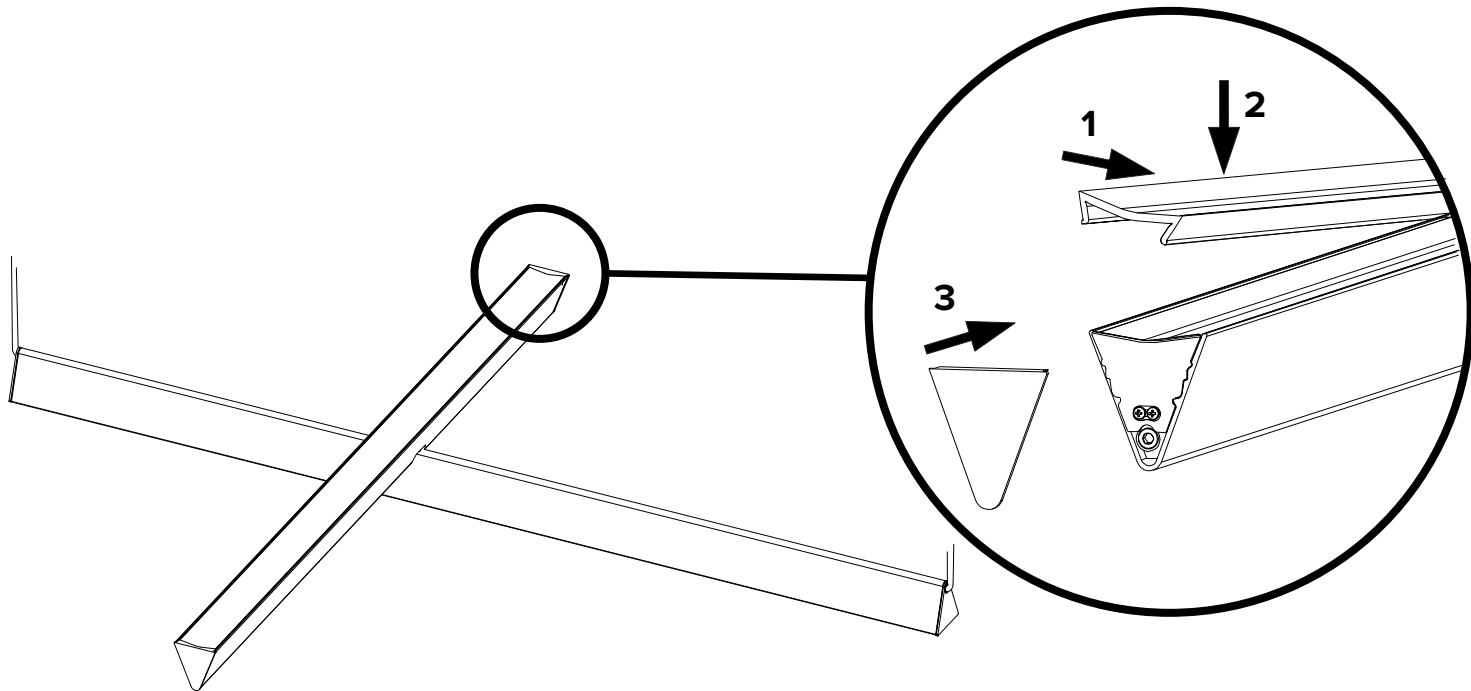

6

## Mark anchor locations



Be sure all ceiling holes are aligned.  
We recomend you mount luminaire with  
uplight aligned with junction box.

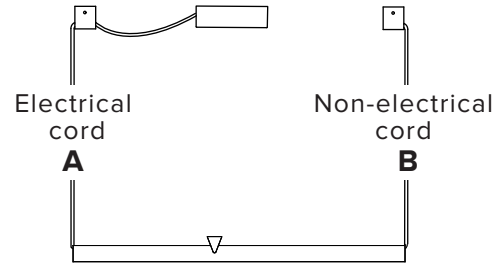



**Make sure to use appropriate  
anchors for ceiling material**

1" 25 mm Please note the edge of  
your luminaire will be  
1" from your anchor hole.

**MILE 01  
&  
MILE 03**

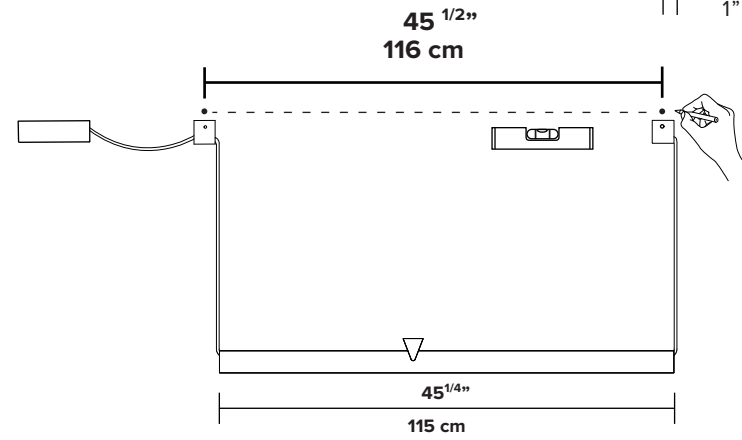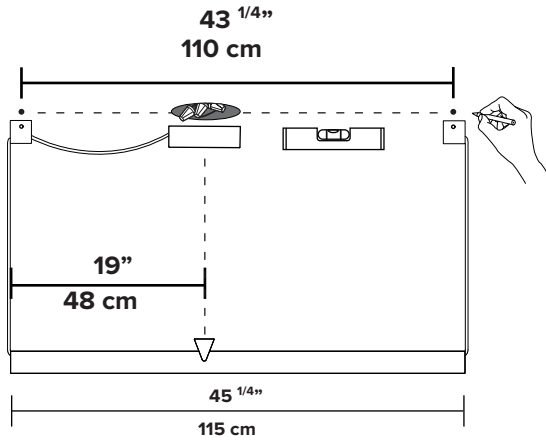



**MILE 02**

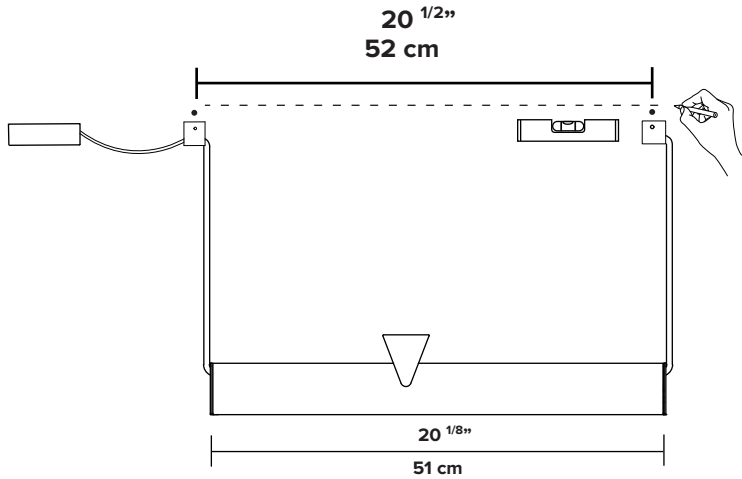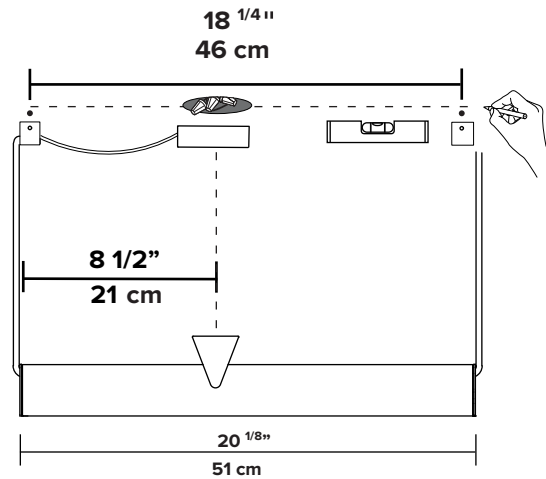


7

**Mount double hole anchor  
with electrical cord.**




Pull wires to straighten them before  
mounting them.

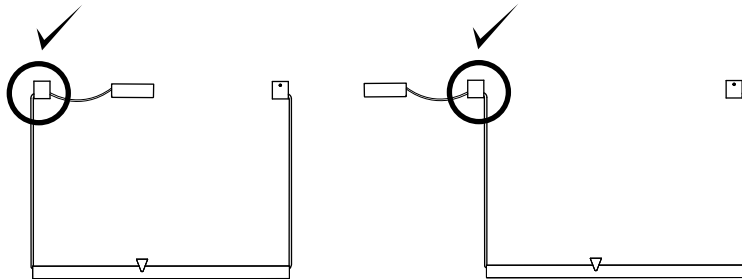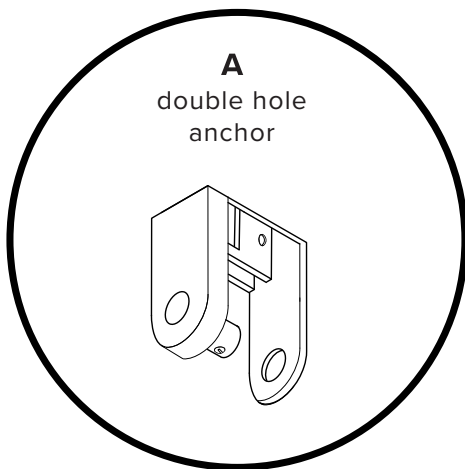



**Make sure to use appropriate  
anchors for ceiling material**

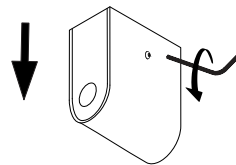

Remove or install  
cover by screwing and  
unscrewing set screw.

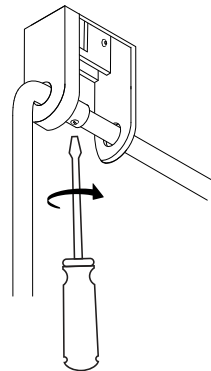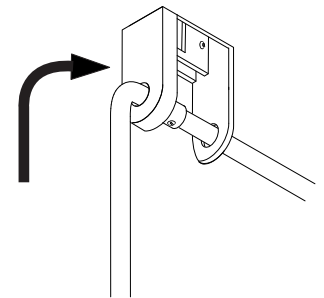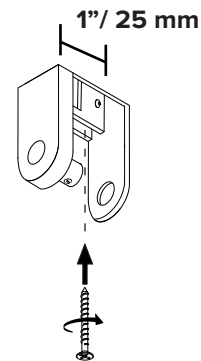

Screw gently, but firmly

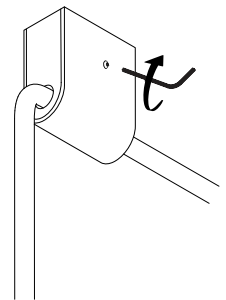
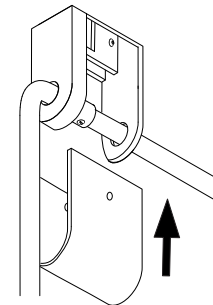


8

Mount single hole anchor with  
non-electrical cord.


Pull wires to straighten them before  
mounting them.

**B**  
single hole  
anchor

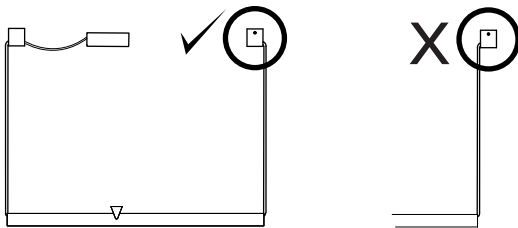
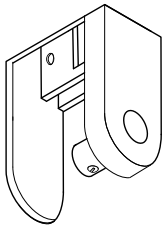


Make sure to use appropriate  
anchors for ceiling material



1" / 25 mm

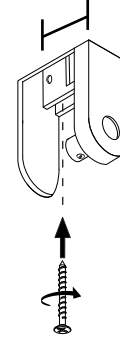

Remove or install  
cover by screwing and  
unscrewing set screw.

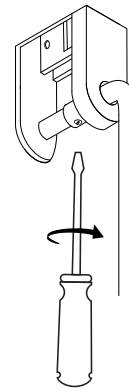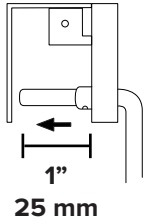

Screw gently, but firmly

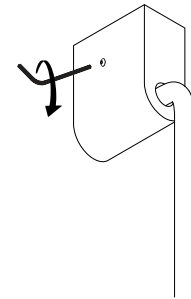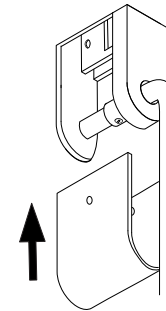




## INSTALL EXTENSION HARNESS TO LINE/MAIN VOLTAGE


9

Open canopy cover.  
It is held in place with  
2 screws.

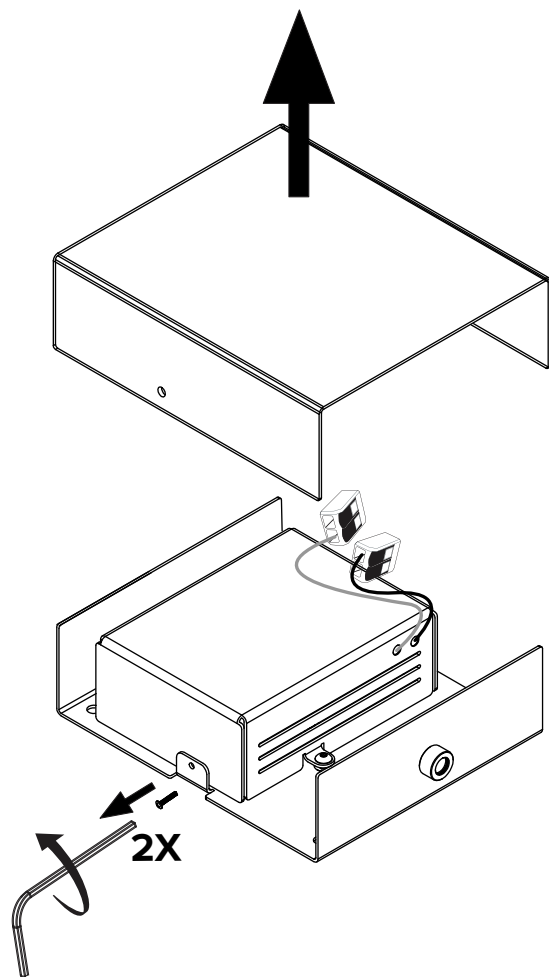

10


Unscrew provided driver  
housing. It is held in  
place by two screws.  
Place the housing aside.

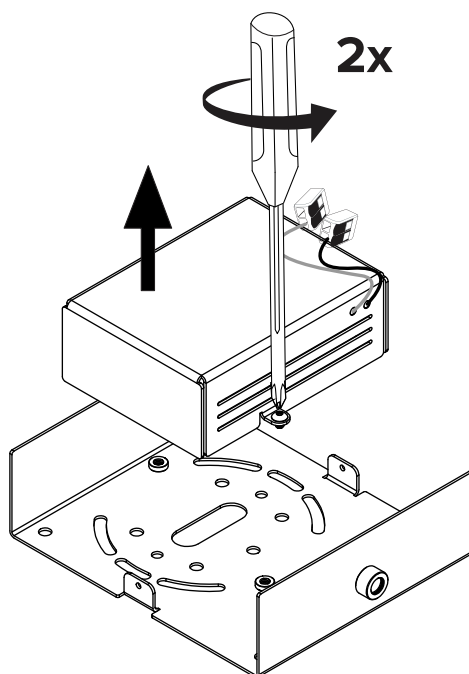


11

Connect the  
extension harness to the  
junction box if necessary.


The harness  
is shipped with the canopy.

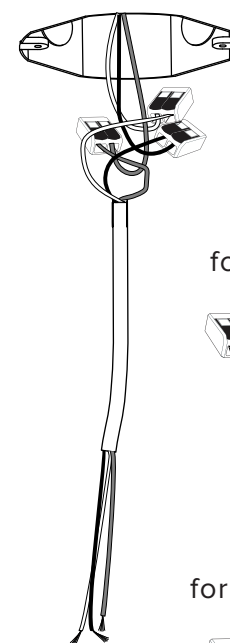

for 120 V wiring

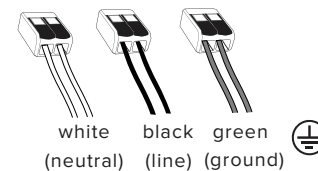


for 220-240 V wiring

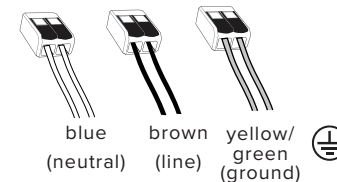

# MOUNT CANOPY BRACKET


12

The canopy can either be mounted to the junction box or directly to the ceiling using appropriate holes.

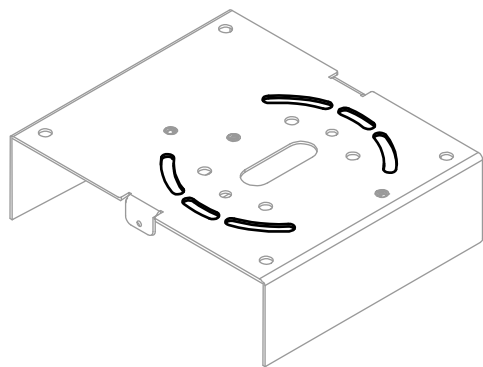


To junction box

OR



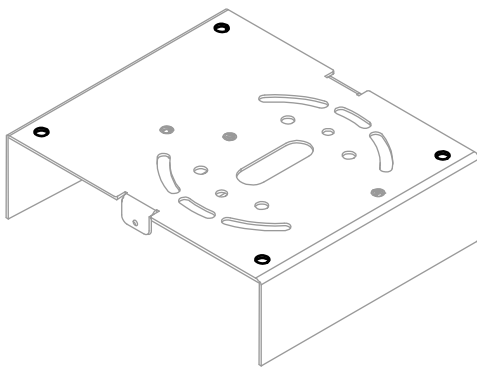


directly to the ceiling  
\*use appropriate anchors

Pass the extension harness through center hole of canopy.

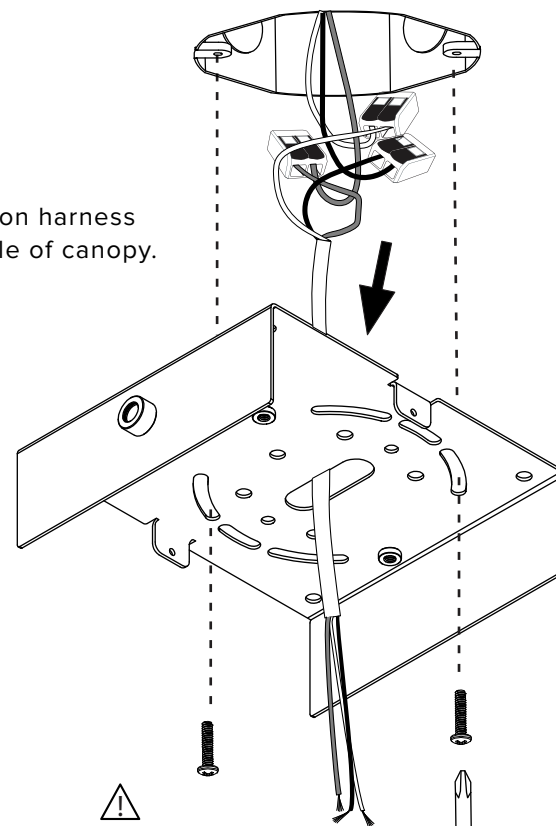


Ensure no wires are clipped or pinched during these steps.

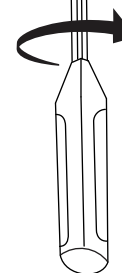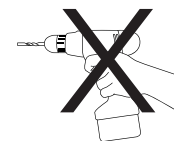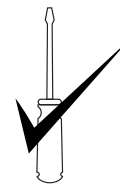

# CONNECT EXTENSION HARNESS (ELECTRICAL BOX) TO DRIVER'S AC INPUT WIRES


13

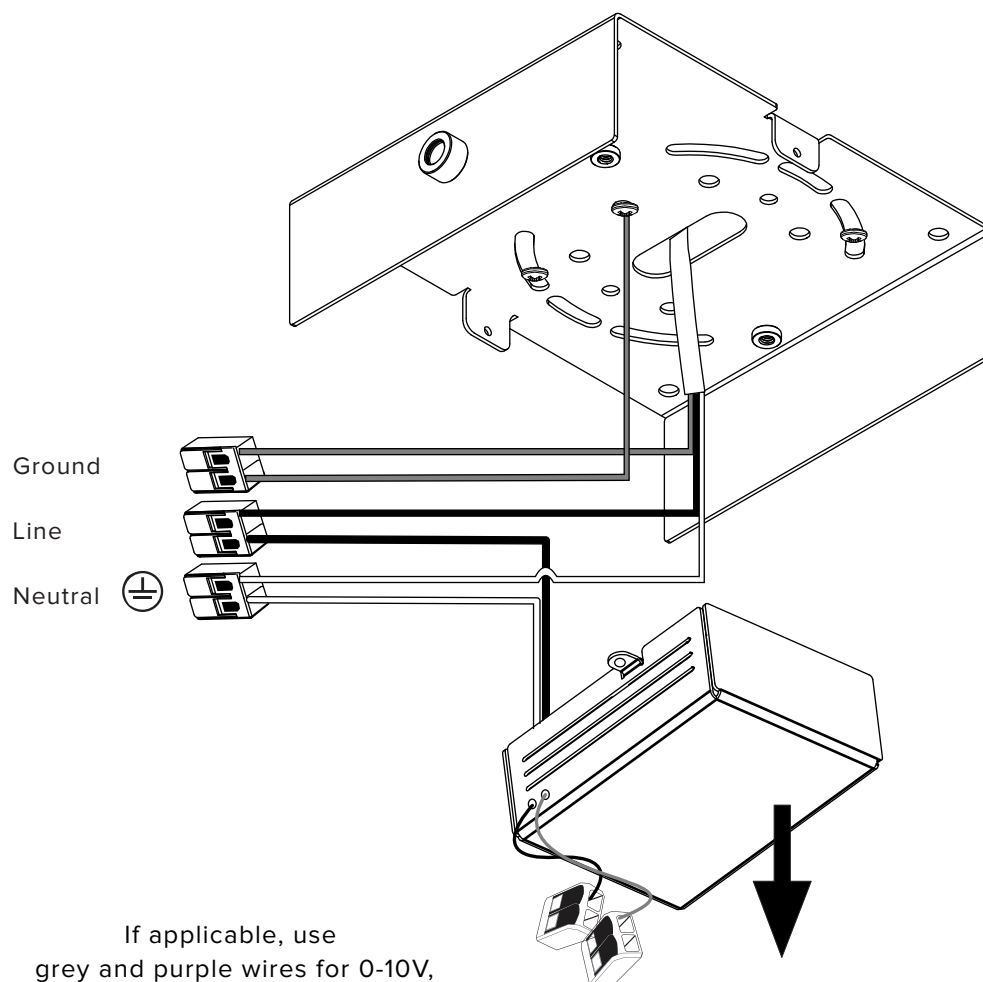


If applicable, use  
grey and purple wires for 0-10V,  
or orange wires for DALI  
dimming circuit before closing  
the driver housing.



for 120 V wiring

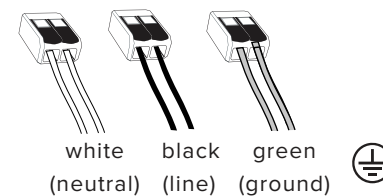


for 220-240 V wiring

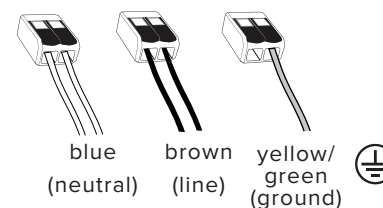

**14**

Carefully close driver enclosure. It is held by two screws.


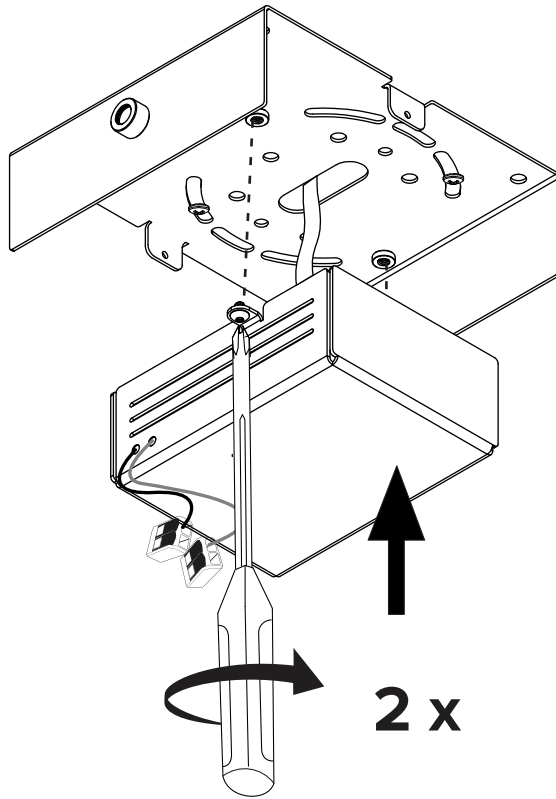


Ensure no wires  
are clipped or pinched  
during these steps.

**15**

Feed luminaire cord into  
the canopy strain relief.


Tighten strain relief  
set screw when desired  
cord length is reached.

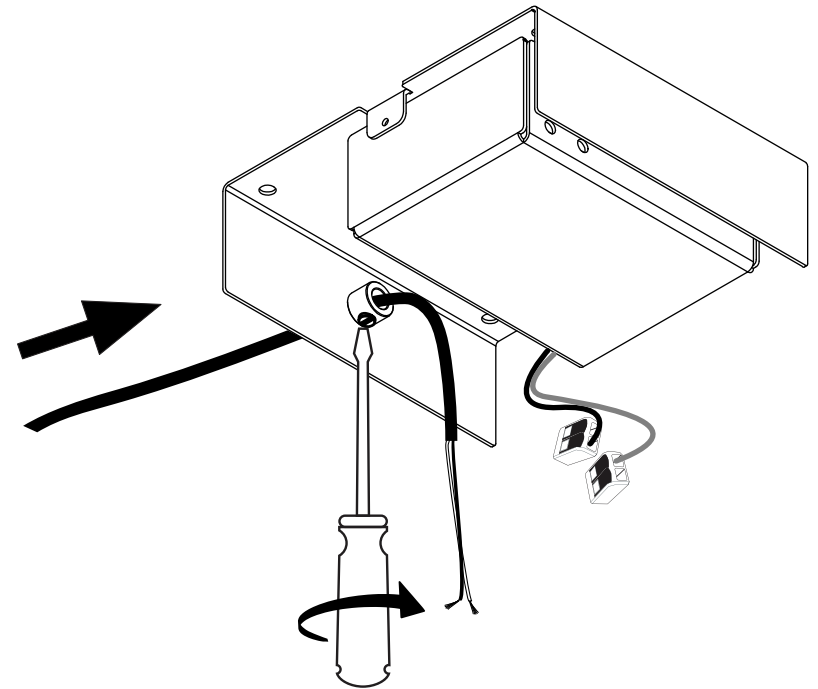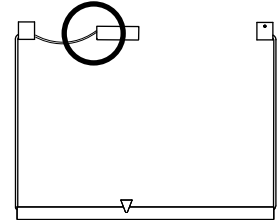

\*screw gently but firmly

## CONNECT LUMINAIRE CORD TO DRIVER DC WIRES

16

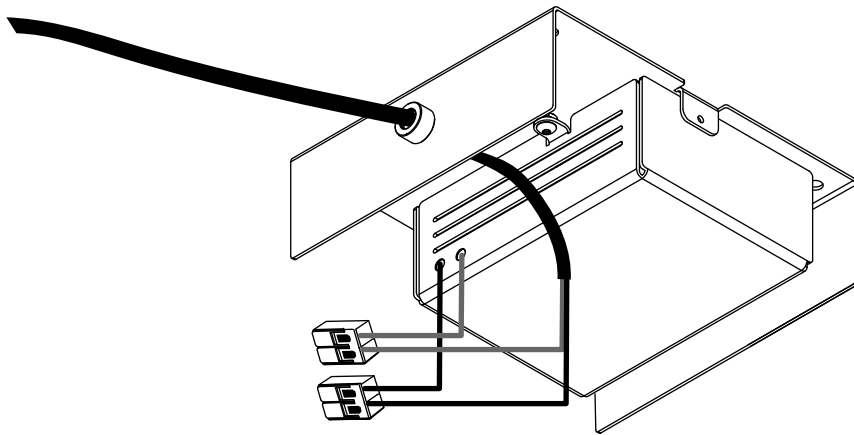

6" (153 mm)

Cut green/yellow  
as short as possible.  
It is not used in  
this assembly

Depending on your location,  
the luminaire cord will either be  
Blue (+) and brown (-)


or

White (+) and Black (-)




BLUE (+) BROWN (-)

OR

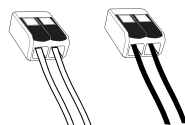

WHITE (+) BLACK (-)

17

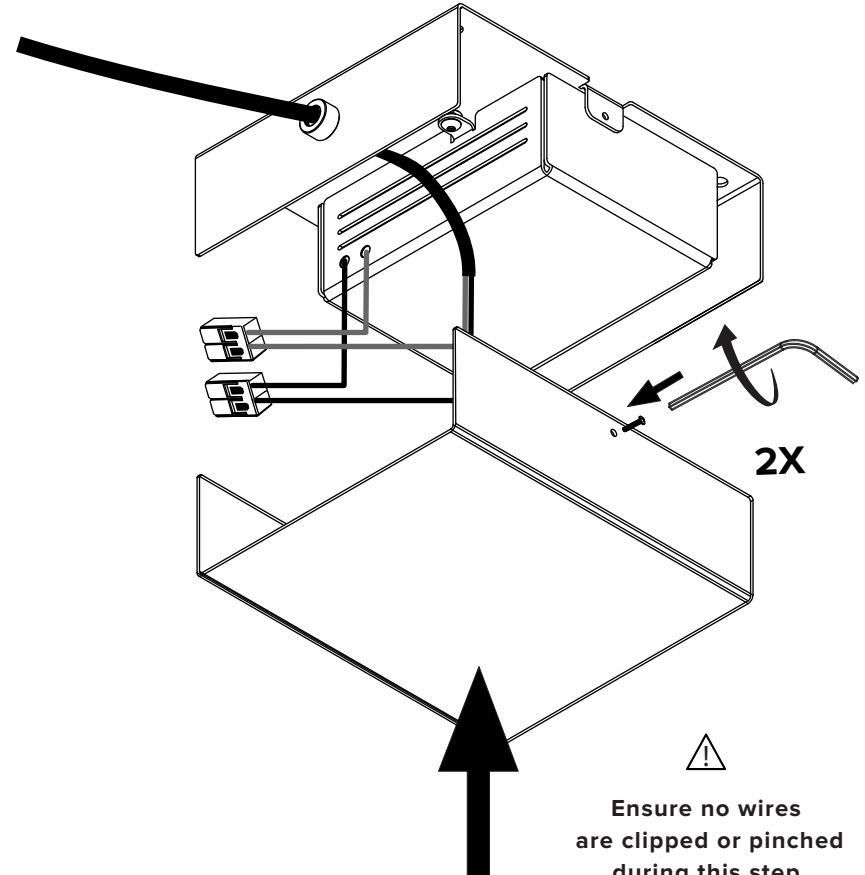

Ensure no wires  
are clipped or pinched  
during this step.


# LEVELING THE LUMINAIRE



**Before adjusting wire length or interior weight, carefully attempt to balance the luminaire by hand. The wire's flex can allow micro adjustments of their own.**


18

if necessary level  
downlight by adjusting  
length of wires.

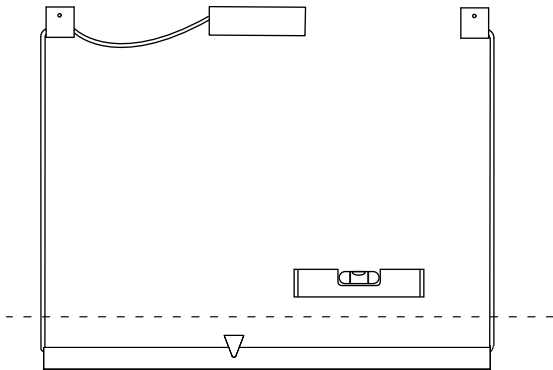


19

Should uplight adjustments  
be needed, remove endcap  
on short side arm.

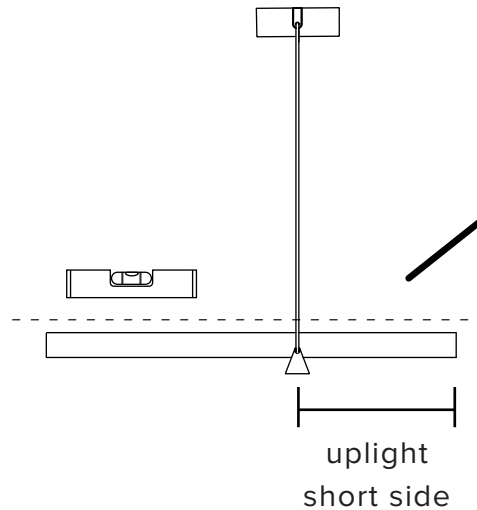

Endcap is held in place  
with a magnet.

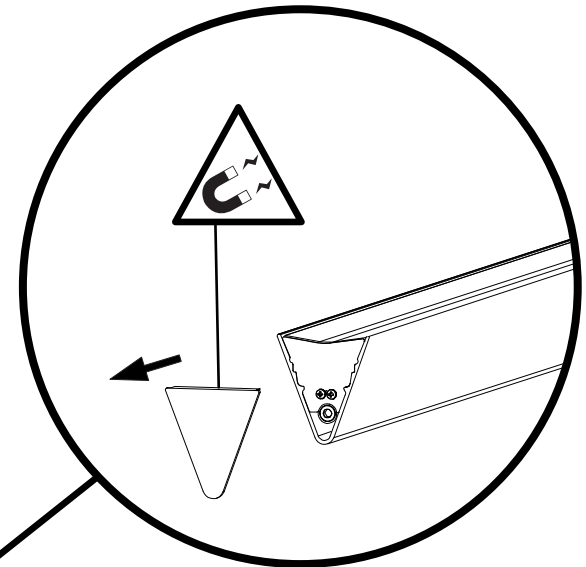



20

The adjustment screw holding the balance weight is now visible. Use supplied allen key to screw weight in or out depending on balance.



**Note that the endcap affects final balance of luminaire!**


Luminaire will not appear balanced until the cap is in place.

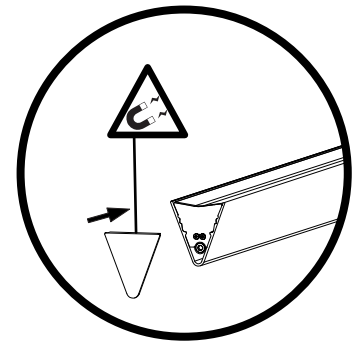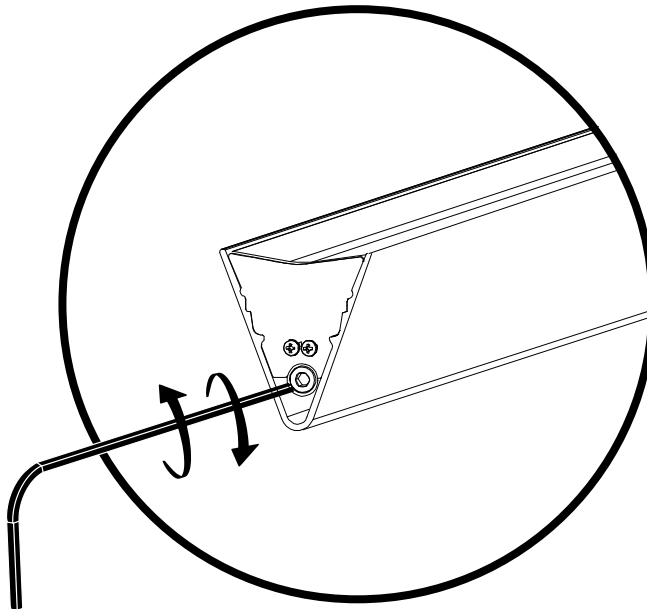


Replace endcap when adjustments are complete



Screw clockwise to pull weight towards you.

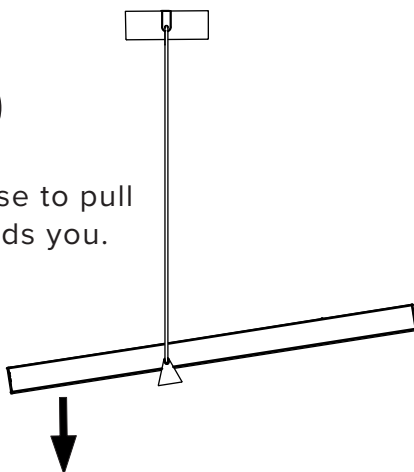

Screw counter-clockwise to push weight away from you.

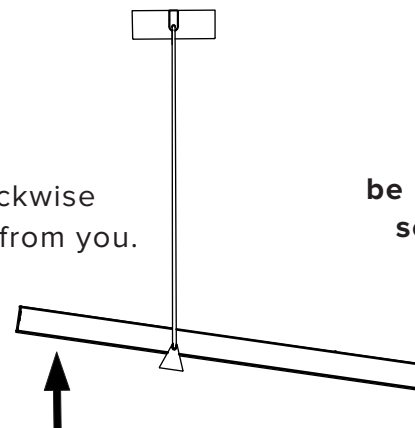

**Readjustments may be required as your luminaire settles and the wires flex.**