


INSTALLATION INSTRUCTIONS

For Item No. T25091B

IMPORTANT SAFETY INSTRUCTIONS: Read all the instructions before installation.

Installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations is recommended. All parts must be used as indicated.

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

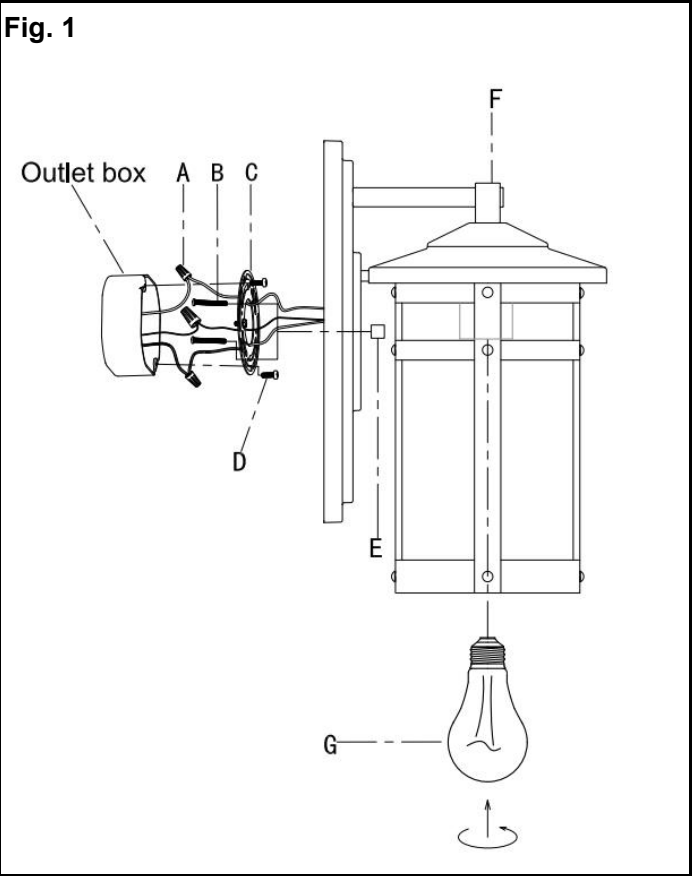

HANGING THE FIXTURE (Fig. 1)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Thread the 2 mounting screws (B) into the mounting plate (C) spaced the same distance apart as the holes in the fixture back plate. (You can adjust the length of the screws if necessary.)
4. Attach the mounting plate (C) to outlet box (not supplied) with mounting screws (D). Ground Wire must face out.

CONNECTING THE WIRES (Fig. 2).

5. Connect the electrical wires as shown in Fig.2. Making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw provided.

COMPLETING THE INSTALLATION (Fig.1)

6. Align the fixture (F) to mounting plate (C) and secure with the decorative nut (E).
7. Install the bulb (G) (E26 Medium base, not included) in accordance with the fixture's specification.
8. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back plate where it meets the wall leaving a space at bottom to allow moisture a means to escape. (Fig. 3)

Fig. 2

	Fixture Wires Black or Smooth	House Wires Black (Hot)
	Fixture Wires White or Ribbed	House Wires White (Neutral)
	Fixture Wires Bare wire (Ground)	House Wires Green or Bare Copper (Ground)

Your installation is now completed. Return power to the junction box and test the fixture.

Fig.3 Sealing

