




# CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

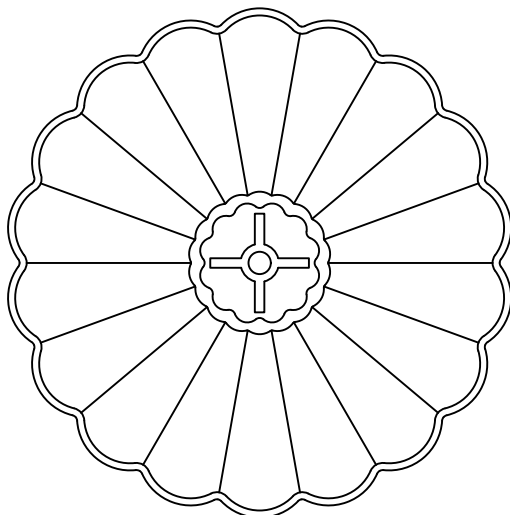

ASSEMBLY INSTRUCTION MODEL #LAY-303-LG

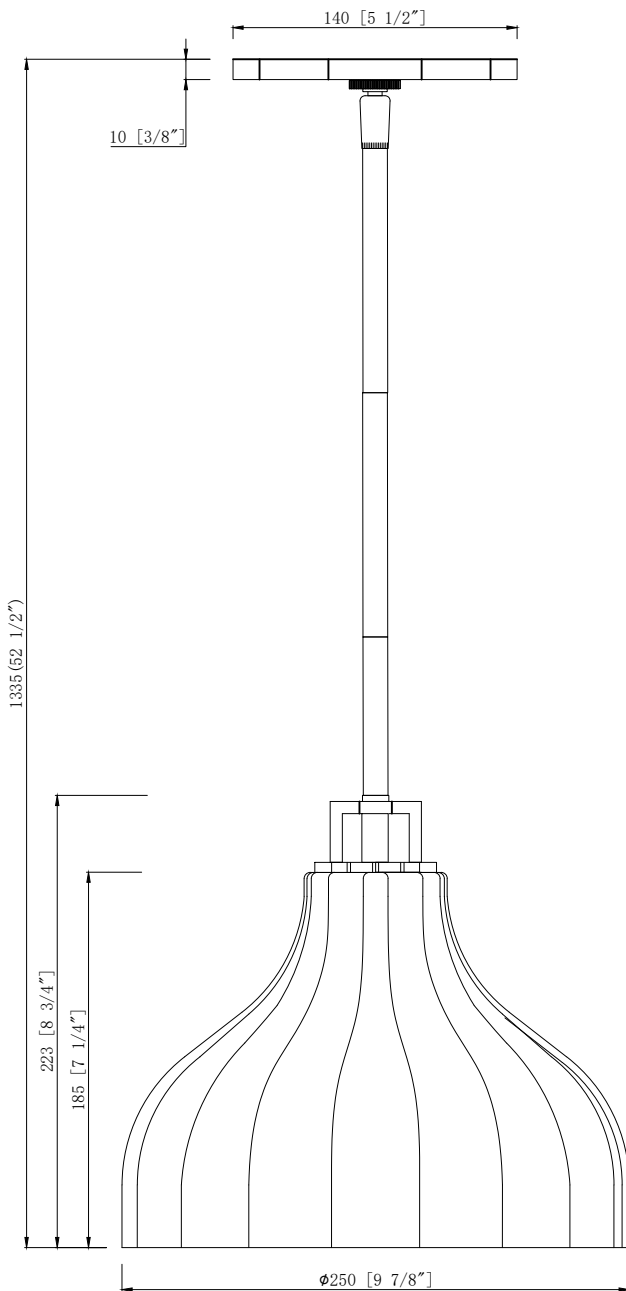

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 1 - Med.Bulb  
40 Watts Recommended 60 Watts Max  
USE LED BULBS FOR EXTENDED USE


THIS FIXTURE IS Damp RATED

## How to Install

1. Decide the preferred hanging height and choose the correct length of rod needed.
2. In this order, feed the wire through the rod, collar loop ring, canopy, and the swivel with a collar loop. Connect the rods together. Connect one end of the rod assembly onto the top of the loop kit and the other end onto the swivel.
3. Install the mounting strap onto the outlet box.
4. Raise the fixture up to the ceiling and do the wire connection. Secure the canopy using the collar ring.
5. Install the bulb(not included)into the socket.
6. Adjust the socket to the center of the glass shade.

## How to replace the glass

1. Loosen the check ring at the top of the loop kit to remove the loop kit, spacer and decorative plate from the top of the glass.
2. Remove the old glass from the light cluster.
3. Place the new glass over the light cluster. Slip the wire through the spacer. Place the loop kit over the spacer and secure with the check ring.

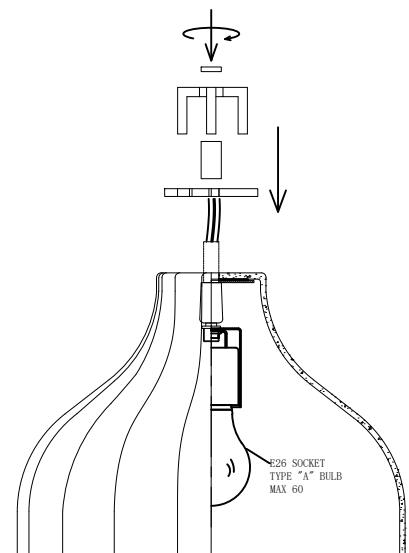

**WARNING:** This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



ASSEMBLY INSTRUCTION MODEL #LAY-303-LG

## Part Number

### Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Canopy  
(XAR303LGCAN5.5IN)
- C. (1)-Collar loop ring
- D. (1)-Swivel with collar loop
- E. (3)-Down rod 0.5"\*12"  
(XAR303LGROD12IN)
- F. (1)-Down rod 0.5"\*6"  
(XAR303LGROD6IN)
- G. (1)-Loop kit
- H. (1)-Decorative plate
- I. (1)-Glass  
(XAR300GLA9.75IN)
- J. (1)-Socket

