

# Power Jumpers

700PARTD9\_

1.6



VISUAL COMFORT & Co.

MODERN COLLECTION

## GENERAL PRODUCT INFORMATION:



This product is suitable for indoor dry locations only.

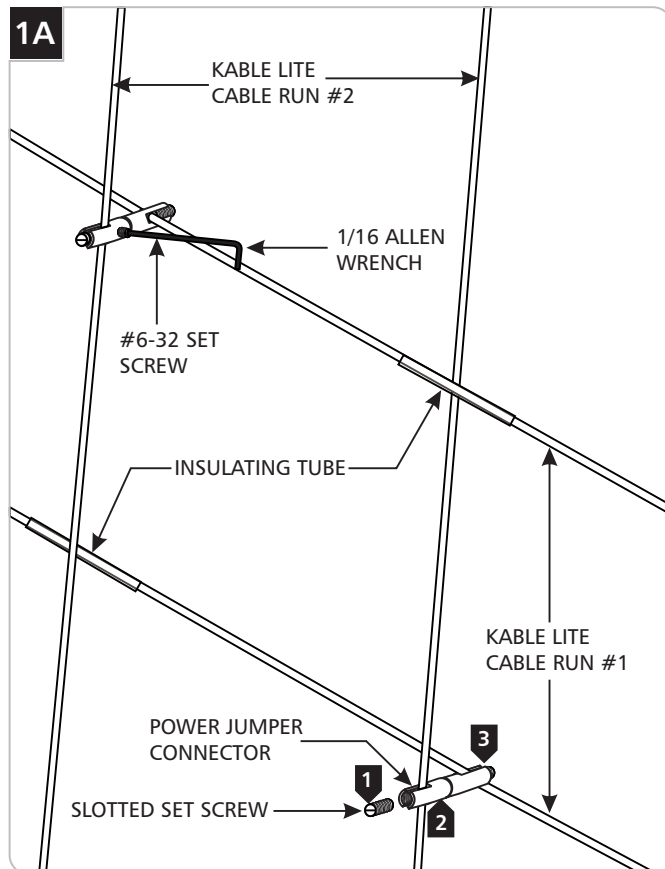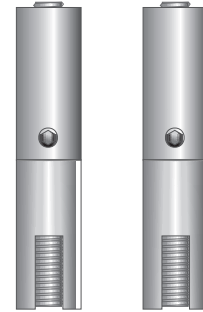

- 1 Remove the slotted set screws on the power jumper connectors with a flat screwdriver.
- 2 Connect one power jumper connector to one Kable Lite cable (where the Kable Lite cables are crossing each other) by feeding the cable into the connector slot. Replace and tighten the slotted set screws.
- 3 Connect the other power jumper connector to the other crossed Kable Lite cable by feeding the cable into the connector slot. Tighten the slotted set screw.
- 4 Repeat steps 2 and 3 for the other piece of the power jumper.

**NOTE:** Use the insulating tube (provided in the package) to insulate the two Kable Lite cable runs from each other where they cross without the power jumper connector.

**NOTE:** If the runs are not perpendicular to each other, loosen the #6-32 set screw on the side of the one power jumper connector with the 1/16 Allen wrench and rotate it to line the slot up with the direction of the Kable Lite cable.

**SAVE THESE INSTRUCTIONS!**

VISUAL COMFORT & CO.

7400 Linder Ave, Skokie, IL 160077

800.969.3347

**[www.visualcomfort.com](http://www.visualcomfort.com)**

©2023 Visual Comfort & Co.. All rights reserved. The Visual Comfort & Co. logo is a registered trademark of Visual Comfort & Co. Visual Comfort & Co. reserves the right to change specifications for product improvements without notification